



Grandstream Networks, Inc.

UCM6xxx series

UCM Configuration Guide for Remote Extensions



Table of Content

INTRODUCTION.....	3
NAT CONFIGURATION ON UCM6XXX.....	4
Prerequisites.....	4
UCM6XXX NAT Settings	4
<i>Configuring DDNS Settings (Optional)</i>	6
<i>Configuring NAT Extension Settings</i>	6
SIP CLIENT CONFIGURATION SAMPLE.....	7
Manual Configuration using GXP2170	7
Auto-Configuration using GS-Wave	9

Table of Figures

Figure 1: UCM6XXX behind NAT Scenario	3
Figure 2: NAT Settings	5
Figure 3: Prompt Information	6
Figure 4: DDNS Settings Configuration	6
Figure 5: Enable NAT on Extension Settings	7
Figure 6: Account Manual Configuration	8
Figure 7: General Settings – STUN Server.....	9
Figure 8: Network Settings – NAT Traversal	9
Figure 9: Auto-configuration – Email to User	10
Figure 10: Extension Information – QR Code	10
Figure 11: GS-Wave - Scan QR Code	11



INTRODUCTION

One of the major benefits using UCM6XXX VoIP IPPBX systems is “Clients’ Mobility” allowing users to be connected from remote locations such as home office, remote office to the VoIP system and use it as if they are locally connected, enjoying all VoIP features (making/receiving calls between extensions, voicemail, call transfer, video calls, conference, using UCM6XXX resources such as SIP and analog trunks remotely...).

Customers using UCM6XXX are no more restricted to be physically connected to the same network as UCM6XXX, opening borders for them to be connected from anywhere in the world across Internet network.

The UCM6XXX should be connected to Internet (using router with NAT) and an easy configuration needs to be made to achieve this as described in following sections in this guide.

Note: UCM6XXX series include UCM620x series, UCM630x series, UCM630xA series and UCM6510.

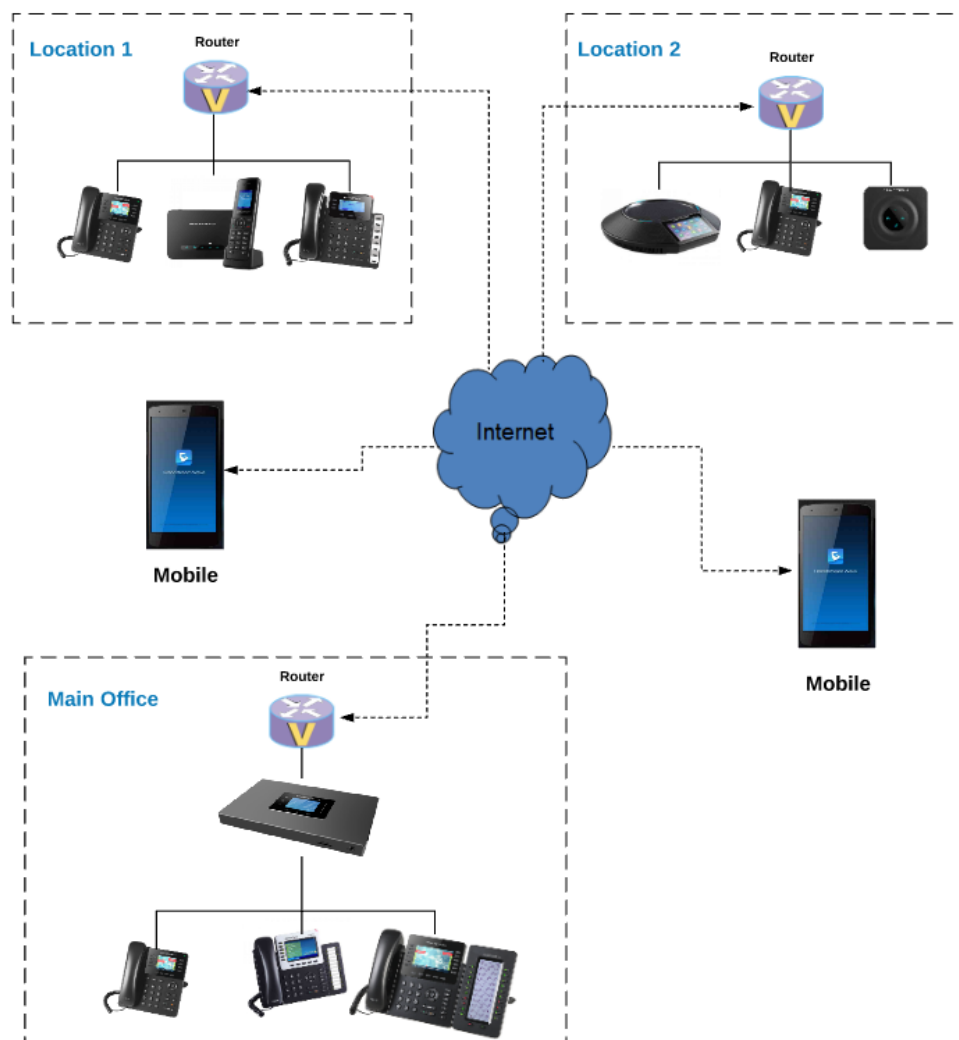


Figure 1: UCM6XXX behind NAT Scenario



NAT CONFIGURATION ON UCM6XXX

Prerequisites

In this guide, we assume the following:

On the UCM6XXX:

- Extensions previously created.
- UCM6XXX is using default SIP port 5060 and RTP range 10000-20000.

Note: If using different ports, make sure to open them on the router.

On the router:

- SIP ALG feature is disabled.
- Ports forwarding to UCM6XXX configured.

General:

- Public Static IP is available. For example: **212.156.69.86**.
- DDNS account (if no public static IP is available). For example: **gctest.ddns.com**.

UCM6XXX NAT Settings

At first, the UCM6XXX needs to be configured with its external IP address or domain name (if using DDNS) to be reachable from external networks/Internet allowing remote users to register their extensions, make/receive calls and use other call features. Following steps provide needed configuration:

1. Access UCM6XXX web GUI→**PBX Settings**→**SIP Settings**→**NAT**.
2. Configure the settings as following:

Note: For UCM630x and UCM630xA series, make sure that “MediaNAT Traversal Service” is disabled under **web GUI**→**Value-added Services**→**UCM RemoteConnect**→**PlanSettings**.



SIP Settings

General Session Timer TCP/TLS **NAT** ToS Misc

If Local Network Address is not configured, External Host will not take effect.

External Host: 41.251.163.24



Use IP address in SDP: ☒

* External UDP Port: 5060

* External TCP Port: 5060

* External TLS Port: 5061

Local Network Address: IP Address / 24 **Add**

LOCAL NETWORK ADDRESS	SUBNET MASK	OPTIONS
192.168.5.0	24	 

Total: 1 10 / page Goto 1

Figure 2: NAT Settings

External Host	Static IP address and port used in outbound SIP messages if the UCM6XXX is behind NAT. If it is a host name, it will only be looked up once. <u>In this guide:</u> 212.156.69.86 using public IP. gstest.ddns.com using DDNS.
Use IP address in SDP	Check to enable this parameter (recommended), the SDP connection will use the IP address resolved from the external host.
External UDP port	Configures the externally mapped UDP port when the UCM6XXX is behind a static NAT or PAT. <u>In this guide:</u> Keep default port 5060 .
External TCP port	Configures the externally mapped TCP port when the UCM6XXX is behind a static NAT or PAT. <u>In this guide:</u> Keep default port 5060 .
External TLS port	Configures the externally mapped TLS port when the UCM6XXX is behind a static NAT or PAT. <u>In this guide:</u> Keep default port 5061 .
Local Network Address	Specifies a list of network addresses that are considered inside of the NAT network. Multiple entries are allowed. If not configured, the external IP address will not be set correctly. <u>In this guide:</u> 192.168.5.0/24 and 192.168.6.0/24 used by local phones.



3. Press **Save** button to store the configuration.
4. Press **OK** button in “Information prompt” window to reboot the UCM6XXX and apply the configuration.

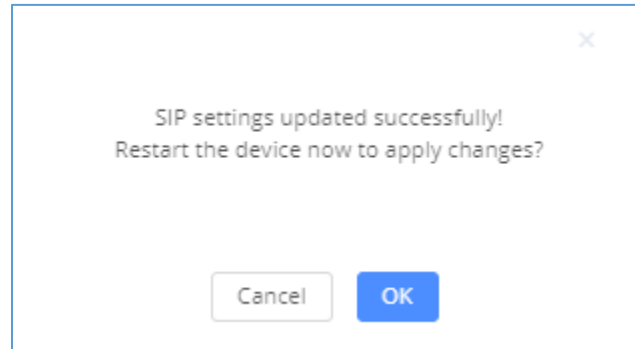



Figure 3: Prompt Information

Configuring DDNS Settings (Optional)

In environments where public static IP is not available, customers may use DDNS (Dynamic DNS) to avoid the need to assign allocated dynamic public IP each time on UCM6XXX (NAT settings) and on client sides when public IP is updated from the provider.

Assuming DDNS account is available, follow below steps to configure:

1. Access UCM6XXX web GUI→**System Settings**→**DDNS Settings**.
2. Select **DDNS Server** from dropdown list. (Available servers are: “dydns.org”, “freedns.afraid.org”, “zoneedit.com”, “no-ip.com” and “oray.net”).
3. Fill **Username**, **Password** and **Hostname** as given from DDNS provider.
4. **Save** and **Apply** the changes.

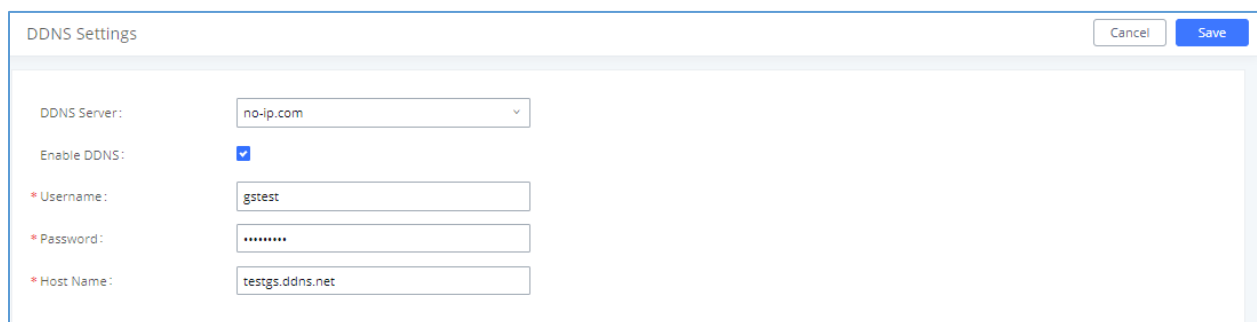
 A web form titled "DDNS Settings" with a "Cancel" button and a "Save" button in the top right. The form contains the following fields:

- DDNS Server:** A dropdown menu with "no-ip.com" selected.
- Enable DDNS:** A checkbox that is checked.
- * Username:** A text input field containing "gctest".
- * Password:** A text input field containing "*****".
- * Host Name:** A text input field containing "testgs.ddns.net".

Figure 4: DDNS Settings Configuration


Configuring NAT Extension Settings


When the UCM6XXX is on a public IP communicating with devices hidden behind NAT (e.g., broadband router), **NAT** parameter needs to be enabled on extensions to use on remote phones (enabled by default).



Note: If there is one-way audio issue, usually it's related to NAT configuration or Firewall's support of SIP and RTP ports.

Follow below instructions to check and enable NAT setting on needed extensions:

1. Access UCM6XXX web GUI→**Extension / Trunk**→**Extensions**.
2. Select extension and press  to edit the settings.
3. Go to **Media** tab and check **NAT** parameter.
4. Press **Save** and **Apply Changes** buttons to store and apply configuration.

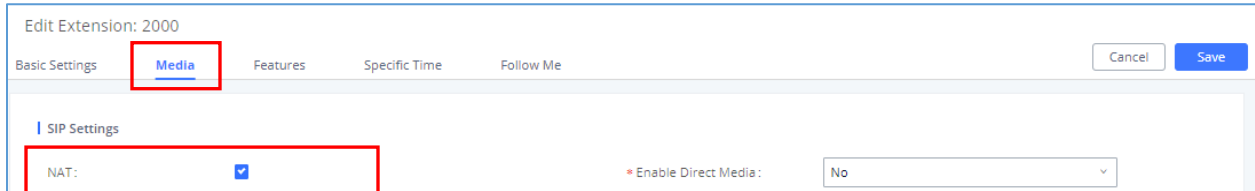

The screenshot shows the 'Edit Extension: 2000' configuration page. The 'Media' tab is active, and the 'NAT' checkbox is checked. The 'Enable Direct Media' dropdown is set to 'No'. The 'Cancel' and 'Save' buttons are visible in the top right corner.

Figure 5: Enable NAT on Extension Settings

SIP CLIENT CONFIGURATION SAMPLE

This chapter provides basic configuration to be done on remote SIP clients.

In this guide, GXP2170 is used as example for manual configuration and GS-Wave (free mobile softphone) for auto-configuration.

Manual Configuration using GXP2170

1. Access phone web GUI→**Accounts**→**General Settings**.
2. Type in extension credentials including **SIP User ID**, **Authenticate ID** and **Authenticate Password**.
3. In **SIP Server** field, type in value of "External Host". Please refer to [UCM6XXX NAT Settings].
4. Click "**Save and Apply**".



Accounts

Account 1

General Settings

Dialplan

Network Settings

SIP Settings

Audio Settings

Call Settings

Intercom Settings

Feature Codes

Account 2

Account 3

Account 4

Account 5

Account 6

Account Swap

General Settings

Account Active

☐ No ☒ Yes

Account Name

2000

SIP Server

212.156.69.86

Secondary SIP Server

Outbound Proxy

Backup Outbound Proxy

BLF Server

SIP User ID

2000

Authenticate ID

2000

Authenticate Password

Name

2000

Voice Mail Access Number

Picture

Select

Save

Save and Apply


Reset

Figure 6: Account Manual Configuration

If the phone is not registered at this stage, users can adjust NAT settings on the phone side as described in below instructions:

1. Access the phone web GUI→**Settings**→**General Settings**.
2. Configure **STUN Server**. For example: "stun.ipvideotalk.com".
3. Click on **Save and Apply**.




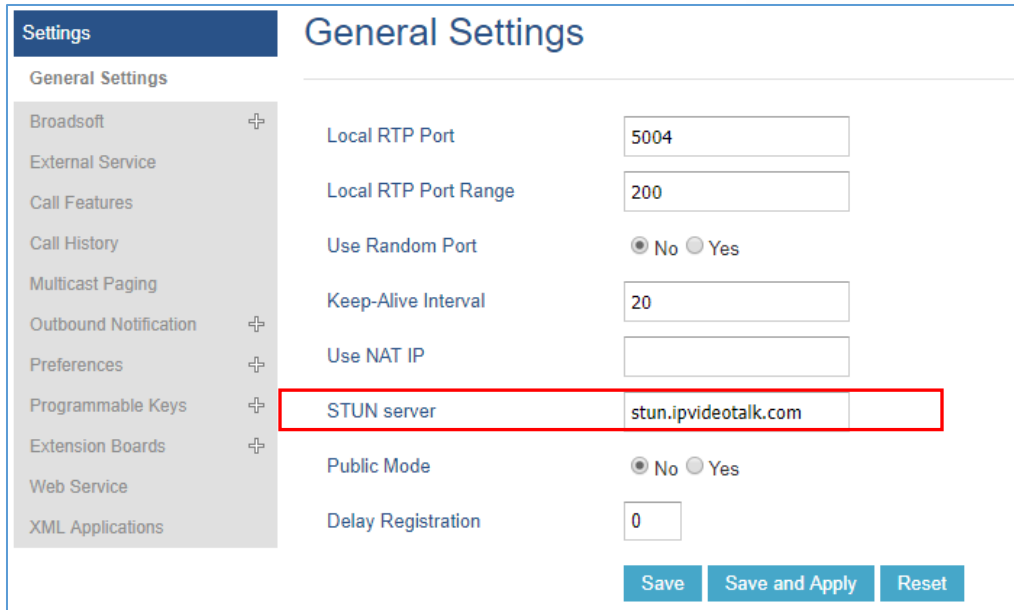

Settings		General Settings	
General Settings			
Broadsoft	+	Local RTP Port	5004
External Service		Local RTP Port Range	200
Call Features		Use Random Port	<input checked="" type="radio"/> No <input type="radio"/> Yes
Call History		Keep-Alive Interval	20
Multicast Paging		Use NAT IP	
Outbound Notification	+	STUN server	stun.ipvideotalk.com
Preferences	+	Public Mode	<input checked="" type="radio"/> No <input type="radio"/> Yes
Programmable Keys	+	Delay Registration	0
Extension Boards	+		
Web Service			
XML Applications			
		Save	Save and Apply
		Reset	

Figure 7: General Settings – STUN Server

- Go to **Account→Account X→Network Settings**.
- Set **NAT Traversal** to **STUN** as shown below.

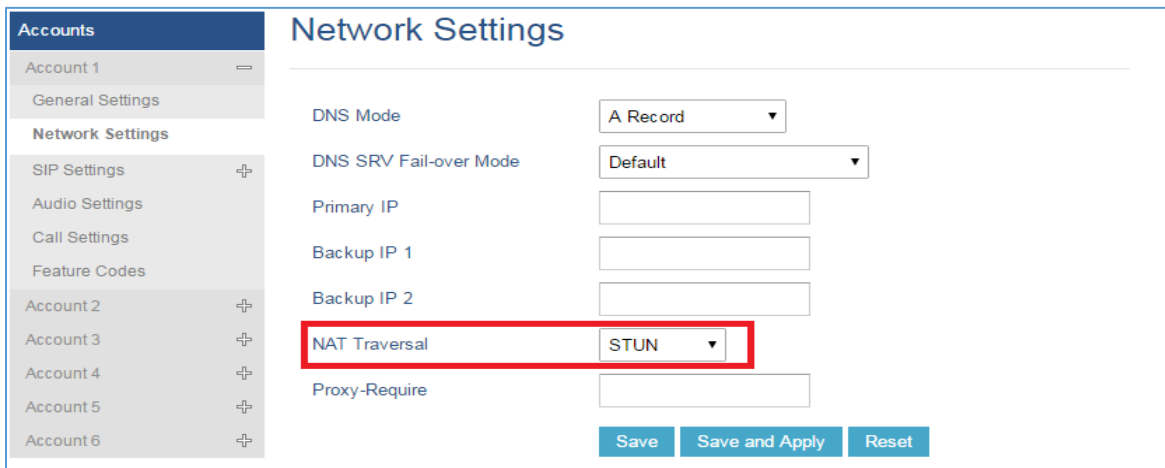

Accounts		Network Settings	
Account 1	≡		
General Settings			
Network Settings			
SIP Settings	+	DNS Mode	A Record
Audio Settings		DNS SRV Fail-over Mode	Default
Call Settings		Primary IP	
Feature Codes		Backup IP 1	
Account 2	+	Backup IP 2	
Account 3	+	NAT Traversal	STUN
Account 4	+	Proxy-Require	
Account 5	+		
Account 6	+		
		Save	Save and Apply
		Reset	

Figure 8: Network Settings – NAT Traversal

Note: STUN protocol allows phones behind NAT router to know the external IP address and type of NAT used on the router. If symmetric NAT is detected, STUN will not work. Users may use UPnP protocol if supported on the router, or set NAT traversal to “NO” or “Keep Alive” and open necessary ports for SIP and RTP on the router. It’s highly recommended to disable SIP ALG on the router.

Auto-Configuration using GS-Wave

UCM6XXX has the ability to send extension credentials via email to GS-Wave mobile SIP client to be auto-configured. The following steps describe needed instructions:



Notes:

- Email settings need to be re-configured on the UCM6XXX.
 - Extension needs to have a valid email address configured.
1. Access UCM6XXX web GUI→**Extension / Trunk**→**Extensions**.
 2. Select the Extension and click on **"More"** then **"E-mail Notification"** button.

Extensions								
<div> + Add Edit Delete Reset Edit All SIP More </div> <div> <input type="text" value="Extension Number or Name"/> </div>								
	STATUS	PRESENCE STATUS	EXTENSION	NAME	TYPE	IP AND PORT	EMAIL S...	OPTIONS
<input checked="" type="checkbox"/>	Unavailable	Available	2000		SIP(WebRTC)	--		
<input type="checkbox"/>	Idle	Available	5555		SIP(WebRTC)	192.168.5.157:5060		

Figure 9: Auto-configuration – Email to User

3. Press **OK** in "Prompt information" pop-up window.

Once the email is sent the **Email Status** (in Figure 9) will change to "Sent". And the User will receive an email containing information about the account as shown below.



Figure 10: Extension Information – QR Code

After receiving the email, follow below steps to auto-configure GS-Wave account on the mobile phone.

(GSWave is available in Google PlayStore):

1. Open GS-Wave softphone application installed on Android™ or iOS™ mobile phones.
2. Access to **Settings→Add New Account→UCM Account (Scan QR Code)**.

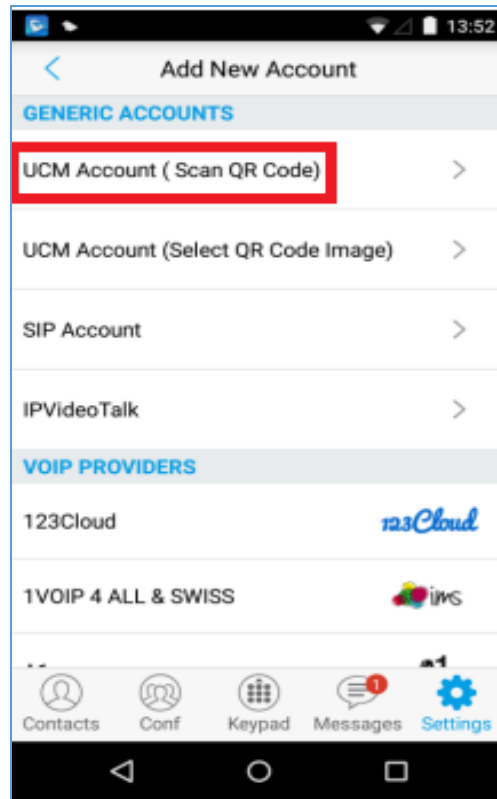


Figure 11: GS-Wave - Scan QR Code

3. Using integrated QR Code reader tool, scan **Public IP Address** QR Code to get extension credentials. Please refer to [Figure 10].

GS-Wave will create the account using provided information from QR Code and register on the UCM6XXX.

