

# Grandstream Networks, Inc.

---

GWN Management

GWN API Guide



# Overview

GWN API allows users or enterprises to perform a number of actions using HTTPS requests to invoke various features for third-party web and app development, it makes it easier to automate the process and issue a large number of commands.

To use GWN API, administrators need first to “[Enable API Developer Mode](#)” on GWN.Cloud or GWN Manager. Then, refer to the “[API Developer Guide](#)” describing the supported APIs and their syntax.

## Enable API Developer Mode


### Note:

API Developer mode is supported by **GWN Cloud** and **GWN Manager**.

#### ◦ GWN Cloud

To enable API Developer mode on GWN Cloud, please visit <https://www.gwn.cloud>.

Navigate to API Developer page, then click on [Enable API Developer Mode](#) button, then **APP ID** and **Secret Key** will be shown.

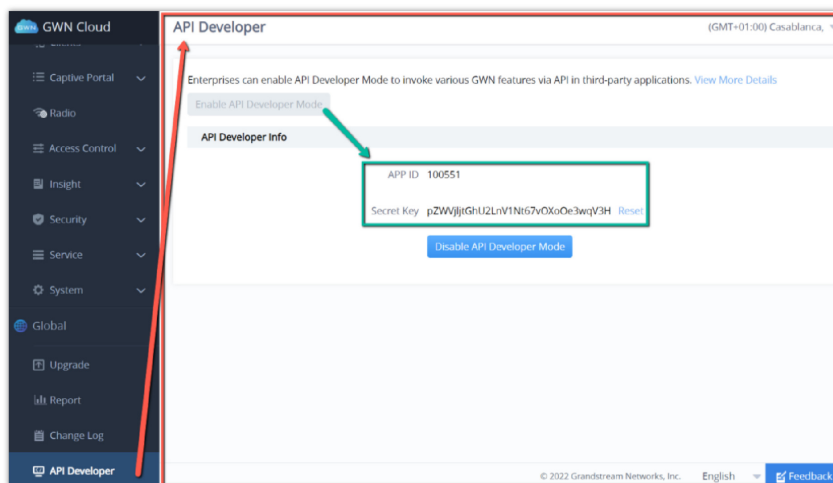

GWN Cloud – API Developer


#### ◦ GWN Manager

Please refer to these guides to get GWN Manager started:

[GWN Manager – Quick Installation Guide](#)

[GWN Manager – Deploying a Virtual Machine from an OVA file](#)

Navigate to API Developer page, then click on [Enable API Developer Mode](#) button to get the **APP ID** and **Secret Key**.

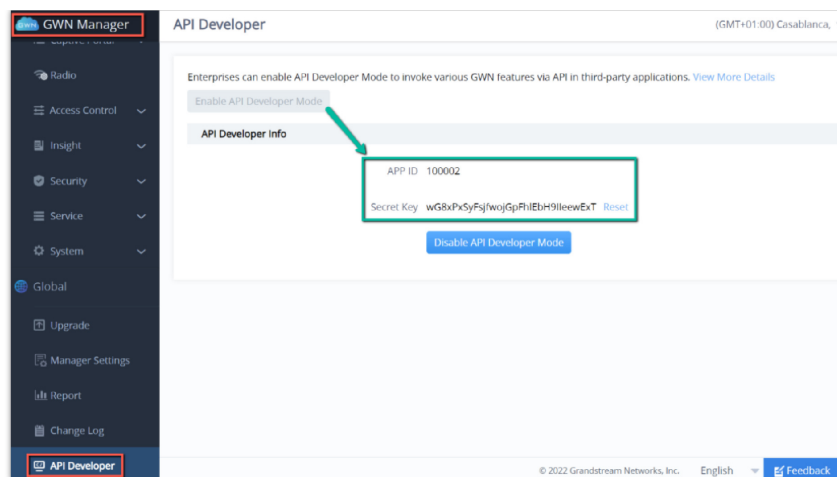

*GWN Manager – API Developer*

To disable API Developer Mode please click on [Disable API Developer Mode](#) button.

To reset the Secret Key please click on [Reset](#).

## API Developer Guide

Please refer to this guide for more details and how to use the API [GWN API Developer Guide](#).