

Grandstream Networks, Inc.

CRM Custom Template Configuration Guide



CRM Custom Template Configuration Guide

1. Introduction

Custom CRM is a flexible CRM integration feature for the UCM6300 Series and UCM6300 Audio Series. It allows the UCM to communicate with CRM systems that provide HTTP APIs.

Unlike dedicated CRM integrations such as Zoho or Salesforce, Custom CRM allows the administrator to define the HTTP interaction details required by the target CRM. These details can include request URLs, HTTP methods, request bodies, HTTP headers, authentication methods, response-field extraction, and field mapping.

After Custom CRM is configured, the UCM can communicate with the CRM when an external call is received or placed. Depending on the configuration, the UCM can query the CRM for contact information, display contact information in a call pop-up, create a new contact for an unknown number, and synchronize call information to the CRM after the call ends.

1.1 Why Use Custom CRM?

 
Custom CRM is particularly useful when the CRM system does not have a dedicated built-in integration on the UCM but provides an HTTP API.

The feature allows an administrator to adapt the UCM to the CRM's API by defining:

- The required authentication mechanism.
- The API endpoints used by the CRM.
- The HTTP GET or POST method.
- Required HTTP headers.
- Request bodies.
- CRM response fields.
- JSON paths used to extract returned values.
- The mapping between CRM contact fields and UCM contact fields.
- The process used to create unknown contacts.
- The information synchronized as call records.

This makes Custom CRM suitable for integrations where the CRM API or authentication workflow differs from the fixed behavior of a dedicated integration.

Supports deep integration solutions with CRM, seamlessly integrating enterprise communication flow and business flow through core functions such as incoming call pop-ups, one-click outbound calling via CRM web interface, CRM contact lookup, and automatic contact creation for unknown numbers.



One Click Call

Install the Wave add-on or interface directly through the PBX. Linked users can use click-to-dial on the CRM interface to quickly call contacts.



Contact Lookups

Automatically display the names of contacts saved on the CRM when receiving calls, personalizing customer call experience and improving internal communication efficiency.



Call Log Sync

After the extension ends the call with the CRM contact, the call history will be automatically synced to the CRM, ensuring customer communication history is complete and traceable for easy management and analysis.



Incoming Call Pop-up Screen

Bring up CRM contact information on your browser straight from the incoming call pop-up.



Add Unknown Number

Automatically create contacts from calls with new numbers not found in the CRM database. This feature converts calls into sales leads, ensures that customer information is not missed, and builds a complete customer data pool.

Why Use Custom CRM

2. How Custom CRM Works

Custom CRM communicates with the CRM server through HTTP GET and POST requests.

The configuration supports dynamic **Tags** enclosed in double curly braces.

For example:

```
{{Phone}}
```

When a request is sent, the UCM replaces the tag with the corresponding runtime value.

A contact lookup URL can therefore be configured as:

```
https://api.example.com/contacts/search?phone={{Phone}}
```

If the external caller's number is:

```
12345678
```

the UCM replaces {{Phone}} and sends:

```
https://api.example.com/contacts/search?phone=12345678
```


Custom CRM also supports extended tag replacement functions such as:

```
{{MD5(str)}}
```

For example:

```
{{MD5({{Password}})}}
```

causes the UCM to first replace {{Password}} with its actual value and then calculate the MD5 value of the resulting string.

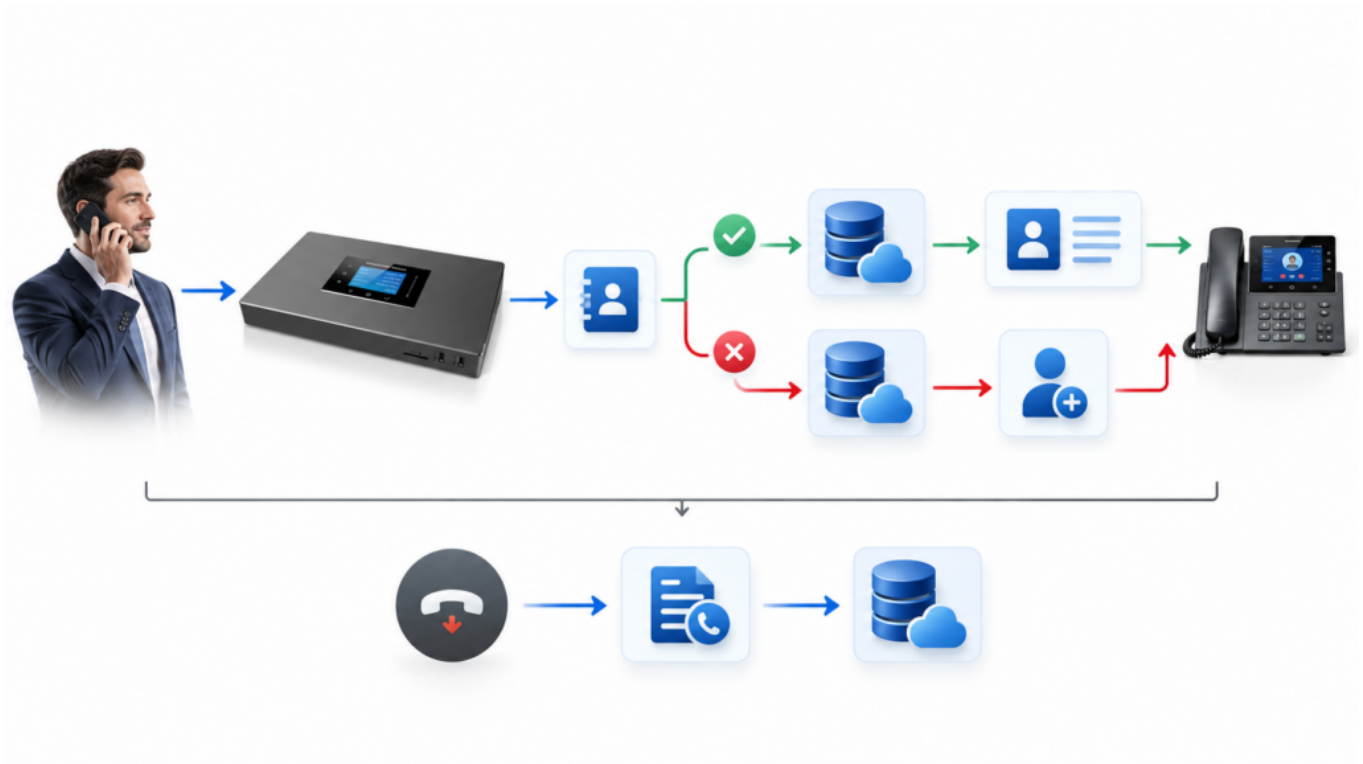

3. Custom CRM Call Flow

Custom CRM operations are performed at different stages of a call.

When the Call Starts

The UCM first checks its local contact information.

If the contact is not found locally, the UCM can query the CRM using the external number.

If the CRM returns a contact, the contact information can be displayed through the configured call pop-up.

If the contact cannot be found and **Add Unknown Number** is enabled, the UCM can send a request to the CRM to create a new contact.

When the Call Ends

If **Call Log Sync** is enabled, the UCM sends the call record to the CRM after the call ends.

If contact lookup or unknown-number creation has already succeeded when the call starts, the corresponding operation is not repeated when the call ends.

4. Prerequisites

Before creating a Custom CRM template, prepare the information required by the CRM API.

- Obtain the target CRM's REST/API documentation.
- Confirm the CRM provides HTTP API access.
- Confirm that the UCM can reach the CRM server through the required network address.
- Prepare the CRM authentication information.
- Identify the relevant API endpoints and their request/response formats.
- Identify the JSON fields that will be required for authentication, contact lookup, and call-record


synchronization.

5. Create a Custom CRM Template

Custom CRM configuration starts by creating a template under the UCM's CRM Template Management section.

Configuration Steps

- Log in to the UCM Web UI as an administrator.
- Navigate to **Integrations -> CRM -> Template Management**, or click the icon.
- Select the **Custom Template** tab.
- Click **Add**.

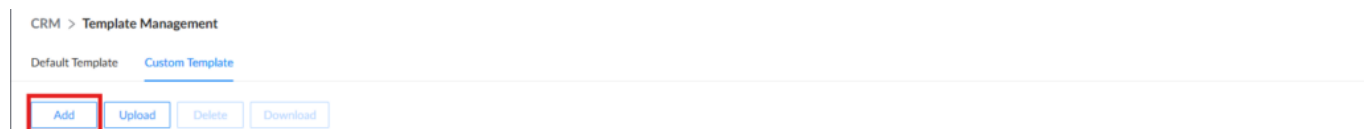

6. Basic Settings

The **Basic Settings** section contains the general information associated with the Custom CRM template.

Configuration Steps

- Enter a clear template name.
- Enter a remark describing the purpose of the integration.

Example:

Template Name

CRM_Integration

Remark

This is a testing CRM

CRM > Template Management > Edit Custom Template: CRM_Integration

A screenshot of the 'Edit Custom Template' form for 'CRM_Integration'. At the top, there is a blue informational banner with a question mark icon and text: 'When configuring, please first obtain the REST API document of the target CRM system as a reference and obtain the necessary verification information according to the authentication requirements of the CRM system.' Below this is a section titled 'Basic Settings' with a dropdown arrow. It contains three fields: 1. 'Logo' with a gear icon and a text box containing a 'CRM' logo. 2. 'CRM Name' with a red asterisk icon, a text box containing 'CRM_Integration', and a note '2 - 64 digits, supports numbers, letters, special characters _-, and Chinese characters'. 3. 'Remark' with a question mark icon, a text box containing 'This is a testing CRM', and a note '0 - 1024 characters'.


7. Request Configuration

Expand:

Request Configuration

This section contains the main HTTP and authentication configuration for the Custom CRM template.

- Authentication.
- Custom Parameters.
- Customized HTTP Request Headers.
- Follow-up Requests.

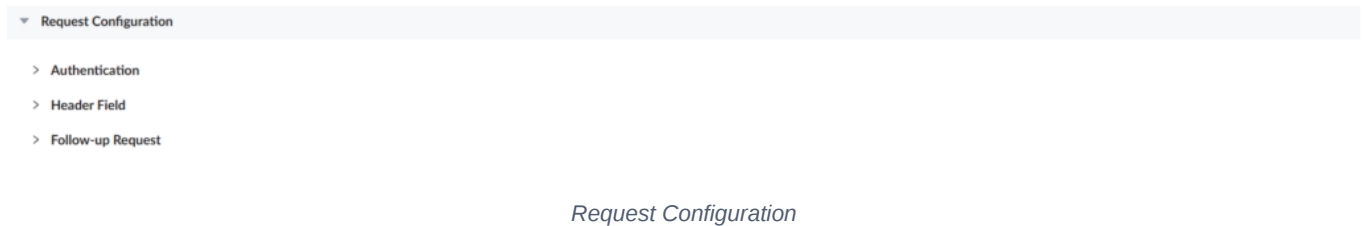


8. Configure Authentication

Custom CRM supports four authentication methods:

- **No Authentication**
- **Basic**
- **OAuth2**
- **Bearer Token**

Select the method required by the target CRM API.

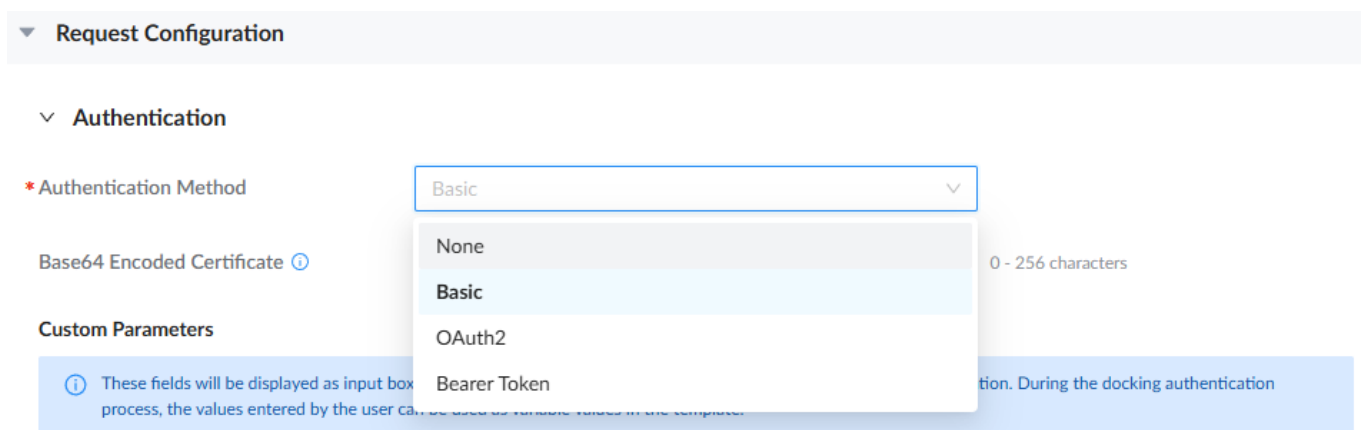

Configure Authentication

9. Configure No Authentication

No Authentication can be selected when the CRM does not require one of the dedicated authentication mechanisms, or when authentication is implemented through another configured request.

Configuration Steps

- Select **No Authentication** under **Authentication Method**.
- Configure the CRM request URLs required by the integration.
- Configure any required authentication headers under **Customized HTTP Request Header**.
- Use **Follow-up Request** when the CRM requires an additional authentication or initialization request.
- Save the configuration.

When this authentication mode is selected, the UCM does not automatically add authentication information. Any required authentication information, such as an API key, must therefore be supplied by the configured request headers or follow-up requests.

Request Configuration

Authentication

Authentication Method

None

Custom Parameters

These fields will be displayed as input boxes on the docking page, requiring the user to provide the necessary information. During the docking authentication process, the values entered by the user can be used as variable values in the template.

Configuration Item Name	Form Control	Drop-down Option Value	Variable Name	Configuration Page	Operations
-------------------------	--------------	------------------------	---------------	--------------------	------------

No record to view

+ Add

10. Configure Basic Authentication

Basic Authentication uses a Base64-encoded credential based on:

```
username:password
```

For example:

```
demo:demo
```

is encoded as:

```
dGVzdDp0ZXN0
```

The resulting Base64 value is entered into the **Base64 Encoded Certificate** field.

Configuration Steps

- Select **Basic** under **Authentication Method**.
- Prepare the CRM credentials in the username:password format.
- Encode the complete credential using Base64.
- Enter the resulting Base64 value into **Base64 Encoded Certificate**.
- Save the configuration.
- Verify that the CRM request uses the generated Basic Authentication header.

After authentication, the UCM automatically uses:

```
Authorization: Basic {{BasicInfo}}
```

where {{BasicInfo}} represents the configured Base64 credential. The Base64 credential also supports tag replacement.

Request Configuration

Authentication

Authentication Method

Base64 Encoded Certificate 0 - 256 characters

Custom Parameters

These fields will be displayed as input boxes on the docking page, requiring the user to provide the necessary information. During the docking authentication process, the values entered by the user can be used as variable values in the template.

Configuration Item Name	Form Control	Drop-down Option Value	Variable Name	Configuration Page	Operations
Username	Text input box		username	Admin Portal	
Password	Password input...		password	Admin Portal	
+ Add					

11. Configure OAuth2 Authentication

OAuth2 uses the **Device Authorization Grant** process.

This process allows the user to complete the CRM authorization from another device, such as a phone or computer browser.

The documented sequence is:

1. Obtain the authorization URL and device code.
2. Complete user authorization.
3. Obtain the refresh token.
4. Obtain the access token.
5. Use the access token for subsequent CRM requests.
6. Periodically refresh the access token.

Configuration Steps

- Select **OAuth2** under **Authentication Method**.
- Enter the **Authorization Endpoint** supplied by the CRM.
- Enter the **Authorization URL Path** used to extract the authorization URL from the response.
- Configure the **Token Endpoint**.
- Configure the **Token Path** used to extract the refresh token.
- Configure the required **Request Content Type**.
- Enter the required **Scope**.
- Configure any required **Additional Query String**.
- Select the **Token Refresh Request Method**.
- Configure the **Token Refresh Endpoint**.
- Configure the **Token Refresh Path**.
- Configure the **Token Refresh Content Type**.
- Configure the **Token Refresh Interval** in minutes.
- Configure the **Token Refresh Request Body** when POST is selected.

- Save the template.
- Have the extension user initiate the CRM binding from the User Portal.

OAuth2 Configuration Fields

Field	Description
Authorization Endpoint	CRM-provided device authorization URL.
Authorization URL Path	RFC 6901 JSON path used to extract the authorization URL. If empty, /verification_uri_complete is used by default.
Token Endpoint	URL used to obtain the refresh token.
Token Path	RFC 6901 path used to extract the refresh token.
Request Content Type	Content-Type sent to the token endpoint.
Scope	OAuth2 scope defining the required access permissions.
Additional Query String	Additional query parameters appended to the authorization endpoint URL.
Token Refresh Request Method	GET or POST.
Token Refresh Endpoint	URL used to obtain the access token.
Token Refresh Path	RFC 6901 path used to extract the access token. If empty, /access_token is used by default.
Token Refresh Content Type	Content-Type used by the token refresh request.
Token Refresh Interval	Automatic token-refresh interval in minutes.
Token Refresh Request Body	Request body used when the refresh method is POST.

The refresh token is stored as:

```
{{RefreshToken}}
```

The access token is stored as:

```
{{AccessToken}}
```

Subsequent requests automatically use:

```
Authorization: Bearer {{AccessToken}}
```

The source documentation uses default_Zoho as an OAuth2 template example.

Request Configuration

Authentication

Authentication Method
OAuth2

Custom Parameters

These fields will be displayed as input boxes on the docking page, requiring the user to provide the necessary information. During the docking authentication process, the values entered by the user can be used as variable values in the template.

Configuration Item Name	Form Control	Drop-down Option Value	Variable Name	Configuration Page
Client ID	Password input box		user	Admin Portal
Client Secret	Password input box			Admin Portal
Add				

Authorization Endpoint

Authorization Address Path

Token Endpoint

Token Path

Request Content Type
application/json

Access Scope (optional)

Configure OAuth2 Authentication

12. Configure Bearer Token Authentication

Bearer Token Authentication is used when the CRM provides an API for directly obtaining an access token.

Configuration Steps

- Select **Bearer Token** under **Authentication Method**.
- Select the request method used to obtain the initial token.
- Enter the **Token Endpoint**.
- Configure the request content type required by the CRM.
- Enter the request body when POST is selected.
- Configure the JSON path used to extract the token returned by the CRM.
- Configure the **Token Refresh Request Method**.
- Enter the **Token Refresh Endpoint**.
- Configure the JSON path used to extract the refreshed token.
- Configure the **Token Refresh Content Type**.
- Enter the token-refresh request body when POST is selected.
- Configure the **Token Refresh Interval**.
- Save the configuration.

After successful authentication, the UCM uses:

```
Authorization: Bearer {{AccessToken}}
```

Token acquisition and token refresh use separate configuration fields. If refresh-specific settings are not configured, the system uses the token-acquisition configuration for refresh operations.

Authentication

Authentication Method
Bearer Token

Custom Parameters

These fields will be displayed as input boxes on the docking page, requiring the user to provide the necessary information. During the docking authentication process, the values entered by the user can be used as variable values in the template.

Configuration Item Name	Form Control	Drop-down Option Value	Variable Name	Configuration Page	Operations
Client ID	Password input box			Admin Portal	
Client Secret	Password input box			Admin Portal	

Add

Request Method
GET

Token Endpoint

Token Path

Request Content Type
application/json

Request Body

Token Refresh Request Method

Token Refresh Endpoint

Token Refresh Path

Cancel Save

13. Configure Custom Parameters

Custom Parameters allow administrator-defined or user-defined values to be reused by the Custom CRM template.

The feature supports up to five custom parameters.

Configuration Steps

- Expand **Custom Parameters**.
- Click **Add** to create a parameter.
- Enter a descriptive name under **Configuration Item Name**.
- Select the required **Form Control**.
- Enter **Drop-down Option Value** only when a dropdown control is selected.
- Enter a unique **Variable Name**.
- Select the appropriate **Configuration Page**.
- Repeat the process for additional parameters, up to the supported limit of five.
- Save the configuration.

Custom Parameter Fields

Field	Description
Configuration Item Name	Name shown to the person entering the value.

Form Control	Determines the input type. Password input hides the entered value by default. Dropdown controls use predefined options.
Drop-down Option Value	Comma-separated values available to the dropdown.
Variable Name	Tag name used to reference the entered value in later requests.
Configuration Page	Determines whether the value is configured on the administrator page or by the extension user through the User Portal.

Example

For a username parameter:

Configuration Item Name

Username

Form Control

Text input box

Variable Name

username

The value can then be referenced as:

{{username}}

For a password parameter:

Configuration Item Name

Password

Form Control

Password input

Variable Name

password

The value can then be referenced as:

{{password}}

Do not use a custom variable name that matches a built-in UCM system tag, because the custom value can overwrite the built-in tag.

Request Configuration

Authentication

Authentication Method
Basic

Base64 Encoded Certificate ⓘ
dGVzdDp0ZXN0
0 - 256 characters

Custom Parameters

ⓘ These fields will be displayed as input boxes on the docking page, requiring the user to provide the necessary information. During the docking authentication process, the values entered by the user can be used as variable values in the template.

Configuration Item Name ⓘ	Form Control	Drop-down Option Value ⓘ	Variable Name ⓘ	Configuration Page	Operations
Username	Text input box			Admin Portal	
Password	Password input box			Admin Portal	
+ Add					

14. Configure Customized HTTP Request Headers

The Custom CRM template allows additional HTTP request headers to be configured.

Configuration Steps

- Expand **Header Field**.
- Under **Customized HTTP Request Header**, click **Add** when an additional header is required.
- Enter the header name under **Name**.
- Enter the corresponding value under **Value**.
- Enter a description when useful for identifying the purpose of the header.
- Repeat for each required HTTP header.
- Save the configuration.

An example can be:

```
Content-Type: application/json
Accept: application/json
```

and:

```
X-API-Key: your_api_key
```

Header values support tag replacement.

Example Test Headers

Name	Value	Description
Content-Type	application/json	JSON request content
Accept	application/json	JSON response

▼ Header Field

Customized HTTP Request Header ⓘ

Name	Value ⓘ	Description	Operations
Content-Type	application/json	0 - 512 characters	
Accept	application/json	0 - 512 characters	
1 - 128 characters	1 - 256 characters	0 - 512 characters	
1 - 128 characters	1 - 256 characters	0 - 512 characters	
1 - 128 characters	1 - 256 characters	0 - 512 characters	
Add			

14.1 Authorization Header

The Authorization header is treated specially.

It is not simply inserted as an ordinary custom header.

For OAuth2 or Bearer Token authentication, the normal format is:

```
Authorization: Bearer {{AccessToken}}
```

A custom Authorization header can be used to change the authentication scheme.

For example, setting the value to:

```
Token
```

results in:

```
Authorization: Token {{AccessToken}}
```

The same concept can be used to replace the Basic authentication scheme.

15. Configure Follow-up Requests

Follow-up Requests are additional HTTP requests executed after token acquisition or token refresh.

They can be used to:

- Obtain additional information from the CRM.
- Obtain additional parameters.
- Perform authentication when No Authentication is selected.
- Perform required initialization operations.

Configuration Steps

- Expand **Follow-up Request**.
- Click **Add** to create a request.
- Select the appropriate **Trigger Event**.
- Select **GET** or **POST** under **Request Method**.
- Enter the request URL under **URL**.
- Configure the request headers in JSON format.
- Enter the **Request Body** when POST is selected.
- Enter the required **Response Field Path** using RFC 6901 JSON Pointer syntax.
- Enter the **Target Variable Name** that will store the extracted response value.

- Add additional follow-up requests when required.
- Save the configuration.

Follow-up Request Fields

Field	Description
Trigger Event	Determines whether the request runs after token acquisition or token refresh.
Request Method	GET or POST.
URL	Destination URL for the request.
Header Field	Headers entered in JSON format.
Request Body	Body sent when POST is selected.
Response Field Path	RFC 6901 JSON path used to extract values from the response.
Target Variable Name	Variable name under which the extracted value is stored.

For example, if the CRM returns:

```
{
  "data": {
    "token": "abc123"
  }
}
```

use:

```
/data/token
```

as the Response Field Path.

If the Target Variable Name is:

```
token
```

the extracted value becomes available as:

```
{{token}}
```

Variables created by a follow-up request take effect immediately and can be used by subsequent follow-up requests.

▼ Follow-up Request

Request 1  ▼

* Trigger Event	Get Token	▼
* Request Method	GET	▼
* URL 	https://httpbin.org/get?username={{username}}&password={{password}}	1 - 512 characters
Header Field	<input data-bbox="485 439 1088 465" type="text" value='{"Content-Type":"application/json","Accept":"application/json"}'/>	0 - 128 characters
Request Body		0 - 512 characters
Response Field Path 	/args/username	0 - 128 characters
Target Variable Name	returnedUsername	0 - 128 characters

 Add

Configure Follow up Requests

16. Configure Contact Lookups

Custom CRM can query the CRM when a number is not available in the UCM's local contact information. Up to **three contact types** can be configured.

Configuration Steps

- Expand **Contact Lookups**.
- Click **Add** when a contact type is required.
- Enter the CRM module name under **Contact Type**, such as Contacts or Leads.
- Select **GET** or **POST** under **Request Method**.
- Enter the CRM contact-search API under **Contact Matching Query URL**.
- Use `{{Phone}}` to insert the external number.
- Use `{{ContactType}}` where the CRM API requires the selected contact type.
- When POST is selected, enter the required JSON content under **Request Body**.
- Configure the Contact Field Mapping after the lookup request has been defined.
- Repeat for additional contact types if needed, up to the supported limit of three.

Example Contact Matching URL

```
https://api.example.com/contacts/search?phone={{Phone}}&type={{ContactType}}
```

If the external number is:

```
12345678
```

and the contact type is:

```
Contacts
```

the resulting request becomes:

https://api.example.com/contacts/search?phone=12345678&type=Contacts

▼ Contact Lookups

Contact Type

• Contact Type: 2 - 64 digits, supports numbers, letters, special characters, and Chinese characters

• Request Method:

• Contact Matching Query URL: 1 - 256 characters

Request Body: 0 - 1024 characters

[+ Add](#)

• Contact Pop-up Address:

• URL format: 1 - 256 characters

Configure Contact Lookups

17. Configure Contact Pop-up Address

The UCM supports two methods for obtaining the CRM contact page URL.

17.1 Specify URL Format

Configuration Steps

- Under **Contact Pop-up Address**, select **Specify URL format**.
- Enter the CRM contact-page URL in **URL format**.
- Use `{{Phone}}`, `{{ContactType}}`, and/or `{{ContactID}}` as required.
- Save the configuration.

Example:

https://crm.example.com/contact?type={{ContactType}}&id={{ContactID}}

17.2 Obtain the URL from Contact Information

Configuration Steps

- Configure the contact lookup response to contain the CRM contact page URL.
- Enter one or more JSON paths that identify the URL in the CRM response.
- Separate multiple JSON paths with commas when more than one possible field can contain the URL.
- The UCM will try the configured paths in order and use the first successfully obtained URL.

The source documentation also specifies that when using grandstream_affinityCRM contact information can be displayed in the incoming-call screen pop with a link to the CRM contact page.

• Contact Pop-up Address:

• URL format: 1 - 256 characters

18. Configure Contact Field Mapping

Contact Field Mapping maps information returned by the CRM to UCM PBX contact fields.

The UI provides fields such as:

- Contact ID.
- First Name.
- Last Name.
- Department.
- Job Title.
- Email Address.
- Mobile Number.
- Home Number.
- Fax.
- Remark.
- Custom Value.

The CRM field entered for each PBX field must correspond to the relevant value returned by the CRM.

Configuration Steps

- Expand **Contact Field Mapping**.
- Enable **Contact ID**.
- Enter the JSON path corresponding to the CRM contact ID.
- Enable at least one phone-number field.
- Enable **Mobile Number** or **Home Number**, depending on the CRM data.
- Enter the JSON path corresponding to the selected phone-number field.
- Enable additional PBX fields when required.
- Enter the corresponding JSON paths for the additional fields.
- Verify that the mappings match the structure of the CRM response.
- Save the configuration.

Contact ID

Contact ID is mandatory.

The UCM uses the extracted Contact ID to determine whether the contact lookup succeeded.

The resulting ID becomes available as:

```
{{ContactID}}
```

Phone Mapping

At least one phone-number field must be enabled and mapped.

For example:

Mobile Number

```
/data/mobile
```

The exact JSON path must correspond to the actual response returned by the CRM.

Contact Field Mapping ⓘ

Please enable and map at least one phone number.

PBX Field	CRM Field	
☒ Contact ID	id	1 - 64 characters
☒ FirstName	first_name	1 - 64 characters
☐ Last Name		1 - 64 characters
☐ Department		1 - 64 characters
☐ Job Title		1 - 64 characters
☐ Email Address		1 - 64 characters
☒ Mobile Number	mobile	1 - 64 characters
☐ Home Number		1 - 64 characters
☐ Fax		1 - 64 characters
☐ Remark		1 - 64 characters
☐ Custom Value		1 - 64 characters

Contact Field Mapping

19. Adding Unknown Number

The **Add Unknown Number** function allows the UCM to create a new contact in the CRM when the external number is not found in either the UCM or the CRM.

Configuration Steps

- Enable **Add Unknown Number**.
- Select the required **Contact Type**.
- Use a contact type that has been configured under **Contact Lookups**.
- Enter the CRM API endpoint under **Create Contact URL (POST)**.
- Build the CRM request under **Create Contact Request Body**.
- Use the supported unknown-number tags where required.
- Enter the JSON path that identifies the returned CRM Contact ID under **ID Path**.
- Save the configuration.
- Test the feature using a number that does not already exist in the UCM or CRM.

The create-contact URL, request body, and returned Contact ID are the main elements used by this function.

19.1 Supported Tags

The following tags can be used in the Create Contact Request Body:

Tag	Description
{{Name}}	External number name. If a name is available, it is used; otherwise the external number is used.
{{Number}}	External number.
{{InternalNumber}}	Local extension participating in the call.
{{Direction}}	inbound or outbound.
{{Disposition}}	Call result.

Add Unknown Number

Contacts

Contact Type

Contacts

Create Contact URL (POST)

https://httpbin.org/post

1 - 256 characters

Create Contact Request Body

{ "id": "test-contact-001", }

1 - 512 characters

ID Path

/json/id

1 - 128 characters

Add

Supported Tags

20. Configure Call Log Sync

Call Log Sync synchronizes the call record to the CRM after the call has ended.

Configuration Steps

- Enable **Call Log Sync**.
- Enter the CRM call-record endpoint under **Create Call Log URL (POST)**.
- Configure the call-record request under **Create Call Record Request Data**.
- Enable **Meeting Subject** when a subject should be sent.
- Configure the subject template.
- Enable **Description** when a description should be sent.
- Configure the description template.
- Use the supported call-related tags in the request body, subject, or description.
- Save the configuration.
- Complete a test call and verify that the resulting call record is sent after the call ends.

Call-log synchronization is a post-call operation.

20.1 Call Record Tags

Tag	Description
{{Subject}}	Call subject.
{{Description}}	Call description.
{{CallFrom}}	Calling number.
{{CallTo}}	Called number.
{{CallType}}	Call type: outbound or inbound.
{{CallState}}	Call state.
{{TimestampStart}}	Call start timestamp.
{{DateStart}}	Call start time in YYYY-MM-DD HH:MM:SS format.
{{DateStartT}}	Call start time in YYYY-MM-DDTHH:MM:SS format.
{{Duration}}	Call duration in HH:MM:SS format.
{{DurationHours}}	Call duration in hours.
{{DurationMins}}	Call duration in minutes.
{{DurationSecs}}	Call duration in seconds.

{{TimeZone}}	Time zone in +08:00 format.
{{ContactID}}	CRM Contact ID.
{{ContactType}}	CRM contact type.

20.2 Meeting Subject

Configuration Steps

- Enable the **Meeting Subject** checkbox.
- Enter the required subject template.
- Use supported call tags when dynamic subject information is required.

Example:

```
{{CallType}} Call - {{CallFrom}} to {{CallTo}}
```

20.3 Description

Configuration Steps

- Enable the **Description** checkbox.
- Enter the required description template.
- Use supported call tags as required.

Example:

```
{{CallType}} call, from {{CallFrom}} to {{CallTo}}, duration {{Duration}}, state: {{CallState}}
```

The subject and description are constructed at call start, while the call record is synchronized after the call ends.

21. Save the Custom CRM Template

After completing the required sections:

Configuration Steps

- Review **Basic Settings**.
- Review **Request Configuration**.
- Review **Contact Lookups**.
- Review **Add Unknown Number**.
- Review **Call Log Sync**.
- Click **Save**.
- Return to **CRM -> Template Management -> Custom Template**.

- Verify that the Custom CRM template appears in the template list.

CRM > Template Management

Default Template

Custom Template

Add

Upload

Delete

Download

☐	Name	Last Modified Time	Remark	Operations
☐	CRM_Integration In Use	2026-09-11 15:21:53	This is a testing CRM	

Save the Custom CRM Template

22. Configure the Active CRM

Creating the Custom CRM template does not by itself make it the CRM currently used by the UCM.

The administrator must select the template under **Integrate With CRM**.

Configuration Steps

- Navigate to **CRM -> Integrate With CRM**.
- Open the **CRM System** dropdown.
- Select the newly created Custom CRM template.
- Provide the Username and Password defined in the authentication phase.
- Under **Contact Lookups**, move the required contact type from **Available** to **Selected**.
- Under **Add Unknown Number**, select the contact type to use when creating new contacts.
- Click **Save**.
- Click **Apply Changes**.
- Confirm that the UCM is now connected to the selected Custom CRM template.

CRM > Integrate With CRM

Currently connected to CRM: CRM_Integration. If you want to connect to a new CRM, please set, save and apply it on this page first. The extension user will then need to configure the new CRM account information in the user portal.

CRM System

CRM_Integration

Username

demo

Password

••••

Contact Lookups

0

Available

Search

Q

None

<

>

1

Selected

Search

Q

Contacts

⌵

⌴

⌶

⌷

• Add Unknown Number

Contacts

Cancel

Save

Configure the Active CRM


23. Apply the CRM Configuration

Once the Custom CRM has been selected, apply the configuration.

Configuration Steps

- Click **Save** on the **Integrate With CRM** page.
- Click **Apply Changes**.
- Wait for the UCM to apply the new configuration.
- Verify that the selected CRM remains CRM_Integration.

The UCM interface indicates that after a new CRM is selected and applied, the extension user must configure the CRM account information through the User Portal.

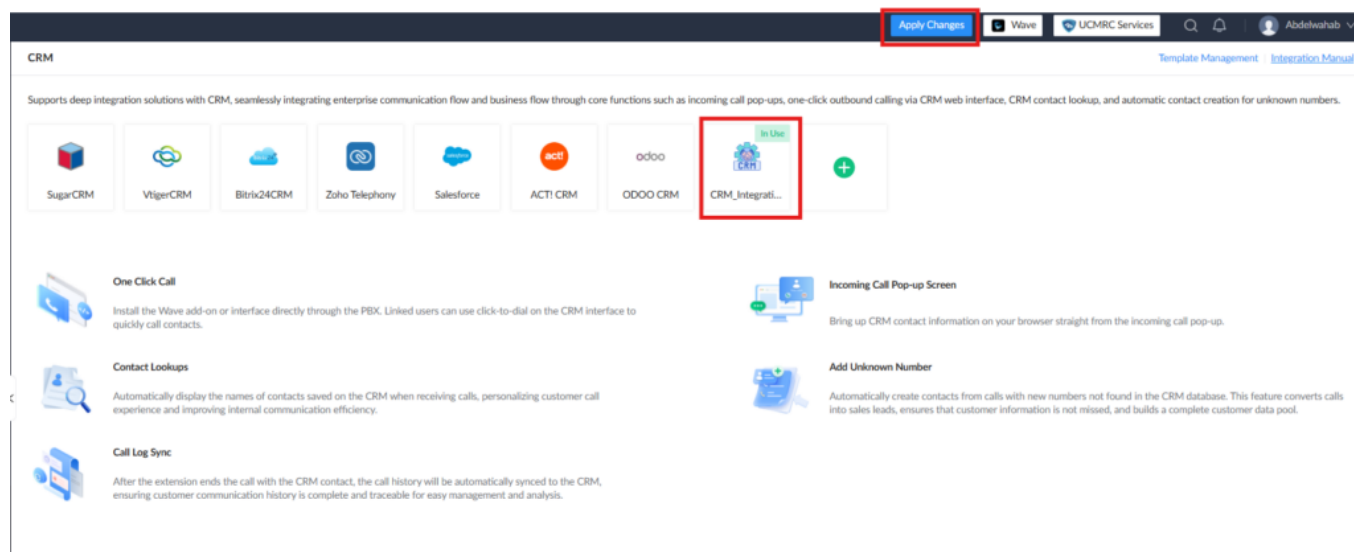

24. Configure CRM User Settings

After the administrator has configured and applied the Custom CRM, the extension user configures their CRM account through:

Other Features -> CRM User Settings

After the administrator-side configuration, the user must log in from the User Portal's CRM settings.

Configuration Steps

- Log in to the User Portal using the extension account.
- Navigate to **Other Features -> CRM User Settings**.
- Enable **Enable CRM**.
- Enter the CRM username.
- Enter the CRM password or other user-specific information required by the configured template.
- Click **Save**.
- Check the **Login Status** field.

CRM User Settings

Enable CRM	☒
*Username	demo
*Password	•••• 
Login Status	Logged Out
<button>Cancel</button><button>Save</button>	

Configure CRM User Settings

25. Verify the CRM User Connection

A successful user connection is indicated by:

Logged In


Verification Steps

- Confirm that **Enable CRM** is enabled.
- Verify that the user's CRM credentials have been entered.
- Click **Save**.
- Check **Login Status**.
- Confirm that the status is displayed as **Logged In**.
- If the status is not logged in, review the CRM authentication configuration and user credentials before continuing with call testing.

In the configuration verification performed for this guide, the User Portal displayed:

Login Status: Logged In

This confirms that the user-side CRM login process completed successfully.

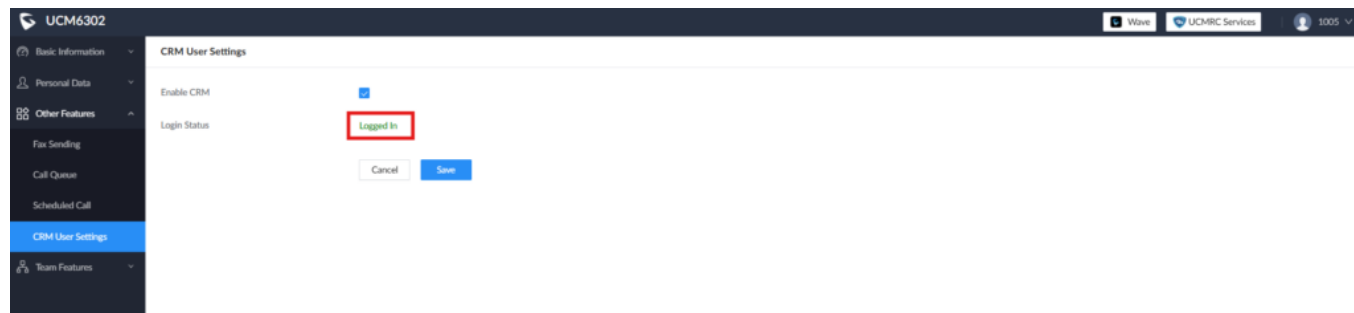

Configure CRM User Settings

26. Why the Extension User Connects to the CRM

The administrator creates and configures the Custom CRM template at the UCM level, while the individual extension user performs the user-side CRM authentication.

The workflow is therefore:

```
Administrator
?
Create Custom CRM Template
?
Configure CRM API behavior
?
Select Custom CRM under Integrate With CRM
?
Save and Apply Changes
?
Extension User
?
CRM User Settings
?
Authenticate CRM Account
```

This user-level connection allows the CRM integration to operate in association with the extension using the configured CRM account.

27. System Tags Reference

The following built-in tags are automatically created and maintained by the UCM.

Tag	Content	Availability
{{CRMUser}}	Current user.	Created when the user authenticates CRM.
{{DeviceCode}}	Device code.	OAuth2 authentication.
{{RefreshToken}}	Refresh token.	OAuth2 authentication.
{{AccessToken}}	Access token.	OAuth2 and Bearer Token authentication.
{{BasicInfo}}	Basic Authentication credential.	Basic Authentication.
{{CallFrom}}	Calling number.	External call start.
{{CallTo}}	Called number.	External call start.
{{CallType}}	outbound or inbound.	External call start.
{{CallState}}	Call state.	External call start and call synchronization.
{{Phone}}	External number.	Contact lookup only.
{{ContactType}}	Contact type.	Contact lookup and call synchronization.
{{ContactID}}	Contact ID.	Contact lookup and call synchronization.
{{Name}}	External number name.	Unknown-number creation.
{{Number}}	External number.	Unknown-number creation.
{{InternalNumber}}	Local extension.	Unknown-number creation.
{{Direction}}	Call direction.	Unknown-number creation.
{{Disposition}}	Call result.	Unknown-number creation.

{{TimestampStart}}	Call start timestamp.	Call synchronization.
{{DateStart}}	Call start time in YYYY-MM-DD HH:MM:SS format.	Call synchronization.
{{DateStartT}}	Call start time in YYYY-MM-DDTHH:MM:SS format.	Call synchronization.
{{Duration}}	Call duration in HH:MM:SS format.	Call synchronization.
{{DurationHours}}	Call duration in hours.	Call synchronization.
{{DurationMins}}	Call duration in minutes.	Call synchronization.
{{DurationSecs}}	Call duration in seconds.	Call synchronization.
{{TimeZone}}	Time zone.	Call synchronization.
{{Subject}}	Call subject.	Call synchronization.
{{Description}}	Call description.	Call synchronization.

28. JSON Path and RFC 6901

Custom CRM uses RFC 6901 JSON Pointer paths to extract values from CRM responses.

For example:

```
{
  "data": {
    "token": "abc123",
    "user": {
      "name": "John",
      "id": "1001"
    }
  },
  "contacts": [
    {
      "id": "001",
      "name": "Alice"
    },
    {
      "id": "002",
      "name": "Bob"
    }
  ]
}
```

The corresponding paths are:

JSON Path	Extracted Value
/data/token	abc123
/data/user/name	John
/data/user/id	1001
/contacts/0/id	001
/contacts/1/name	Bob

Configuration Steps

- Identify the JSON object containing the required value.
- Identify the relevant key or array index.
- Construct the JSON Pointer path beginning with /.
- Enter the path into the relevant Custom CRM field.
- Verify that the extracted value is the value required by the next CRM operation.

Array indexes begin at 0.

If a JSON key contains /, replace it with:

```
~1
```

If a JSON key contains ~, replace it with:

```
~0
```

29. Example Test Configuration

The following configuration can be used as a simple functional test structure.

Basic Authentication

Authentication Method

```
Basic
```

Base64 Encoded Certificate

```
dGVzdDp0ZXN0
```

This represents:

```
demo:demo
```

Custom Parameters

Username

```
Configuration Item Name: Username  
Form Control: Text input box  
Variable Name: username  
Configuration Page: Admin Portal
```

Password

```
Configuration Item Name: Password  
Form Control: Password input  
Variable Name: password  
Configuration Page: Admin Portal
```

HTTP Headers

```
Content-Type: application/json
```

```
Accept: application/json
```

Contact Type

Contacts


User CRM Settings

Username: demo

Password: demo

After successful authentication, the User Portal should display:

Login Status: Logged In

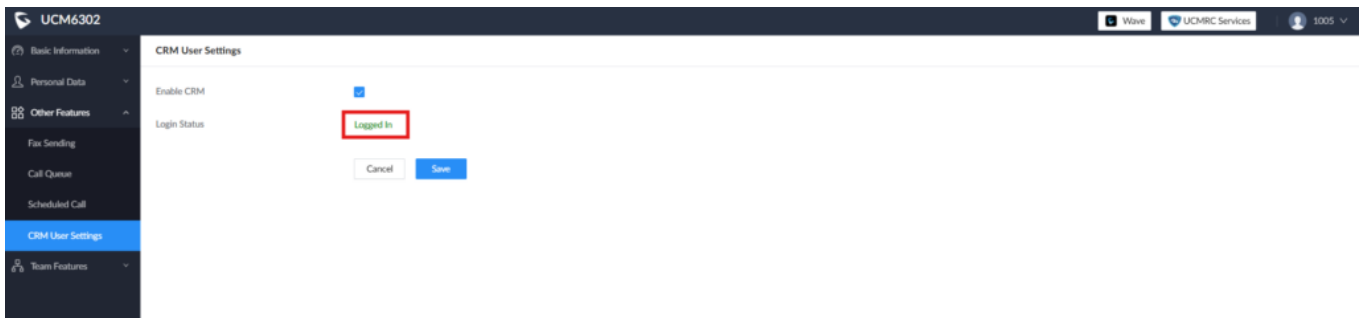

30. Testing with a Generic HTTP Endpoint

A generic HTTP test endpoint can be useful for validating that the UCM sends HTTP requests and performs tag replacement correctly before connecting to a production CRM.


For example, a test URL can be configured as:

`https://httpbin.org/post`

or:

`https://httpbin.org/basic-auth/demo/demo`

These endpoints are useful for testing HTTP request behavior, but they are **not CRM services** and therefore do not provide a real CRM contact database.

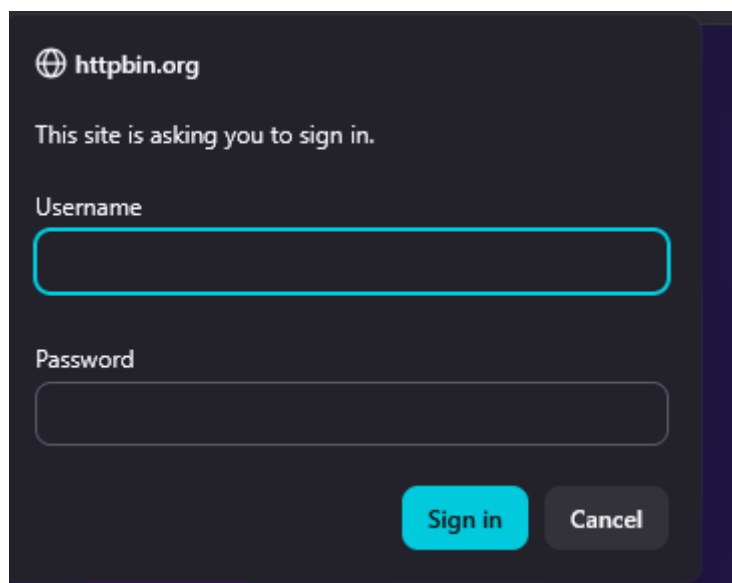


A generic HTTP endpoint can be used to validate mechanisms such as:

- HTTP request generation.
- GET / POST operation.

- Tag substitution.
- Request-body construction.
- Response processing.
- JSON-path extraction.

 A genuine CRM deployment still requires the API endpoints and response structure supplied by the target CRM. Below is an example for the confirmation response



31. Summary

Custom CRM provides a configurable way for the UCM6300 Series and UCM6300 Audio Series to integrate with CRM systems through HTTP APIs.

The administrator first creates a Custom CRM template and defines the required API behavior, including authentication, custom parameters, HTTP headers, follow-up requests, contact lookup, field mapping, unknown-number creation, and call-log synchronization.

The template is then activated through:

CRM -> Integrate With CRM

The administrator selects the Custom CRM template, selects the appropriate contact lookup and unknown-number options, saves the configuration, and applies the changes.

The extension user then accesses:

Other Features -> CRM User Settings

and authenticates the CRM account.

A successful user connection is confirmed when:

Login Status: Logged In

The integration can then be validated through the complete call workflow:

External Call -> Contact Lookup -> Contact Mapping / Screen Pop -> Unknown Contact Creation when required -> Call Log Synchronization

This allows the UCM's call activity to interact with the external CRM according to the API integration configured by the administrator.

32. Supported Devices

Models	Firmware Required
UCM630x Series	1.0.35.4+
UCM630xA Series	1.0.35.4+