

Grandstream Networks, Inc.

**GRP261x/GRP262x/GRP263x/GRP2670/GRP2650
Series - User Guide**



GRP261x/GRP262x/GRP263x/GRP2670/GRP2650 Series - User Guide

Thank you for purchasing Grandstream GRP261X/GRP2624/GRP2634/GRP2636/GRP2650 & GRP2670 Carrier-Grade IP Phones.

The GRP26xx Professional Carrier-Grade IP Phones offer top-notch HD audio quality as well as a variety of telephony features. This series was designed for mass deployment and broad interoperability with most 3rd party SIP devices and platforms. With its sleek design and re-conceptualized user experience, the GRP26xx series comes with powerful out-of-the-box feature options, including Bluetooth & Wi-Fi support, a dual LCD screen, support for up to 14 lines, 5-way conferencing for all models, and customizable face-plates for a touch of personalization. In addition to all the mentioned characteristics, the series is compatible with Grandstream's cloud provisioning platform, GDMS (Grandstream Device Management System), for remote and cloud provisioning purposes. The GRP26xx is the perfect choice for enterprises looking for IP phones with advanced functionalities that are also easy to use and deploy.

- **Legacy Models (Discontinued after 2020):** GRP2612, GRP2612P, GRP2613, GRP2614, GRP2615, and GRP2616.
? The hardware versions starting with 1 are considered legacy hardware; to confirm this, check the product label on the back of the device, if the PN follows the format 962-NNNNN-XNN and X equals 1, the device is classified as legacy model.
- **Current Models (Currently Supported Hardware):** GRP2612W, GRP2624, GRP2634, GRP2636, GRP2650, and GRP2670.
? The first upgrade from firmware **1.0.9.x or lower** to **1.0.11.9 or higher** will automatically upgrade to **2.0.11.x** before proceeding to **1.0.11.x**. If **2.0.11.x** appears as the alternative firmware, it can be ignored, as this intermediate step is part of the normal upgrade process. All subsequent upgrades will proceed normally.

? When downgrading from **1.0.11.x** to **1.0.9.141 or lower** via the firmware server, the device will reboot twice before completing the downgrade process.
- Devices on firmware **1.0.9.x or lower** cannot upgrade to firmware **1.0.11.9 or higher** directly through Web UI.

PRODUCT OVERVIEW

Feature Highlights

The following tables contain the major features of the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650:

GRP2610GRP2610P	2 dual-color line keys (can be digitally programmed as up to 8 provisionable BLF/fast-dial keys) 2.4" (320x240) TFT color LCD. 4 programmable context-sensitive soft keys. 100M network ports. Integrated PoE (GRP2610P only). 5-way conference. Electronic Hook Switch (EHS).
-----------------	--

Electronic Hook Switch	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Number of Lines	2	3	4	6	4	10	6	8	8	12	12	14
Programmable Hard Keys	8	12	16	24	16	40	24	32	32	36	48 (VPKs)	56 (VPKs)
Programmable Soft Keys	4	4	4	4	4	5	5	4	4	5	3	6
MPK LCD	No	No	No	No	Yes	No	Yes	No	No	No	No	No
PoE	GRP2610P	Yes	GRP2612P GRP2612GGRP 2612W only	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Network ports	100M	1000M	100M(1000M for GRP2612G)	1000M	1000M	1000M	1000M	1000M	1000M	1000M	1000M	1000M
Conference	5-way	5-way	5-way	5-way	5-way	5-way	5-way	5-way	5-way	5-way	5-way	5-way
Bluetooth	No	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Wi-Fi	No	No	GRP2612W only	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

GRP261X/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670 Features at a glance

Technical Specifications

The following table summarizes all the technical specifications, including the protocols/standards supported, voice codecs, telephony features, languages, and upgrade/provisioning settings for the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650 series.

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV,NAPTR), DHCP, PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069,802.1x, TLS, SRTP, IPV6
Network Interfaces	Dual switched auto-sensing 10/100 Mbps Ethernet ports (GRP2610).Dual switched auto-sensing 10/100 Mbps Ethernet ports with integrated PoE (GRP2610P).
Graphic Display	2.4 inch (320x240) TFT color LCD.
Feature Keys	2 line keys with up to 2 SIP accounts, 4 programmable contexts sensitive Softkeys, navigation/menu keys, 8 dedicated function keys for: MESSAGE(with LED indicator), TRANSFER, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL-
Voice Codec	Support for G.729A/B, G.711?/a-law, G.726, G.722(wide-band), G723, iLBC, OPUS, in-band and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets).

Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 1000 items), call waiting, call log (up to 1000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over.
HD audio	Yes, HD handset and speakerphone with support for wideband audio.
Base Stand	Yes, allow 2 angle positions.
Wall Mountable	Yes, (*wall mount sold separately).
QoS	Layer 2 QoS (802.1Q, 802.1P), and Layer 3 (ToS, DiffServ, MPLS) QoS.
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.
Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ?????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ?????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ?????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ?????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ?????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP/TFTPS/HTTP/HTTPS, mass provisioning using GDMS/TR-069 or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V ; Output: +5V, 0.6A ;Integrated Power-over-Ethernet (802.3af);IEEE 802.3az Energy-Efficient Ethernet;Max power consumption 3W (power adapter, GRP2610) or 3.8W (PoE, GRP2610P).
Physical	Dimension : 203mm x 186mm x 28mm.Unit weight : 0.4kg.Package weight : 0.9kg.
Temperature and Humidity	Operation: 0 degC to 40 degC. Storage: -10 degC to 60 degC. Humidity: 10% to 90% Non-condensing.
Package Content	GRP2610 phone, handset with cord, phone stand, 5V power adapter (with GRP2610 only), network cable, Quick Installation Guide.
Compliance	FCC: Part 15 Class B; FCC Part 68 HAC. CE: EN 55032; EN 55035; EN IEC 61000-3-2; EN 61000-3-3; EN IEC 62368-1. RCM: AS/ NZS CISPR 32; AS/NZS 62368.1; AS/CA S004/S040. IC: ICES-003; CS-03, Part V.

GRP2610/GRP2610P Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV,NAPTR), DHCP, PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPV6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Gigabit Ethernet ports with integrated PoE.
Graphic Display	2.4 inch (320x240) TFT color LCD.
Feature Keys	3 line keys with up to 3 SIP accounts, 4 programmable contexts sensitive Softkeys, 5 navigation/menu keys, 8 dedicated function keys for: MESSAGE(with LED indicator), TRANSFER, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL-

Voice Codec	Support for G.729A/B, G.711?/a-law, G.726, G.722(wide-band), G.723, iLBC, OPUS, in-band and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJS, AGC.
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets).
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 1000 items), call waiting, call log (up to 1000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over.
HD audio	Yes, HD handset and speakerphone with support for wideband audio.
Base Stand	Yes, allow 2 angle positions.
Wall Mountable	Yes, (*wall mount sold separately).
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS.
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.
Multi-language	LCD Language: English ???? (Simplified Chinese) ??????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ??????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ??????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP/TFTPS/HTTP/HTTPS, mass provisioning using GDMS/TR-069 or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included:Input:100-240V ; Output: +5V, 0.6A ;Integrated Power-over-Ethernet (802.3af);IEEE 802.3az Energy-Efficient Ethernet;Max power consumption 3W (power adapter) or 3.8W (PoE).
Physical	Dimension : 203mm x 186mm x 28mm.Unit weight : 0.4kg.Package weight : 0.9kg.
Temperature and Humidity	Operation: 0 degC to 40 degC. Storage: -10 degC to 60 degC. Humidity: 10% to 90% Non-condensing.
Package Content	GRP2611G phone, handset with cord, phone stand, 5V power adapter, network cable, Quick Installation Guide.
Compliance	FCC: Part 15 Class B; FCC Part 68 HAC. CE: EN 55032; EN 55035; EN IEC 61000-3-2; EN 61000-3-3; EN IEC 62368-1.RCM: AS/NZS CISPR 32; AS/NZS 62368.1; AS/CA S004/S040.IC: ICES-003; CS-03, Part V.

GRP2611G Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100 Mbps Ethernet ports (GRP2612) Dual switched auto-sensing 10/100 Mbps Ethernet ports with integrated PoE (GRP2612P & GRP2612W) Dual switched auto-sensing 10/100/1000 Mbps Gigabit Ethernet ports with integrated PoE (GRP2612G)

Graphic Display	2.4 inch (320x240) TFT color LCD
Feature Keys	4 line keys with up to 4 SIP accounts and up to 2 SIP accounts for legacy hardware (discontinued in 2020), 4 programmable contexts sensitive Softkeys, 5 navigation/menu keys, 9 dedicated function keys for: MESSAGE (with LED indicator), TRANSFER, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOLUME+, VOLUME-
Voice Codec	Support for G.729A/B, G723.1, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets)
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA), bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 1000 items), call waiting, call log (up to 2000 records), customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, both on handset and full-duplex handsfree speakerphone
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes, (*wall mount sold separately)
QoS	Layer 2 (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, AES based secure configuration file, SRTP, TLS, 802.1x media access control
Multi-language	LCD Language: English ???? (Simplified Chinese) ??????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ??????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ??????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via TFTP/FTP/FTPS/HTTP/HTTPS, mass provisioning using TR-069 or encrypted XML configuration file
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240 VAC; Output: +5VDC, 0.5A;Integrated Power-over-Ethernet (802.3af)
Physical	Dimension : 203mm x 193mm x 52.1mmUnit weight : 554gPackage weight : 936g
Temperature and Humidity	32-104°F / 0~40°C, 10-90% (non- condensing)
Package Content	GRP2612/GRP2612P/GRP2612W/GRP2612G phone, handset with cord, base stand, universal power supply (except GRP2612P), network cable, Quick Installation Guide
Compliance	GRP2612/GRP2612P/GRP2612G:FCC: Part 15 Class B; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN IEC 62368-1.RCM: AS/NZS CISPR 32; AS/NZS 62368.1; AS/CA S004IC: ICES-003; CS-03, Part V.GRP2612W:FCC: Part 15 Class B; Part 15 Subpart C, 15.247; Part 15 Subpart E, 15.407; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN IEC 61000-3-2; EN 61000-3-3; EN IEC 62368-1; EN 301 489-1; EN 301 489-17; EN 300 328; EN 301 893; EN 62311.RCM: AS/NZS CISPR 32; AS/NZS 62368.1; AS/NZS 4268; AS/NZS 2772.2; AS/CA S004.IC: ICES-003; CS-03, Part V; RSS-247; RSS-102.

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV, NAPTR), DHCP, PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPV6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	2.8 inch (320x240) TFT color LCD - 2.4 inch MPK color LCD
Feature Keys	6 line keys with up to 4 SIP accounts, up to 3 SIP accounts for legacy hardware (discontinued in 2020), 5 navigation/menu keys, 11 dedicated function keys for: MESSAGE(with LED indicator), PHONEBOOK, TRANSFER, CONFERENCE, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL-
Voice Codec	Support for G7.29A/B, G.711?/a-law, G.726, G.722(wide-band), G723, iLBC, OPUS, in-band and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets)
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance(SCA)/bridged-line-appearance(BLA), downloadable phonebook(XML, LDAP, up to 1000 items), call waiting, call log (up to 2000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes, (*wall mount sold separately)
QoS	Layer 2 (802.1q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot
Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ???????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ???????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ?????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ?????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ???????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP/TFTPS/HTTP/HTTPS, mass provisioning using GDMS/TR-069 or AES encrypted XML configuration file
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V ; Output: +5V, 0.6A ; Integrated Power-over-Ethernet(802.3af) IEEE 802.3az Energy-Efficient Ethernet Max power consumption 3W(power adapter) or 3.8W(PoE)
Physical	Dimension : 203mm x 193mm x 52.1mmUnit weight : 554gPackage weight : 936g
Temperature and Humidity	Operation: 0 degC to 40 degC Storage: -10 degC to 60 degC Humidity: 10% to 90% Non-condensing
Package Content	GRP2613(W) phone, handset with cord, base stand, universal power supply, network cable, Quick Installation Guide
Compliance	FCC: Part 15 Class B; FCC Part 68 HAC CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN 62368-1 RCM: AS/NZS CISPR32;AS/NZS 61000.3.2; AS/NZS 61000.3.3;AS/NZS 62368.1; AS/CA S004 IC: ICES-003; CS-03

GRP2613 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	2.8 inch (320x240) TFT color LCD - 2.4 inch MPK color LCD
Bluetooth	Yes, Bluetooth integrated
Wi-Fi	Yes, dual-band
Feature Keys	4 line keys with up to 12 SIP accounts, 24 speed-dial/BLF extension keys with dual-color LED, 4 programmable contexts sensitive Softkeys, 5 navigation/menu keys, 11 dedicated function keys for: MESSAGE (with LED indicator), PHONEBOOK, TRANSFER, CONFERENCE, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOLUME+, VOLUME-
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets).
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 2000 items), call waiting, call log (up to 2000 records), customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, Hot Desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, both on handset and full-duplex handsfree speakerphone
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes, (*wall mount sold separately)
QoS	Layer 2 (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 & MD5-sess based authentication, AES based secure configuration file, SRTP, TLS, 802.1x media access control
Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ???????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ?????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ???????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ???????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via TFTP/FTP/FTPS/HTTP/HTTPS, mass provisioning using TR-069 or encrypted XML configuration file
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V; Output: +12V, 0.5A;Integrated Power-over-Ethernet (802.3af)Max power consumption: 6W
Physical	Dimension : 234mm x 213mm x 82.2mmUnit weight : 950gPackage weight : 1460g
Temperature and Humidity	32-104°F / 0~40°C, 10-90% (non- condensing)
Package Content	GRP2614 phone, handset with cord, base stand, universal power supply, network cable, Quick Installation Guide

Compliance	FCC: FCC Part 15B, Class B; FCC Part 15 Subpart C; FCC Part 15 Subpart E; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN 62368-1; EN 301 489-1/-17; EN 300 328; EN 301 893; EN 62311;RCM: AS/NZS CISPR 32;AS/NZS 60950.1;AS/NZS 4268; AS/CA S004.
------------	---

GRP2614 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	4.3 inch (480x272) TFT color LCD - 2.4 inch MPK color LCD
Bluetooth	Yes, Bluetooth integrated
Wi-Fi	Yes, dual-band
Feature Keys	10 line keys with up to 16 SIP accounts, 40 speed-dial/BLF extension keys with dual-color LED, 5 programmable contexts sensitive Softkeys, 5 navigation/menu keys, 9 dedicated function keys for: MESSAGE (with LED indicator), TRANSFER, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOLUME+, VOLUME-
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), USB port.
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 2000 items), call waiting, call log (up to 2000 records), customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, Hot Desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, both on handset and full-duplex handsfree speakerphone
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes, (*wall mount sold separately)
QoS	Layer 2 (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 & MD5-sess based authentication, AES based secure configuration file, SRTP, TLS, 802.1x media access control
Multi-language	LCD Language: English ???? (Simplified Chinese) ??????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ??????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ??????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via TFTP/FTP/FTPS/HTTP/HTTPS, mass provisioning using TR-069 or encrypted XML configuration file
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V; Output: +12V, 0.5A;Integrated Power-over-Ethernet (802.3af)
Physical	Dimensions : 243mm x 210mm x 82.3mmUnit weight:970gPackage weight:1480g

Temperature and Humidity	32-104°F / 0-40°C, 10-90% (non- condensing)
Package Content	GRP2615 phone, handset with cord, base stand, universal power supply, network cable, Quick Installation Guide
Compliance	FCC: FCC Part 15B, Class B; FCC Part 15 Subpart C; FCC Part 15 Subpart E; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN 62368-1; EN 301 489-1/-17; EN 300 328; EN 301 893; EN 62311;RCM: AS/NZS CISPR 32;AS/NZS 60950.1;AS/NZS 4268; AS/CA S004.

GRP2615 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	4.3 inch (480x272) TFT color LCD - 2.4 inch MPK color LCD
Bluetooth	Yes, Bluetooth integrated
Wi-Fi	Yes, dual-band
Feature Keys	6 line keys with up to 16 SIP accounts, 24 speed-dial/BLF extension keys with dual-color LED, 5 programmable contexts sensitive Softkeys, 5 navigation/menu keys, 11 dedicated function keys for: MESSAGE (with LED indicator), PHONEBOOK, TRANSFER, CONFERENCE, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOLUME+, VOLUME-
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), USB port.
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call-appearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook (XML, LDAP, up to 2000 items), call waiting, call log (up to 2000 records), customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, Hot Desking, personalized music ringtones and music on hold, server redundancy and fail-over.
HD audio	Yes, both on handset and full-duplex handsfree speakerphone
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes
QoS	Layer 2 (802.1Q, 802.1p) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 & MD5-sess based authentication, AES based secure configuration file, SRTP, TLS, 802.1x media access control
Multi-language	LCD Language: English (Simplified Chinese) (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) (Greek) Espanol (Spanish) Francais (French) (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) (Japanese) (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) (Ukrainian) (Traditional Chinese) WebUI Language: English (Simplified Chinese) (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) (Japanese) (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) (Russian) Slovenscina (Slovenian) Turkce (Turkish) (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via TFTP/FTP/FTPS/HTTP/HTTPS, mass provisioning using TR-069 or encrypted XML configuration file

Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V; Output: +12V, 0.5A;Integrated Power-over-Ethernet (802.3af)
Temperature and Humidity	32-104°F / 0~40°C, 10-90% (non- condensing)
Package Content	GRP2616 phone, handset with cord, base stand, universal power supply, network cable, Quick Installation Guide
Compliance	FCC: FCC Part 15B, Class B; FCC Part 15 Subpart C; FCC Part 15 Subpart E; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN 62368-1; EN 301 489-1/-17; EN 300 328; EN 301 893; EN 62311;RCM: AS/NZS CISPR 32;AS/NZS 60950.1;AS/NZS 4268; AS/CA S004.

GRP2616 Technical Specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	2.8 inch (320x240) TFT color LCD
Bluetooth	Yes, Bluetooth integrated
Wi-Fi	Yes, dual-band
Feature Keys	8 line keys with up to 12 SIP accounts, 4 XML programmable context sensitive softkeys, 5 navigation/menu keys, 9 dedicated function keys for: MESSAGE(with LED indicator), TRANSFER, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC?
Auxiliary Ports	RJ9 headset jack allowing EHS with Plantronics headsets, USB to support Grandstream's GUV Series headsets and other USB headsets
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-callappearance(SCA)/bridged-line-appearance(BLA), downloadable phonebook(XML, LDAP, up to 2000 items), call waiting, call log(up to 2000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio, and dual microphone.
Base Stand	Yes, 2 angle positions available, Wall Mountable (Wall Mount *sold separately)
Wall Mountable	Yes
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.

Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ???????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ?????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP / HTTP / HTTPS, mass provisioning using GDMS/TR069 or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included: Input: 100-240V ; Output: +12V, 1A ; Integrated Power-over-Ethernet (802.3af) Max power consumption 9.5W (power adapter) or 10.8W (PoE)
Temperature and Humidity	Operation: 0 degC to 40 degC Storage: -10 degC to 60 degC Humidity: 10% to 90% Non-condensing
Package Content	GRP2624 phone, handset with cord, phone stand, 12V power adapter, network cable, Quick Installation Guide, GPL license
Compliance	FCC: FCC Part 15B, Class B; FCC Part 15 Subpart C; FCC Part 15 Subpart E; FCC Part 68 HAC.CE: EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3; EN 62368-1; EN 301 489-1/-17; EN 300 328; EN 301 893; EN 62311; RCM: AS/NZS CISPR 32; AS/NZS 60950.1; AS/NZS 4268; AS/CA S004.

GRP2624 Technical specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV, NAPTR), DHCP, PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPV6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Gigabit Ethernet ports with integrated PoE
Graphic Display	2.8 inch (320x240) TFT color LCD
Bluetooth	Yes, integrated
Wi-Fi	Yes, integrated dual-band Wi-Fi 802.11 a/b/g/n/ac (2.4Ghz & 5Ghz)
Feature Keys	8 line keys with up to 12 SIP accounts, 10 MPK extension keys with paper slot, 4 XML programmable context-sensitive softkeys, 5 navigation/menu keys, 9 dedicated function keys for MESSAGE(with LED indicator), TRANSFER, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722(wide-band), G.723, iLBC, OPUS, in-band and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack allowing EHS with Plantronics headsets, USB to support Grandstream's GUV Series headsets, and other USB headsets
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call appearance(SCA)/bridged-line-appearance(BLA), downloadable phonebook(XML, LDAP, up to 2000 items), call waiting, call log(up to 2000 records), XML customization of the screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio. Dual Microphone.
Extension Module	No

Base Stand	Yes, 2 angle positions available, Wall Mountable (Wall Mount *sold separately)
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator-level passwords, MD5 and MD5-sess-based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.
Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ???????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ?????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ???????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ???????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP / HTTP / HTTPS, mass provisioning using GDMS/TR069 or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V ; Output: +12V, 1A ; Integrated Power-over-Ethernet (802.3af) Max power consumption 9.5W (power adapter) or 10.8W (PoE)
Temperature and Humidity	Operation: 0 degC to 40 degCStorage: -10 degC to 60 degCHumidity: 10% to 90% non-condensing
Package Content	GRP2634 phone, handset with cord, phone stand, 12V power adapter, network cable, Quick Installation Guide, GPL license
Physical	Dimension: 220mmx 210mmx 82mm Unit Weight: 880g ; Package Weight:1260g
Compliance	FCC: Part 15 (CFR 47) Class B CE: EN55022 Class B; EN55024 Class B;EN61000-3-2; EN61000-3-3;EN60950-1 RCM: AS/ACIF S004; AS/NZS CISPR22/24; AS/NZS 60950.1

GRP2634 Technical specification

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV,NAPTR), DHCP, PPPoE, TELNET, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPV6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Gigabit Ethernet ports with integrated PoE
Graphic Display	4.3inch(480x272) TFT color LCD
Bluetooth	Yes, integrated
Wi-Fi	
Feature Keys	12 line keys with up to 16 SIP accounts, 24MPK extension keys with paper slot, 5 XML programmable context-sensitive softkeys, 5 navigation/menu keys, 8 dedicated function keys for: MESSAGE(with LED indicator), TRANSFER, HEADSET, HOLD,MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL
Voice Codec	Support for G7.29A/B, G.711u/a-law, G.726, G.722(wide-band), G723, iLBC, OPUS, inband and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack allowing EHS with Plantronics headsets, USB to support Grandstream's GUV Series headsets and other USB headsets

Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call appearances(SCA)/bridged-line-appearance(BLA), downloadable phonebook(XML, LDAP, up to 2000 items), call waiting, call log(up to 2000 records), XML customization of the screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy, and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio. Dual Microphone.
Extension Module	Yes
Base Stand	Yes, 2 angle positions available, Wall Mountable (Wall Mount *sold separately)
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator-level passwords, MD5 and MD5-sess-based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.
Multi-language	LCD Language: English ???? (Simplified Chinese) ??????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ??????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ??????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP/TFTPS/HTTP/HTTPS, mass provisioning using GDMS/TR-069 or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V ; Output: +12V, 1A ; Integrated Power-over-Ethernet(802.3af) Max power consumption 3.2W(power adapter) or 4.3W(PoE)
Temperature and Humidity	Operation: 0 degC to 40 degCStorage: -10 degC to 60 degCHumidity: 10% to 90% non-condensing
Package Content	GRP2636 phone, handset with cord, phone stand, 12V power adapter, network cable, Quick Installation Guide, GPL license
Physical	Dimension: 220mmx 210mmx 82mm Unit Weight: 880g ; Package Weight:1260g
Compliance	FCC: FCC Part 15 Class B; FCC Part 15 Subpart C,15.247; FCC Part 15 Subpart E,15.407; FCC Part 68 HAC. CE: ETSI EN 301 893; ETSI EN 301 489-1/-17; ETSI EN 300 328; EN IEC 62311; EN 55032; EN 55035; EN 62368-1. IC: RSS-247 Issue 2; RSS-Gen Issue 5; ICES-003 Issue 7; CS-03, Part V. RCM: AS/NZS CISPR32; AS/NZS 4268; AS/NZS 2772.2; AS/NZS 62368.1; AS/CA S004. UKCA: ETSI EN 301 893; ETSI EN 301 489-1/-17; ETSI EN 300 328; BS EN IEC 62311; BS EN 55032; BS EN 55035; BS EN 62368-1.

GRP2636 Technical specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP/RTCP-XR, HTTP/HTTPS, ARP, ICMP, DNS (A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, FTP/FTPS, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPv6
Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Ethernet ports with integrated PoE
Graphic Display	7" (1042x600) capacitive touch TFT color LCD
Bluetooth	Yes, integrated

Wi-Fi	Yes, integrated dual-band Wi-Fi 802.11 a/b/g/n/ac (2.4Ghz & 5Ghz)
Feature Keys	12 line keys with up to 16 SIP accounts, 5 navigation/menu keys, 9 dedicated function keys for MESSAGE (with LED indicator), TRANSFER, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL-
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726, G.722 (wide-band), OPUS, iLBC and in-band and out-of-band DTMF (in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack allowing EHS with Plantronics headsets, USB port
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-call appearance (SCA) / bridged line appearance (BLA), downloadable phonebook (XML, LDAP, up to 2000 items), call waiting, call log(up to 2000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio, and dual microphone.
Extension Module	Yes
Base Stand	Yes, 2 angle positions available, Wall Mountable (Wall Mount *sold separately)
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot.
Multi-language	LCD Language: English ???? (Simplified Chinese) ?????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ?????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ?????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ?????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ?????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ?????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ?????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via TFTP/HTTP/HTTPS/FTP/FTPS, mass provisioning using GDMS/TR-069, or AES encrypted XML configuration file.
Power & Green Energy Efficiency	Universal power adapter included:Input: 100-240V.Output: +12V, 1A.Integrated Power-over-Ethernet (802.3af)Max power consumption 6.5W (power adapter)
Temperature and Humidity	Operation: 0 degC to 40 degCStorage: -10 degC to 60 degCHumidity: 10% to 90% non-condensing
Package Content	GRP2670 phone, handset with cord, phone stand, 12V power adapter, network cable, Quick Installation Guide
Compliance	FCC: Part 15 Subpart B(Class B), Part 15 Subpart C 15.247, Part 15 Subpart C 15.407, Part 1 Subpart I, Part 68. 316/317.IC: RSS-247, RSS-Gen, RSS-102, ICES-003, CS-03 Part V; CE: EN 55032, EN 55035, EN 61000-3-2, EN 61000-3-3, EN 62368-1, EN 62311, EN 301 489-1, EN 301 489-17, EN 300 328, EN 301 893; RCM: AS/NZS CISPR 32, AS/NZS 62368.1, AS/NZS 4268, AS NZS 2772.2, AS/CA S004.

GRP2670 Technical specifications

Protocols/Standards	SIP RFC3261, TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, ARP, ICMP, DNS(A record, SRV, NAPTR), DHCP, PPPoE, SSH, TFTP, NTP, STUN, SIMPLE, LLDP, LDAP, TR-069, 802.1x, TLS, SRTP, IPV6
---------------------	---

Network Interfaces	Dual switched auto-sensing 10/100/1000 Mbps Gigabit Ethernet ports with integrated PoE
Graphic Display	5.0 inch (1280x720) TFT color LCD
Wi-Fi	Yes, integrated dual-band WiFi 802.11 a/b/g/n/ac (2.4Ghz & 5Ghz)
Bluetooth	Yes, integrated
Feature Keys	14 line keys with up to 16 SIP accounts, 6 XML programmable context-sensitive softkeys, 5 navigation/menu keys, 9 dedicated function keys for: MESSAGE (with LED indicator), TRANSFER, HOLD, HEADSET, MUTE, SEND/REDIAL, SPEAKERPHONE, VOL+, VOL-
Voice Codec	Support for G.729A/B, G.711u/a-law, G.726-32, G.722(wide-band), G723.1, iLBC, OPUS, in-band and out-of-band DTMF(in audio, RFC2833, SIP INFO), VAD, CNG, AEC, PLC, AJB, AGC
Auxiliary Ports	RJ9 headset jack (allowing EHS with Plantronics headsets), USB
Telephony Features	Hold, transfer, forward, 5-way conference, call park, call pickup, shared-callappearance (SCA)/bridged-line-appearance (BLA), downloadable phonebook(XML, LDAP, up to 2000 items), call waiting, call log(up to 2000 records), XML customization of screen, off-hook auto dial, auto answer, click-to-dial, flexible dial plan, hot-desking, personalized music ringtones and music on hold, server redundancy and fail-over
HD audio	Yes, HD handset and speakerphone with support for wideband audio, and dual microphone
Extension Module	Yes, GBX20
Base Stand	Yes, allow 2 angle positions
Wall Mountable	Yes, (*wall mount sold separately)
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 (ToS, DiffServ, MPLS) QoS
Security	User and administrator level passwords, MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, SRTP, TLS, 802.1x media access control, secure boot
Multi-language	LCD Language: English ???? (Simplified Chinese) ??????? (Arabic) Catala (Catalan) Cestina (Czech) Deutsch (German) ??????? (Greek) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Latviesu valoda (Latvian) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Svenska (Swedish) Slovenscina (Slovenian) Slovencina (Slovak) Turkce (Turkish) ????????? (Ukrainian) ???? (Traditional Chinese) WebUI Language: English ???? (Simplified Chinese) ??????? (Arabic) Cestina (Czech) Deutsch (German) Espanol (Spanish) Francais (French) ????? (Hebrew) Hrvatski (Croatian) Magyar (Hungarian) Italiano (Italian) ??? (Japanese) ??????? (Korean) Nederlands (Dutch) Polski (Polish) Portugues (Portuguese) ??????? (Russian) Slovenscina (Slovenian) Turkce (Turkish) ???? (Traditional Chinese)
Upgrade/Provisioning	Firmware upgrade via FTP/TFTP / HTTP / HTTPS, mass provisioning using GDMS/TR069 or AES encrypted XML configuration file
Power & Green Energy Efficiency	Universal power adapter included: Input:100-240V ; Output: +12V, 1.0A ; Integrated Power-over-Ethernet(802.3af) Max power consumption 6.2W(power adapter)
Physical	Unit weight:1050g ; Package weight:1620g Dimension: 263mm x 210mm x 82mm
Temperature and Humidity	Operation: 0 degC to 40 degC Storage: -10 degC to 60 degC Humidity: 10% to 90% Non-condensing
Package Content	GRP2650 phone, handset with cord, phone stand, 12V power adapter, network cable, Quick Installation Guide
Compliance	FCC: Part 15 (CFR 47) Class B CE: EN55022 Class B; EN55024 Class B;EN61000-3-2; EN61000-3-3;EN60950-1 RCM: AS/ACIF S004; AS/NZS CISPR22/24; AS/NZS 60950.1

GETTING STARTED


This chapter provides basic installation instructions, including the list of the packaging contents and also information for obtaining the best performance with the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650 phone.

Equipment Packaging

GRP261x/GRP2624/GRP263x/GRP2670/GRP2650

1 x GRP261x/GRP2624/GRP263x/GRP2670/GRP2650 Main Case. 1 x Handset. 1 x Phone Stand. 1 x Ethernet Cable. 1 x Power Adapter. 1 x Phone cord. 1 x Quick Installation Guide.


Equipment Packaging

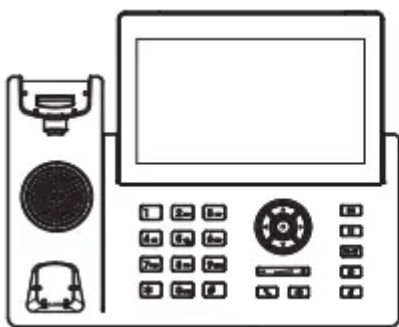

1x Phone Main Case



1x Handset

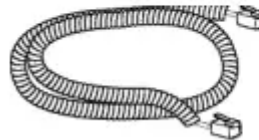

1x Phone Cord



1x Phone Stand



1x 12V Power adapter



1x Ethernet Cable




1x Quick Installation Guide

GRP261XGRP2624GRP2634GRP2636GRP2670GRP2650 Package Content GRP2670 as an example

Check the package before installation. If you find anything missing, contact your system administrator.

Connecting and Setting Up the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650

The GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650 phones can be installed on the desktop using the phone stand or attached to the wall using the slots for wall mounting.

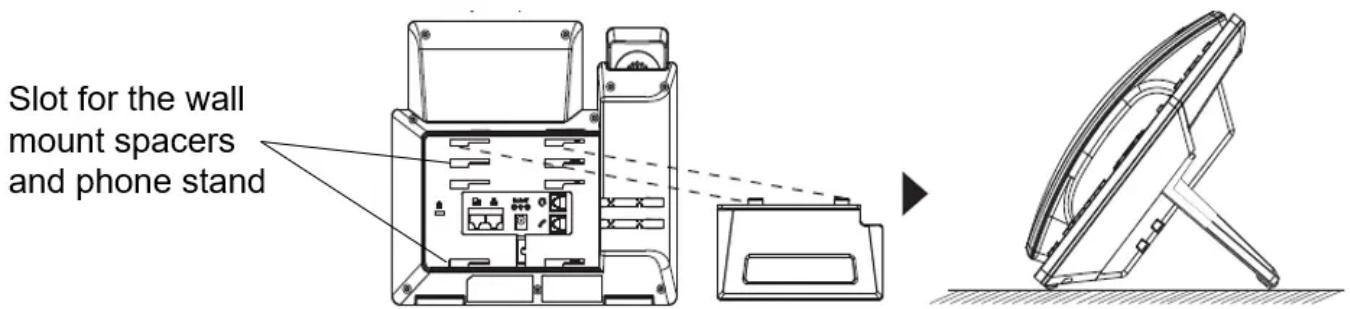


Phone Stand and Mounting Slots on the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650

Using the Phone Stand

To install the phone on the table with the phone stand, attach the phone stand to the bottom of the phone through the phone stand slot. (Upper half, bottom part).

Using the Slots for Wall Mounting

1. Attach the wall mount spacers to the slot for wall mount spacers on the back of the phone.
2. Attach the phone to the wall via the wall mount hole.
3. Pull out the tab from the handset cradle (See figure below).
4. Rotate the tab and plug it back into the slot with the extension up to hold the handset while the phone is mounted on the wall (see figure below).

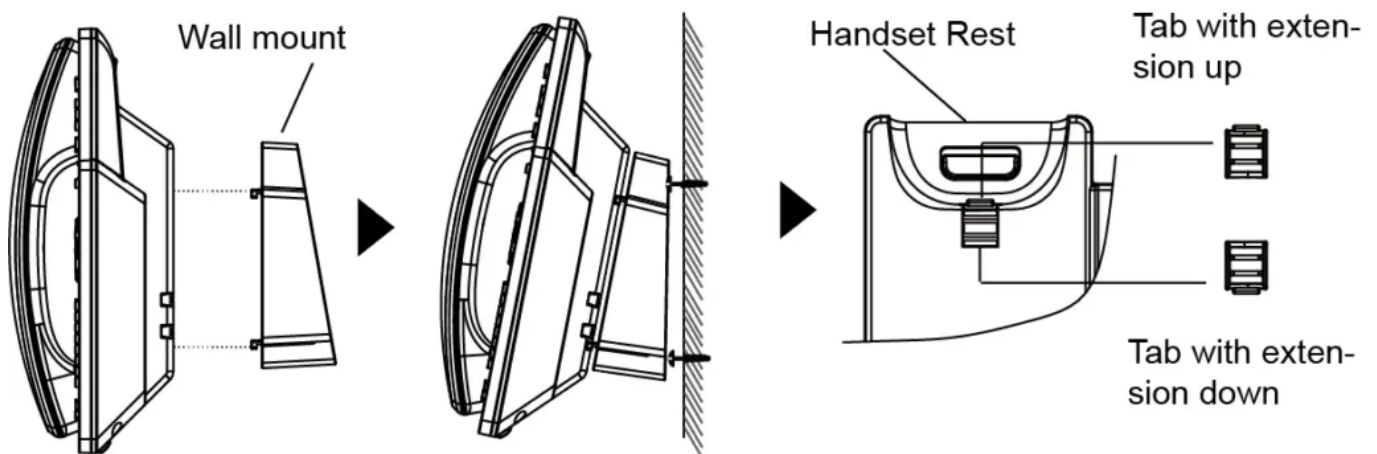


Tab on the Handset Cradle

Connecting the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650

To set up the GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650, follow the steps below:

1. Connect the handset and main phone case with the phone cord.
2. Connect the LAN port of the phone to the RJ-45 socket of a hub/switch or a router (LAN side of the router) using the Ethernet cable.
3. Connect the PSU output plug to the power jack on the phone; plug the power adapter into an electrical outlet. If a PoE switch is used in step 2, this step could be skipped.
4. The LCD will display provisioning or firmware upgrade information. Before continuing, please wait for the date/time display to show up.
5. Using the phone's embedded web server or keypad configuration menu, you can further configure the phone using either a static IP or DHCP.

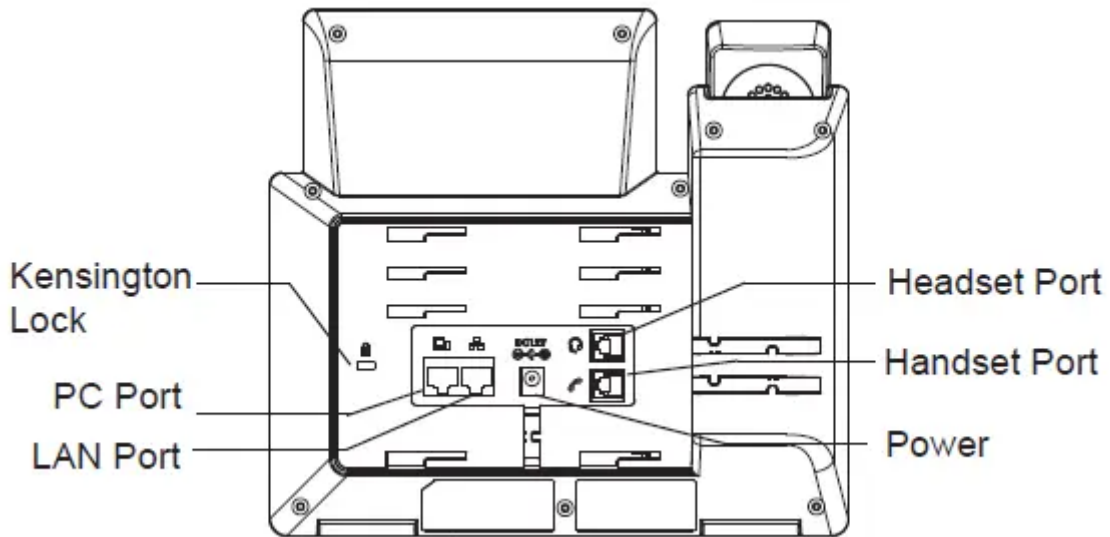

GRP261XGRP2624GRP2634GRP2636GRP2650GRP2670 Back View

- For easy deployment, GRP2612W/GRP2614/GRP2615/GRP2616/GRP2624/GRP263x/GRP2670/GRP2650 out of the box is preconfigured to connect to a default SSID named wp_master with a password (WPA/WPA2PSK) equal to **wp!987@dmín**, for this to work the following criteria needs to be met:
 1. The IP phone should not be connected by a LAN cable.
 2. No SIP account should be registered on the IP phone.
 3. SSIDs from previous connections should not be saved on the IP phone, please factory reset the unit to confirm.

Configuration via Keypad

To configure the LCD menu using the phone's keypad, follow the instructions below:

- **Enter MENU options.** When the phone is idle, press the round MENU button to enter the configuration menu.
- Navigate to the menu options. Press the arrow keys up/down/left/right to navigate to the menu options.
- Enter/Confirm selection. Press the round MENU button or "Select" Softkey to enter the selected option.
- Exit. Press "Exit" Softkey to exit the previous menu.
- **Return to Home page.**

In the Main menu, press Home Softkey to return home screen.

In the sub-menu, press and hold the "Exit" Softkey until Exit Softkey changes to Home Softkey, then release the Softkey.

- The phone automatically exits MENU mode with an incoming call, when the phone is off-hook, or the MENU mode if left idle for more than 60 seconds.
- When the phone is idle, pressing and holding the UP-navigation key for 3 seconds will display the phone's IP address, IP setting, MAC address, and software address.


The MENU options are listed in the following table.

Call History	Displays Local call logs:All Calls/Answered Calls/Dialed Calls/Missed Calls/Transferred Calls.
Status	Displays account status, network status, software version number and HardwareAccount Status: View the status of each account configured on the phone.Network Status: Press to enter the sub menu for MAC address, IP setting information (DHCP/Static IP/PPPoE), Ipv4 address, Ipv6 address, Subnet Mask, Gateway and DNS server.System Information: Press to enter the sub menu for Hardware version, P/N number. Boot, Core, Base, Prog version, IP Geographic Information, Certificates Type, Security Version, and Software Version.Provider Status: Press to view the SIP provider for each SIP account configured on the phone. If there is no SIP account configured, no information will be shown.
Contacts	Contacts sub menu includes the following options:Local PhonebookLocal GroupLDAP DirectoryContacts sub menu is for Local Phonebook, Local Group, LDAP Directory and Broadsoft Phonebooks. User could configure phonebooks/groups/LDAP options here, download phonebook XML to the phone and search phonebook/LDAP directory.
Messages	Message sub menu include the following options:- Instant Message: Displays received instant messages- Voice Mails: Displays voicemail message information in the format below: new messages/all messages (urgent messages/all urgent messages).
Preference	Preference sub menu includes the following options:- Do Not Disturb: Enables/disables Do Not Disturb on the phone.- Keypad Lock: Turns on/off keypad lock feature and configures keypad lock password. The default keypad lock password is null. If user enabled Star Key lock without configuring password, user can unlock keypad by holding * key 4 seconds and pressing "OK" button.- Sounds: Ring Tone: Configures different ring tones for incoming call.Ring Volume: Adjusts ring volume by pressing left/right arrow key- Appearance:Active LCD Brightness: Adjusts active LCD brightness by pressing left/right arrow key.Idle LCD Brightness: Adjusts idle LCD brightness by pressing left/right arrow key.Active LCD Timeout: Adjusts the minute of active backlight timeout.Screensaver: Enables/Disables Screensaver.Screensaver Timeout: Configures the minutesof idle before the screensaver activates. Valid range is 3 to 60.- MPK LCD Settings (Available on GRP2614/GRP2616 only):MPK LCD Display Order: Choose MPK LCD Display Order whether to be Sequential or AlternatingDisplay Contact on MPK LCD: Enable / Disable Display Contact on MPK Order- Language and Input: Display Language: Selects the language to be displayed on the phone's LCD. Users could select Automatic for local language based on IP location if available. By default, it is Auto.Default Input Selection: Selects the Input mode from Multi-Tap and Shiftable. By default, it is Multi-Tap. - Multi-Tap: User may tap the same key multiple times to switch to the desired character. -Shiftable: After pressing the number button, user will see the IDs of the characters that matching to the button. User can select the desired character by entering the corresponding ID on keypad.- Date Time:Allow DHCP Option 42 to override NTP serverAllow DHCP Option 2 to override NTP serverTime SettingsIt is used to configure date and time on the phone. The administrator can enable or disable the display of the year on the date on the LCD screen.- Search Mode: Specifies the phonebook search mode to QuickMatch or ExactMatch. By default, it is QuickMatch.
Phone	Phone sub menu includes the following options:SIP: Configures SIP Proxy, Outbound Proxy, SIP User ID, SIP Auth ID, SIP Password, SIP Transport and Audio information to register SIP account on the phone.Call Features:Configures call forward features for Forward All, Forward Busy, Forward No Answer and No Answer Timeout.

System	System sub menu includes the following options:- Network: Internet Protocol :Selects Prefer IPv4 / Prefer IPv6 / IPv4 only or IPv6 only. The default setting is "Prefer IPv4".IP Setting: Selects IP mode (DHCP/Static IP/PPPoE); Configures PPPoE account ID and password; Configures static IP address, Netmask, Gateway, DNS Server 1 and DNS Server 2.802.1X: Enables/Disables 802.1X mode; Configures 802.1x identity and MD5 password.Layer 2 QoS: Allows user to Enable VLAN, Configures 802.1Q/VLAN Tag and priority value. Select "Reset VLAN Config" to reset VLAN configuration.- Wi-Fi Settings (GRP2612W, GRP2614, GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only): Enables/disables Wi-Fi: Enables/disables Wi-FiScan: Enables/disables Wi-Fi- Bluetooth Settings (GRP2614/GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only): Bluetooth Status: Displays the status of BluetoothBluetooth MAC: Displays the GRP phone's Bluetooth MAC address.Power: Turns on/off the Bluetooth feature.Handsfree Mode: Enables/Disables Handsfree modeBluetooth Name: Specifies GRP phone name when discovered by other Bluetooth devices.Start Scan: Starts to scan other Bluetooth devices around the phone. If found, user could press "Pair" Softkey, and enter Pin code to pair to other Bluetooth devices.- Web Access: Web Access ModeHTTP web portHTTP's web port- Upgrade: Firmware Server: Configures firmware server for upgrading the phone.Config Server: Configures config server for provisioning the phone.Upgrade Via: Specifies upgrade/provisioning via TFTP/FTP/FTPS/HTTP/HTTPS.Start Provision: Starts Provision immediately.- Language Download: Auto Language DownloadLanguage Download- Factory Functions:Diagnostic Mode: All LEDs will light up. All keys' name will display in red on LCD screen before diagnosing. Press any key on the keypad to diagnose the key's function. When done, the key's name will display in blue on LCD. Lift and put back the handset to exit diagnostic mode.Audio Loopback: Speak to the phone using speaker/handset/headset. If you can hear your voice, your audio is working fine. Press "Exit" Softkey to exit audio loopback mode.LCD on/off: Selects this option to turn off LCD. Press any button to turn on LCD. LCD Diagnostic: Selects this option to turn off LCD. Press any button to turn on LCD. Certificate Verification: This is used to validate certificate chain for the server's certificate.- UCM Detect: Detect/connect UCM server to process auto-provision. Manually input the IP and port of the UCM server phone wants to bind with; Or select from the available UCM server in network.- Authentication: Admin Password: This is used to change the admin password for Web UI access.End User Password: This is used to change end user password for Web UI access.Settings: Turns on/off Test Password Strength feature. This will allow only passwords with some constraints to ensure better security.- Operation: Factory Reset: It is used to restore the phone to factory default settings.Ping and Traceroute: It is used to show the route taken by packets across to an URL.Alternative firmware: It is used to show current and alternative firmware versions available on the phone. Users can "rollback" to alternative firmware from this menu.
Reboot	Reboots the phone.

Configuration Menu

The following picture shows the keypad MENU configuration flow:

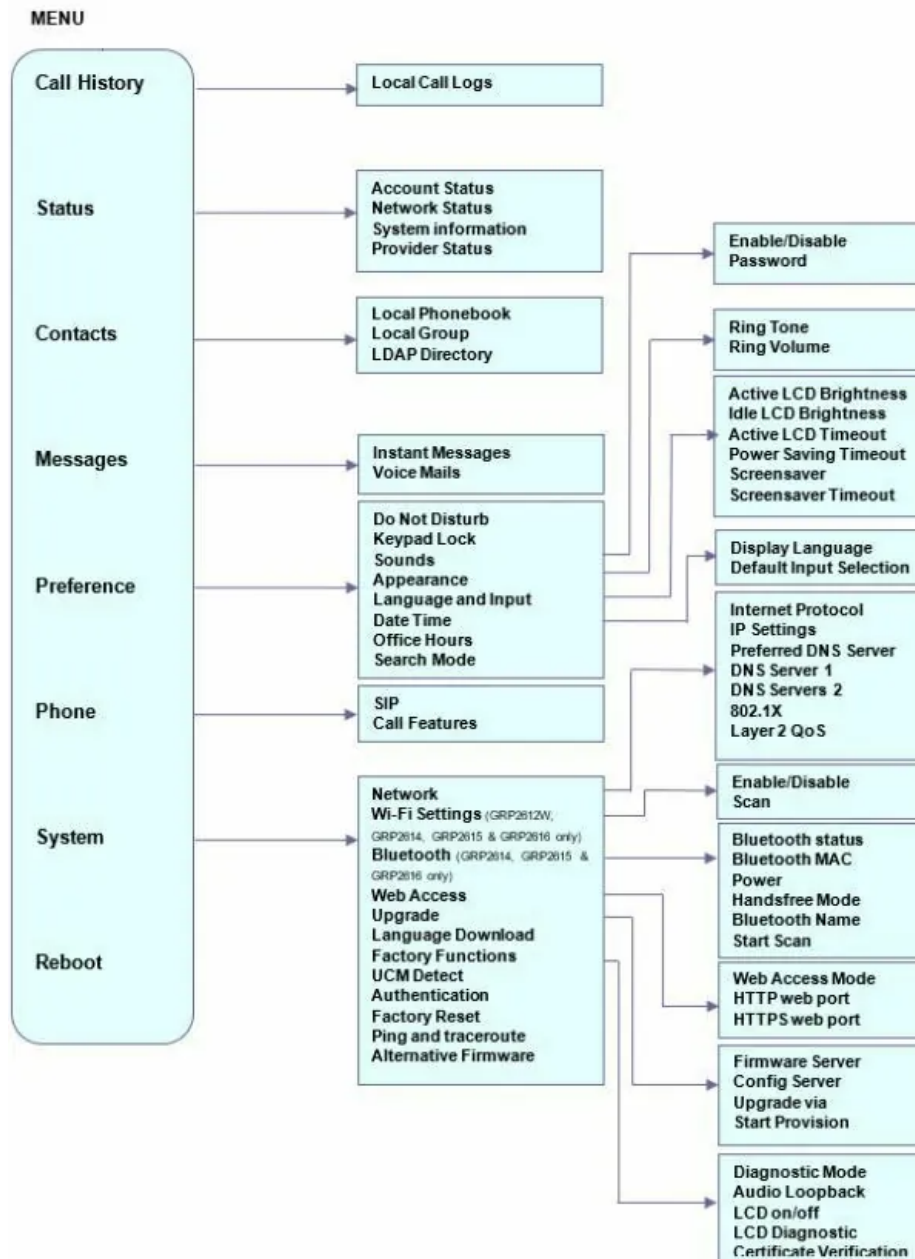

Configuration via Web Browser

The GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 embedded Web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow a user to configure the IP phone through a Web browser such as Google Chrome, Mozilla Firefox, and Microsoft Edge. To access the Web GUI:

1. Connect the computer to the same network as the phone.
2. Make sure the phone is turned on and shows its IP address. You may check the IP address by pressing and holding the UP arrow button for 3 seconds when the phone is in an idle state.
3. Open a Web browser on your computer.
4. Enter the phone's IP address in the address bar of the browser.
5. Enter the administrator's login and password to access the Web Configuration Menu.

- The computer must be connected to the same sub-network as the phone. This can be easily done by connecting the computer to the same hub or switch as the phone is connected. In the absence of a hub/switch (or free ports on the hub/switch), please connect the computer directly to the PC port on the

back of the phone.

- If the phone is properly connected to a working Internet connection, the IP address of the phone will display in Menu -> Status -> Network Status. This address has the format: xxx.xxx.xxx.xxx, where xxx stands for a number from 0-255. Users will need this number to access the Web GUI. For example, if the phone has an IP address of 192.168.40.154, please enter "http://192.168.40.154" in the address bar of the browser.

There are two default passwords for the login page:

User Level	User	Password	Web Pages Allowed
End User Level	user	123 or unit label password	Only Status and Basic Settings
Administrator Level	admin	admin or unit label password	Browse all pages

When changing any settings, always SUBMIT them by pressing the "Save" or "Save and Apply" button at the bottom of the page. If the change is saved but not applied, after making all the changes, click on the "APPLY" button on the top of the page to submit. After submitting the changes in all the Web GUI pages, reboot the phone to have the changes take effect if necessary (All the options under the "Accounts" page and "Phonebook" page do not require a reboot. Most of the options under the "Settings" page do not require a reboot).

Accessing the Web UI via LCD

To log in to the GRP261x Web UI from the LCD, please follow these steps based on the access level:

Ensure proper security settings are configured to prevent unauthorized access to the device's configuration.


Admin Login from LCD

The admin login method is used when accessing the Web UI for the first time or after a factory reset, as the default password is initially set.


1. **Access the IP Address:** Enter the phone's IP address into a web browser.
2. **Click on "Login from LCD":** This will generate a one-time access code.



Welcome to GRP2634

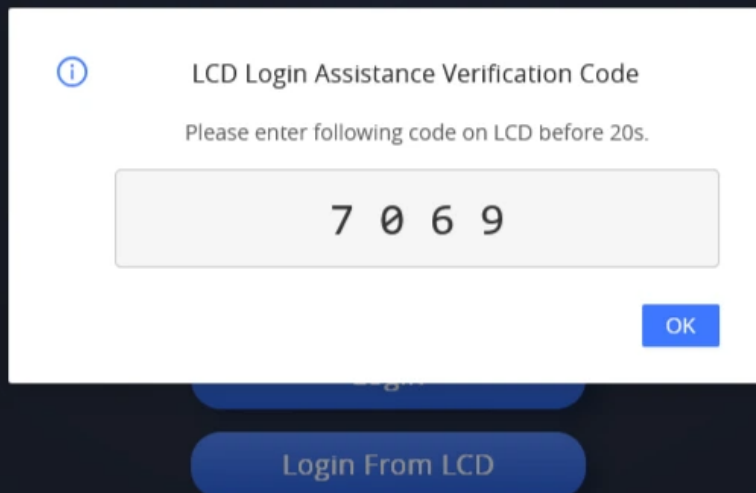

1. **Enter the Code on the LCD:** Using the phone's keypad, navigate to the login prompt on the LCD screen and enter the code.
1. **Select "AdminLogin":** Confirm the entry on the LCD to gain admin access to the web interface.

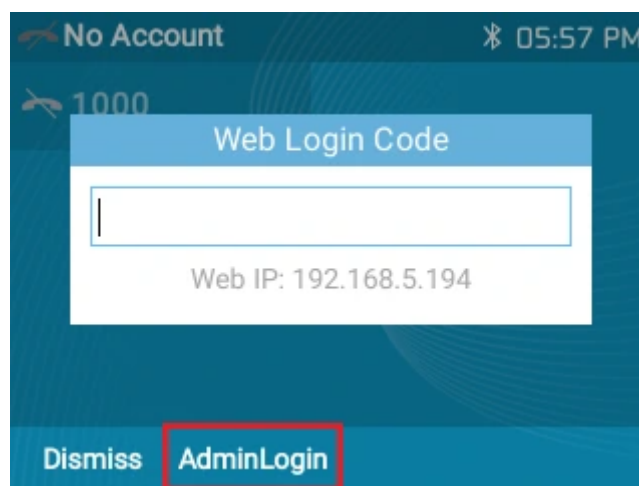

If configuration via the keypad menu is unrestricted, any user can modify all settings directly from the LCD menu with admin privileges, bypassing the web UI password requirement.

User Login from LCD

User-level access requires the option "Enable User Web Access" to be enabled in the phone's security settings (disabled by default).

The "Login from LCD" method allows authentication without a preset password, provided the user has physical access to the phone.

- 1. **Enable User Web Access:** This must first be configured in the admin settings.

Security Settings

Web/SSH Access

User Info Management

Client Certificate

Trusted CA Certificates

Keypad Lock

Test Password Strength ?

Enable User Web Access ?

New User Password ?

Confirm User Password ?

Admin Password

Current Password ?

New Password ?

Confirm Password ?

Save

- 1. **Access the IP Address:** Open the phone's IP address in a web browser.
- 2. **Click on "Login from LCD":** This will generate a one-time access code.

Welcome to GRP2634


Username

Password


Login

Login From LCD

Welcome to GRP2634

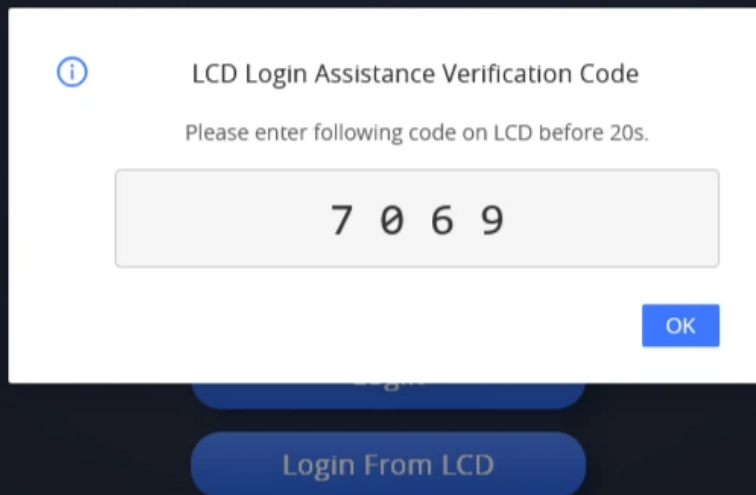

1. **Enter the Code on the LCD:** Input the displayed code using the phone's keypad on the LCD login prompt.
2. **Select "UserLogin":** Confirm the entry on the LCD to access the user-level web interface.

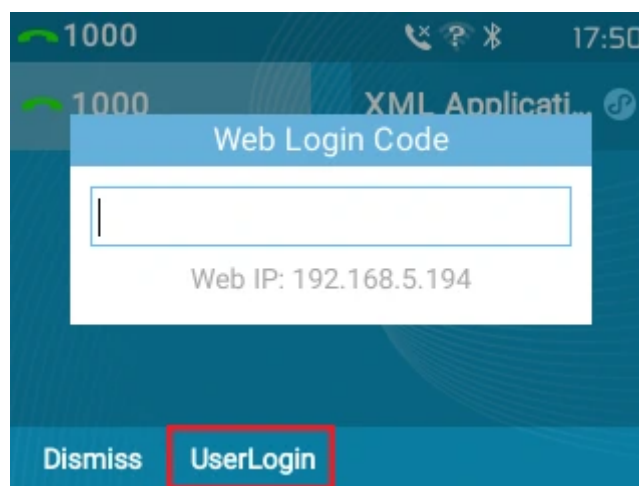

Remote Access to Web UI through GDMS

The GRP261x/GRP262x/GRP263x/GRP2650/GRP2670 IP phones introduce enhanced remote management capabilities by enabling remote access to the phone's Web UI via Grandstream Device Management System (GDMS).

Before proceeding, ensure that the target GRP26xx phone is added under "**VoIP Device**" in your GDMS

account and is running firmware version **1.0.13.21 or higher**.

VoIP Device

Refresh List

RPS Management

+ Add Device

Import Device

Export Device

Upgrade Firmware

Sync Device Local Configuration

More

All Types

All Models

Q Enter MAC/Device Name/IP

Filter

☐	MAC Address	Device Name	Device Model	Firmware Version	Account Status	Site Name	Push Configuration	Last Config Time	Options
☐	C0:74:AD:...	GRP2634	GRP2634	1.0.13.21	1000	Default	Enabled	2025/04/02 16:54	

GDMS VoIP Device Page

To remotely access the phone's web UI, hover over **"Additional Options"** and select **"Remote Access to Web UI"**.

VoIP Device

Refresh List

RPS Management

+ Add Device

Import Device

Export Device

Upgrade Firmware

Sync Device Local Configuration

More

All Types

All Models


Q Enter MAC/Device Name/IP

Filter


☐	MAC Address	Device Name	Device Model	Firmware Version	Account Status	Site Name	Push Configuration	Last Config Time	Options
☐	C0:74:AD:4B:D0:9F	GRP2634	GRP2634	1.0.13.21	1000	Default	Enabled	2025/04/02 16:54	Device Details Operation Logs Task History Edit Device Authorization Management Transfer Device Disabled Push Configuration Sync Device Local Configuration Remote Access to Web UI Reboot Device Factory Reset

Remote Access to Web UI via GDMS

A window will appear, informing you of temporary access (1 hour), and you will be redirected to the web UI.

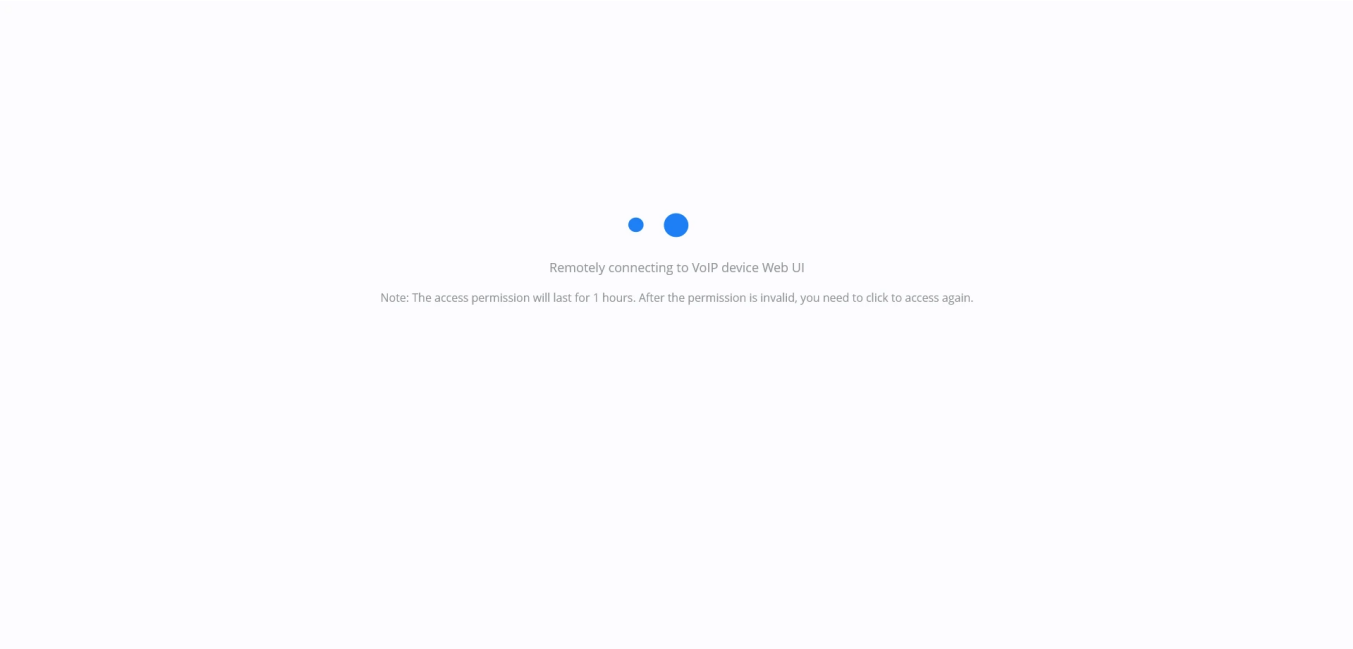


Remotely Connecting to the GRP Phone

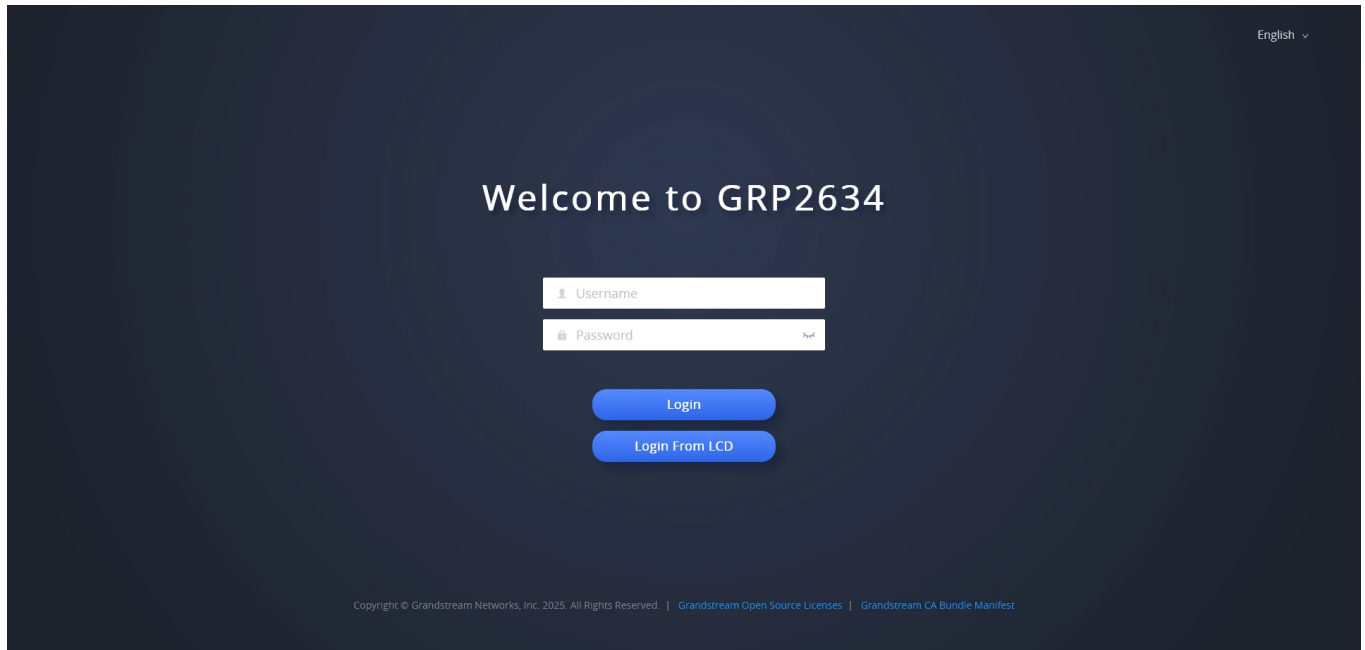

GRP2634 Web UI Login Page

During remote access from the GDMS, the icon in the screenshot below will appear on the status bar, indicating that remote access is ongoing.

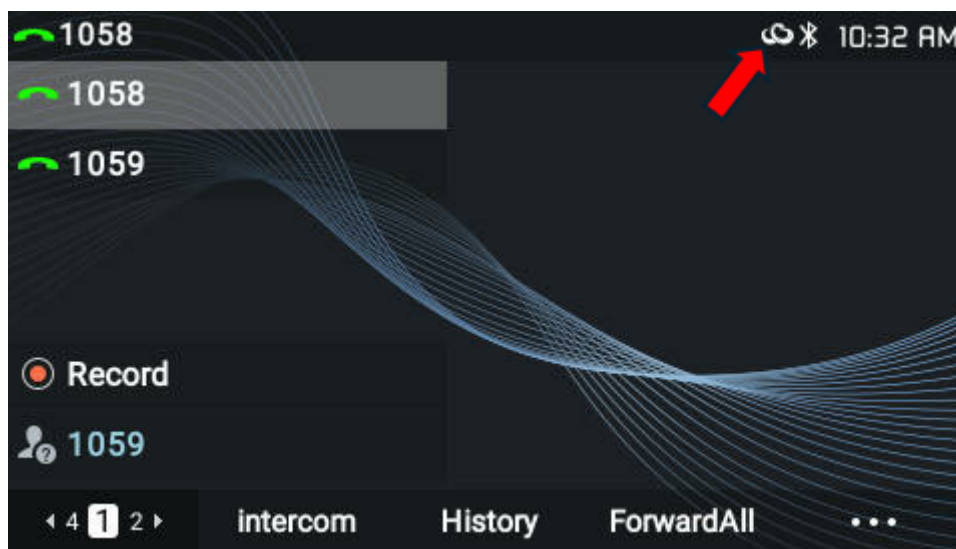

GDMS Remote Access Icon

Saving Configuration Changes

After users make changes to the configuration, pressing the "Save" button will save but not apply the changes until the "Apply" button on the top of the web GUI page is clicked. Or, users could directly press the "Save and Apply" button. We recommend rebooting or power cycling the phone after applying all the changes.

Rebooting from Remote Locations


Press the "Reboot" button on the top right corner of the web GUI page to reboot the phone remotely. The web browser will then display a reboot message. Wait for about 1 minute to log in again.

GETTING TO KNOW

GRP261X/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670

Idle Screen

GRP261X/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670 screen displays differently depending on whether the phone is idle or in use (active). The following figures show the idle screen of GRP2610/GRP2610P/GRP2611G/GRP2612/GRP2612P/GRP2612W/GRP2612G/GRP2613/GRP2614 /GRP2615/GRP2616/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670.

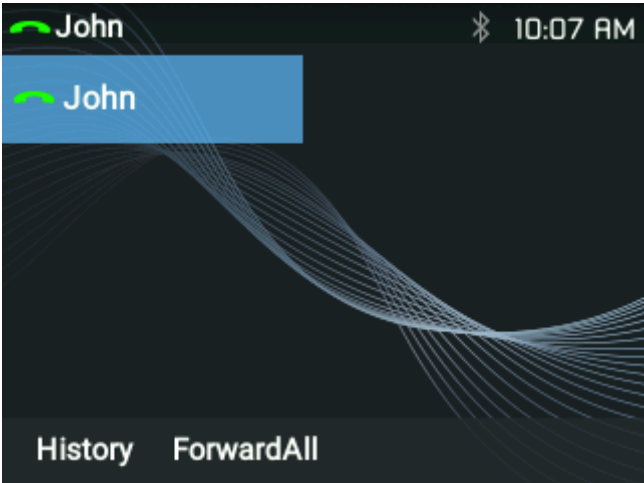

GRP261XGRP2624GRP2634GRP2636GRP2650GRP2670 Idle Screen


Date and Time	Displays the current date and time. It can be synchronized with Internet time servers. The date format can display the year, depending on the configuration of the administrator.
Network icon	Shows the status of network. It will indicate whether the network is down or starting.
Status icon	Shows the status of the phone for registration status, call features etc., using icons as shown in the next table.
Line status indicator	Displays the name of the account that is in use.
Softkeys in idle screen	The softkeys are context sensitive and will change depending on the status of the phone. Default functions assigned to softkeys are:SwitchSCR/NEXTSCR: Toggles between different idle screens: Press the most left softkey (or RIGHT/LEFT arrow buttons) to switch screens.ForwardAll: Unconditionally forwards the phone line (account 1) to another phone.MissedCalls: Shows up unanswered calls to this phone.Features: Provides access to additional phone features and functions.Redial: Redials the last dialed numberNote: A maximum of 6 programmable softkeys can be configured by the administrator.
Softkeys in call screen	The softkeys are context sensitive and will change depending on the call status of the phone. Here are the main softkeys in call screen.Redial: Redials the last dialed number after off hook when there is existed call log.Dial: Dials the call out after off hook and entering the number.Answer Call: Answers the incoming call when the phone is ringing.Reject Call: Rejects the incoming call when the phone is ringing.End Call: Ends the active call.Transfer: Transfer softkey will show up after pressing TRAN button and entering transfer target number. Press Transfer softkey to do blind transfer.Split: In attended transfer mode, after establishing the second call, press on Switch softkey to switch between the two calls.ConfCall: Conference the active callsReConf: Re-establish the conference among the calls on hold.Dial DTMF: Enter a series of DTMF digits in the Value field to be dialed during the call.

The following table describes the items displayed on the
GRP261X/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650 idle screen:


	Network Status.OFF - Network connection is upON - Network connection is down
	DND Status.OFF - Do Not Disturb disabledON - Do Not Disturb enabled
	Call Forward All Status.OFF - Call Forward All feature disabledON - Call Forward All feature enabled
	Call Forward Busy Status.OFF - Call Forward Busy feature disabledON - Call Forward Busy feature enabled
	Call Forward No Answer Status.OFF - Call Forward No Answer feature disabledON - Call Forward No Answer feature enabled
	Call Forward Busy and Call Forward No Answer Status.OFF - Call Forward All and Call Forward No Answer feature disabledON - Call Forward All and Call Forward No Answer feature enabled
	Missed Call Status.OFF - No missed callON - New missed call
	Handset Status.OFF - Handset is not in useON - Handset is in use
	Headset Status.OFF - Headset is not in useON - Headset is in use
	Microphone MUTE Status.OFF - No mutedON - Muted
	Bluetooth Status. (GRP2614/GRP2615/GRP2616/GRP2624/GRP2634/GRP2636/GRP2670/GRP2650 only)OFF - Bluetooth icon disappearsON - Bluetooth icon appearsPaired - Bluetooth icon turns bright
	Incoming Call.The current call is an incoming call
	Outgoing Call.The current call is an outgoing call
	Call On Hold.OFF - No call on holdON - Call on hold
	Call Connect.OFF - No callON - Call connected
	IP Call StatusThe current call is an IP call.
	SIP CallEnter number for initiate call. The current call is a SIP call.
	Ringtone VolumeCall screen icon.
	Ringtone Volume muteCall screen icon. The volume of ringtone is
	Energy Saving ModeShown on the top of the LCD screen if power saving mode is enabled

GRP261X/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670 LCD icons


Using the Keypad

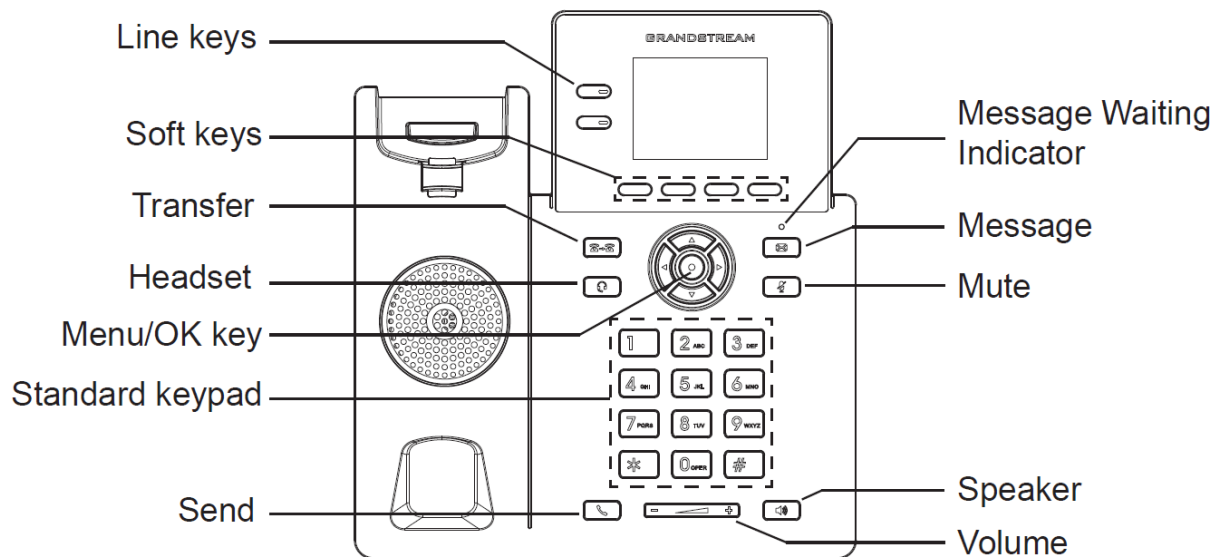


GRP2610GRP2610P Keyboard

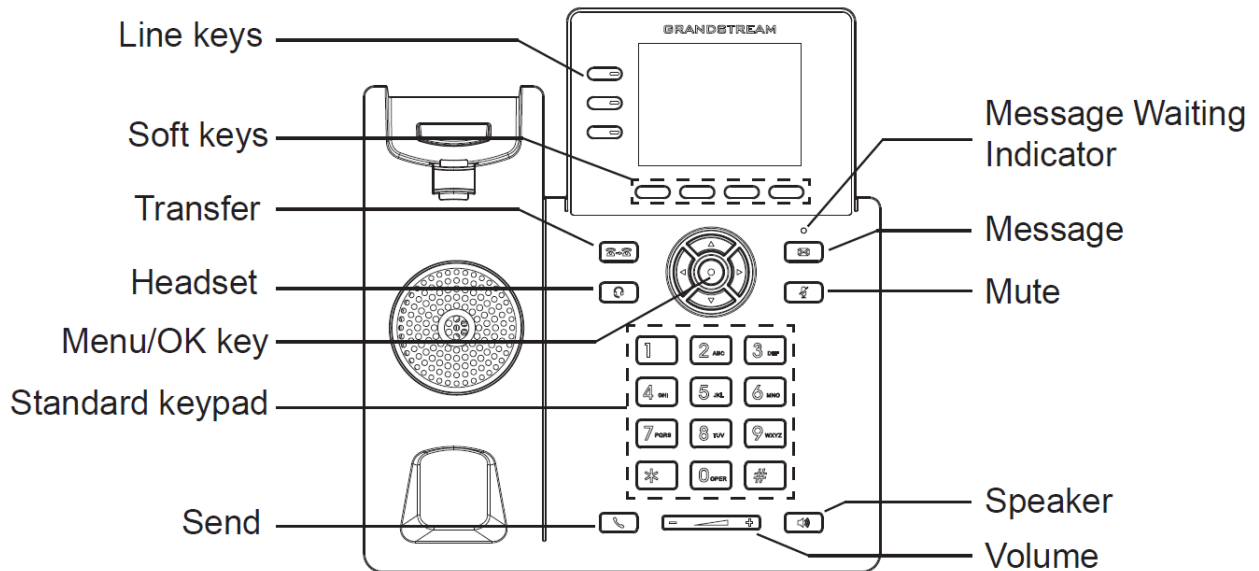


GRP2611G Keyboard

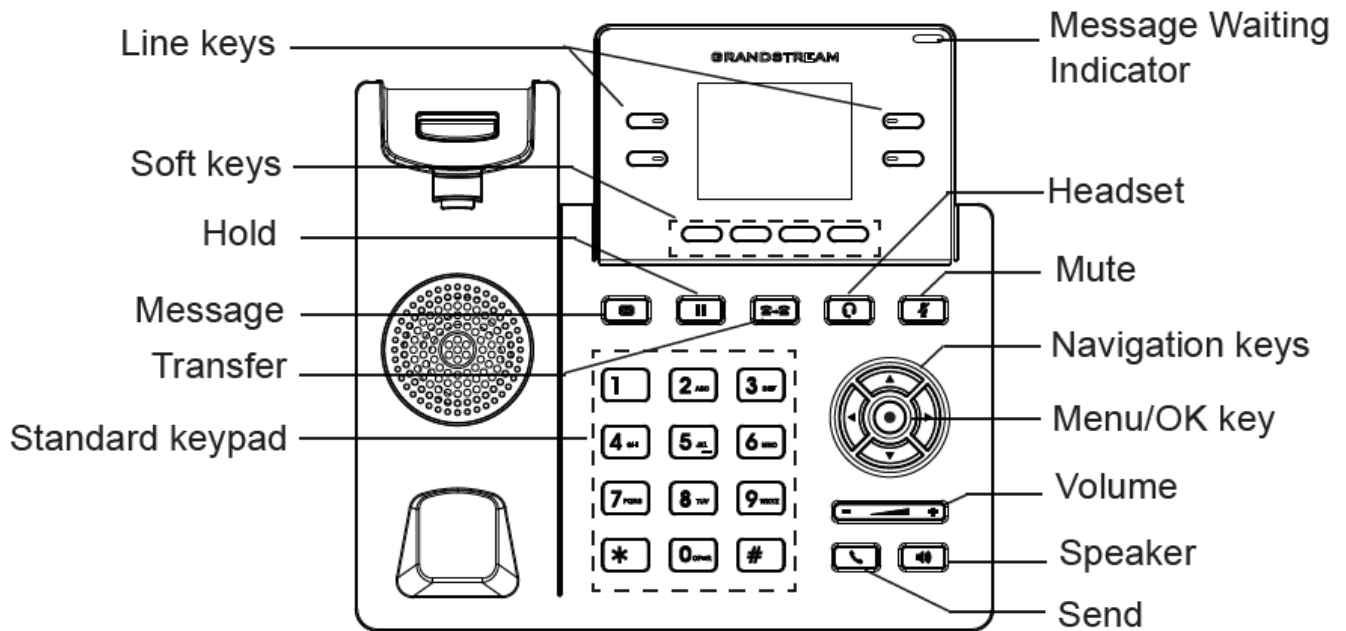


GRP2612GRP2612PGRP2612WGRP2612G Keyboard

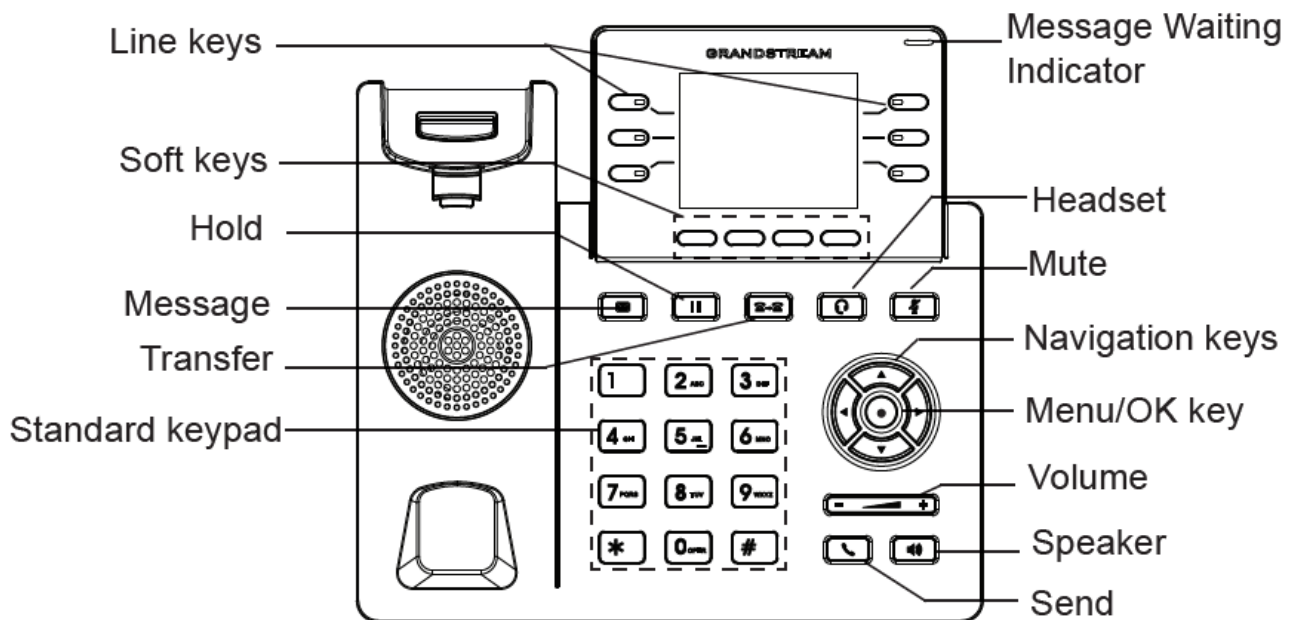


GRP2613 Keyboard

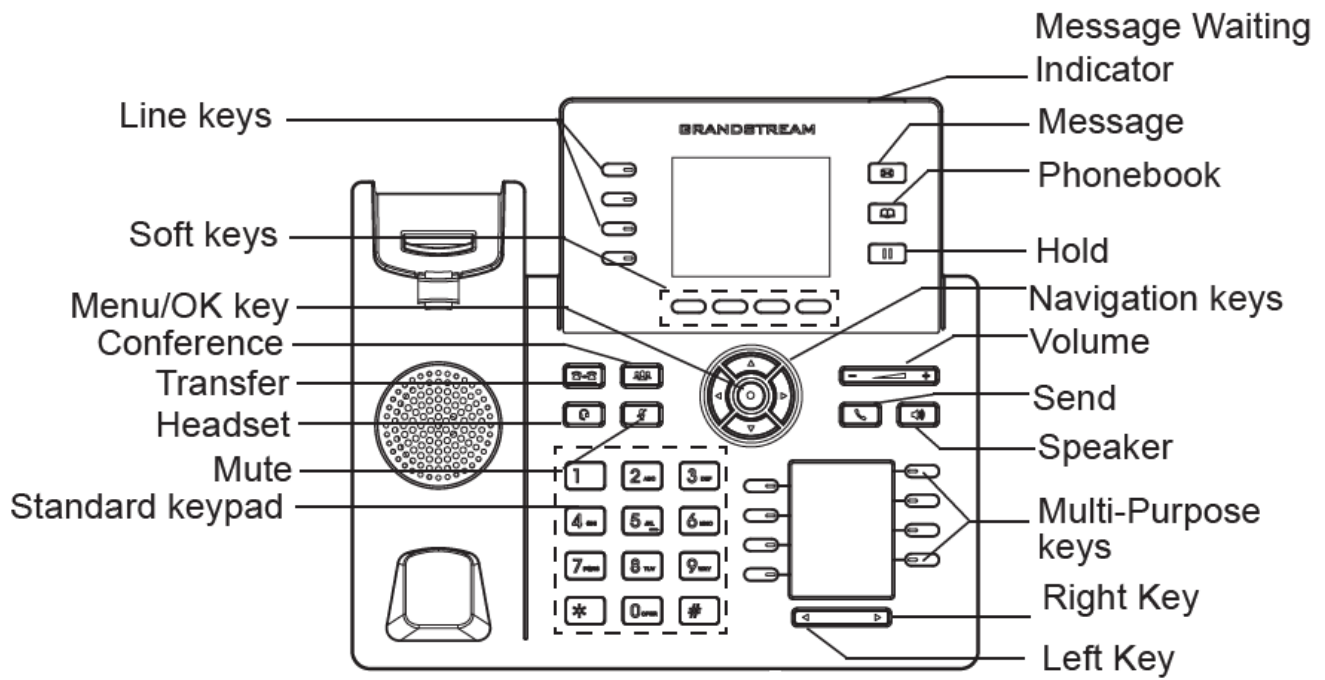


GRP2614 Keyboard

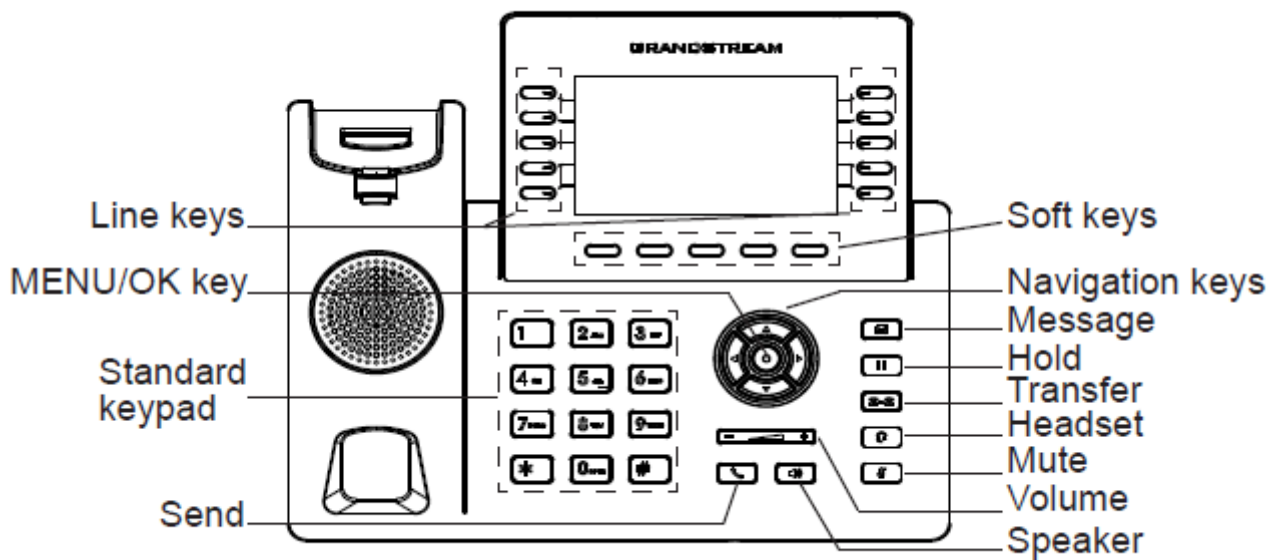


GRP2615 Keyboard

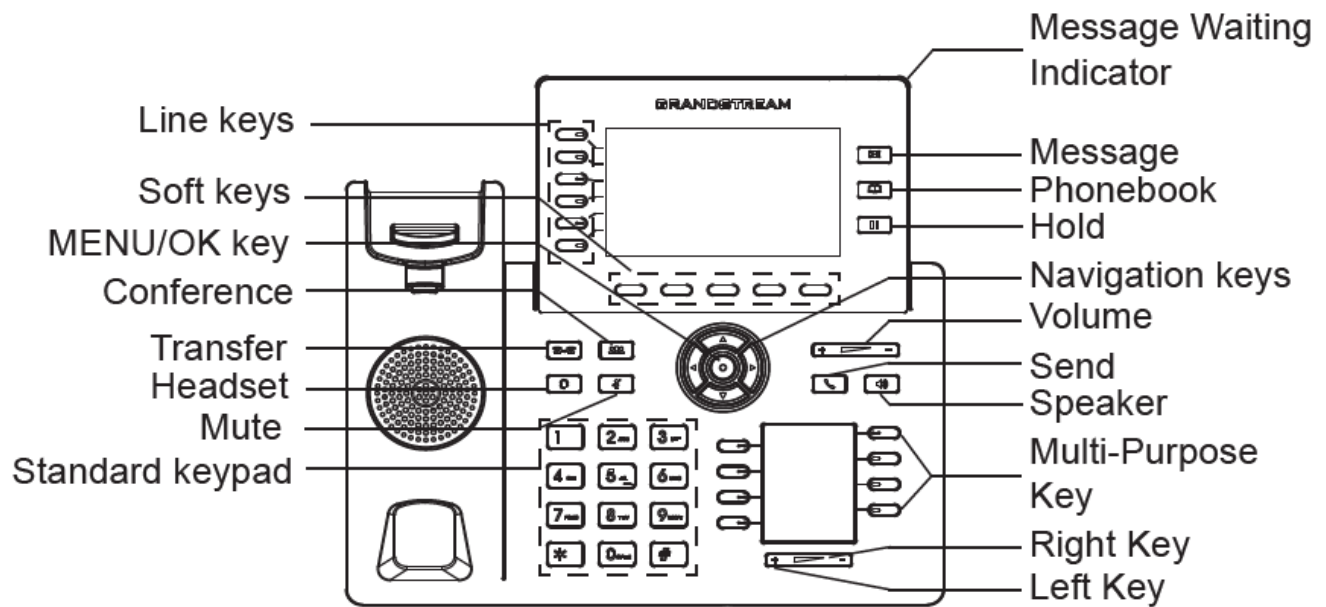


GRP2616 Keyboard

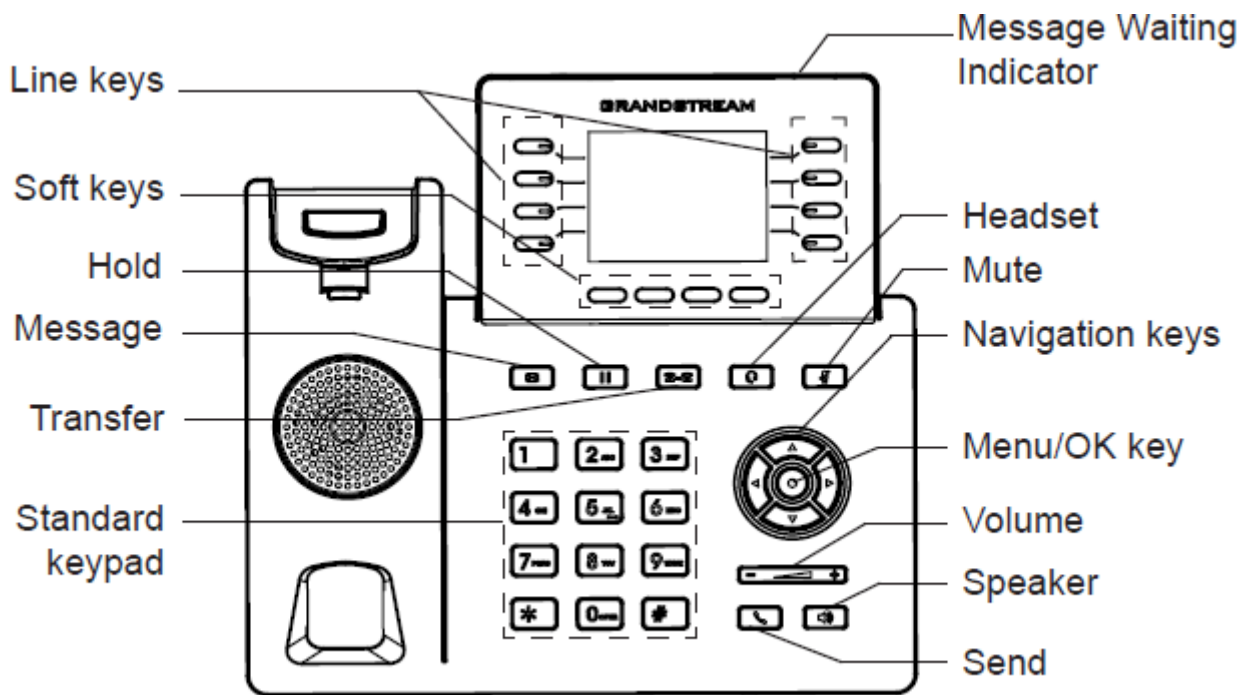


GRP2624 Keyboard

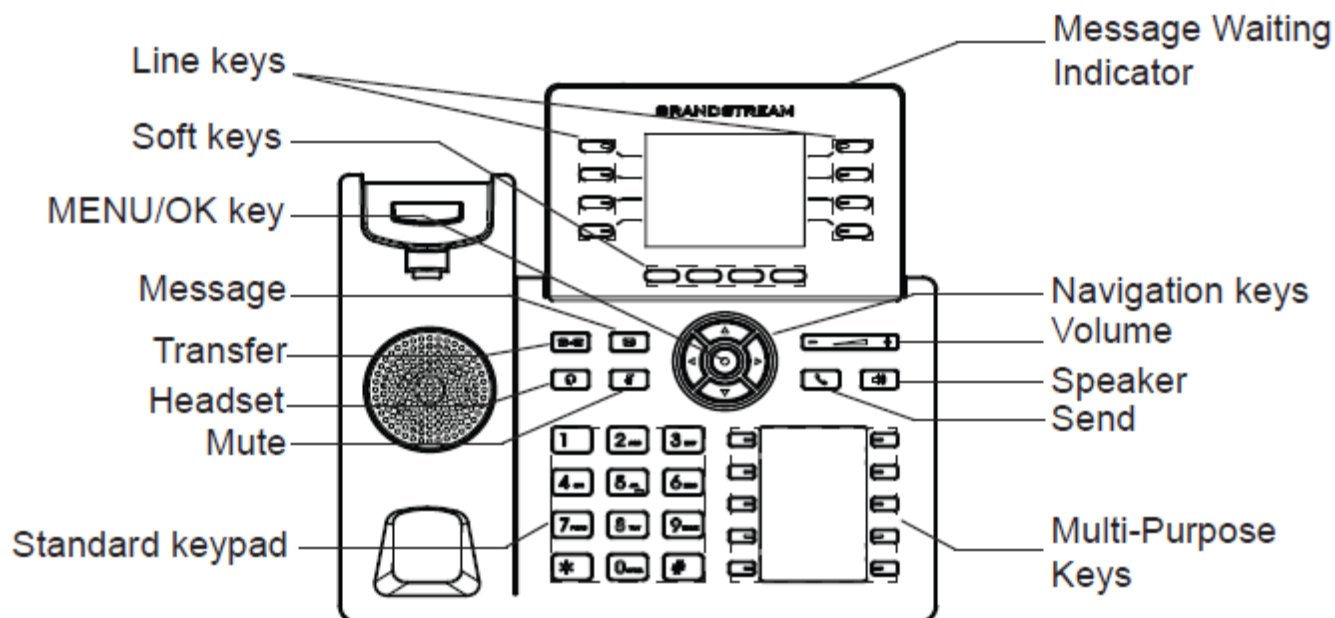


GRP2634 Keyboard

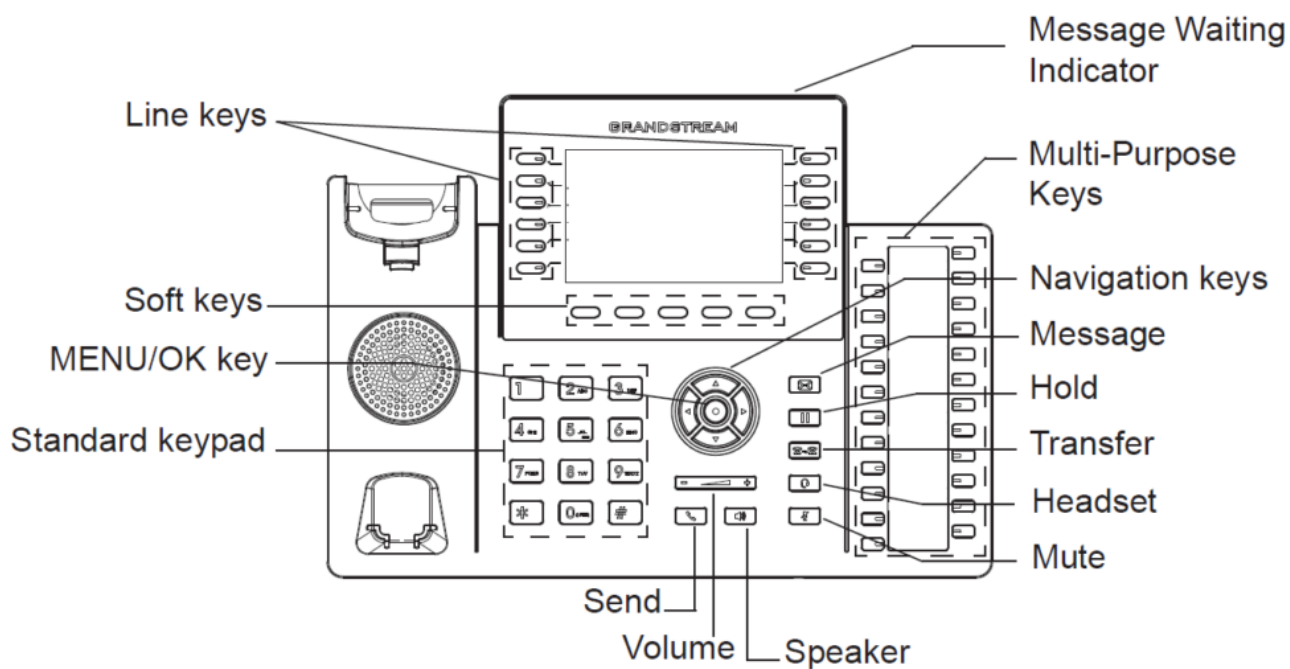

GRP2636 Keyboard

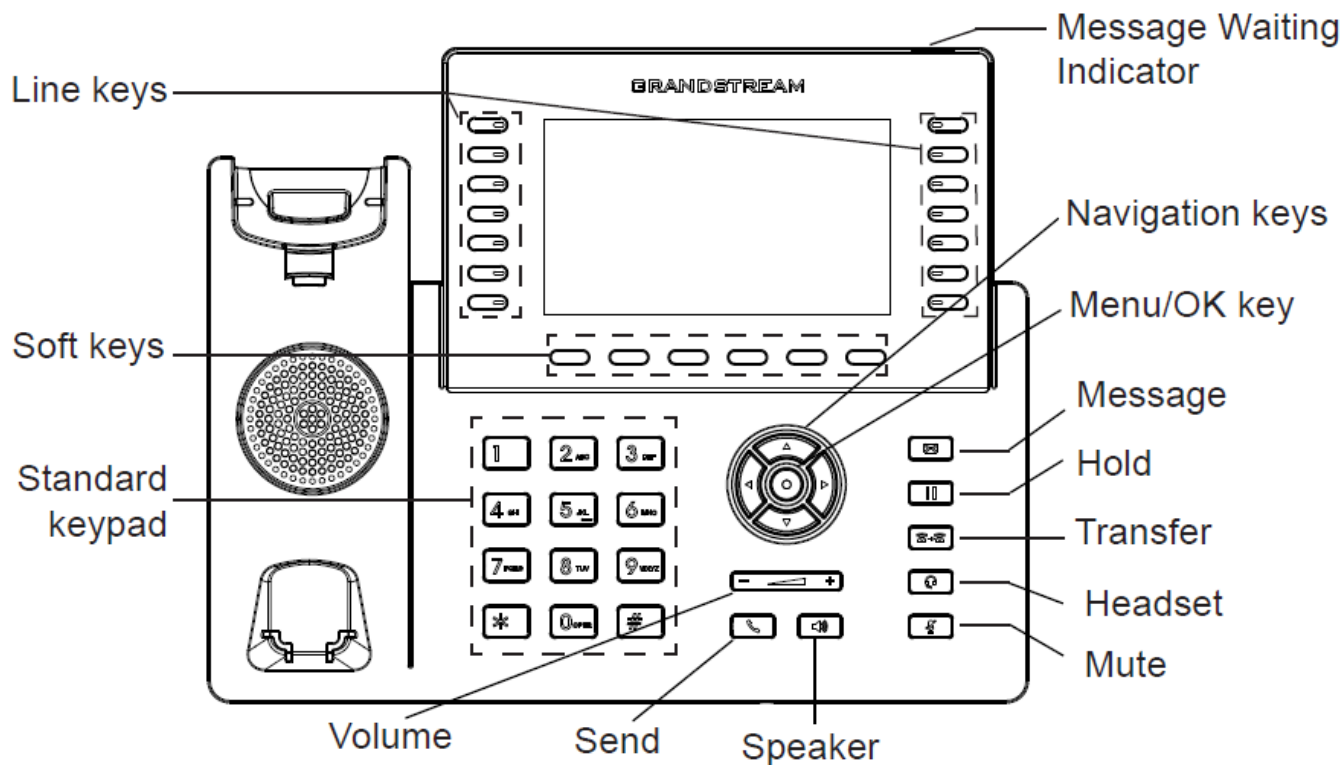

GRP2650 Keyboard

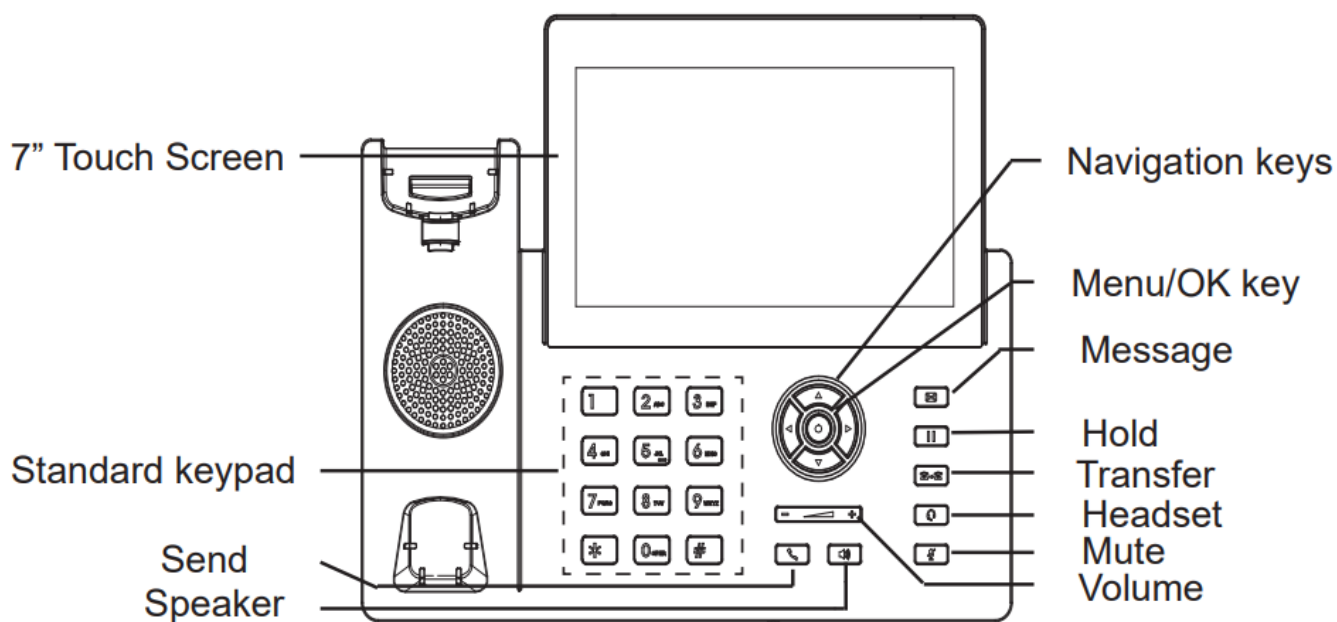

GRP2670 Keyboard

	Contacts: Press to view and edit contact information.
	Hold: Press to put call on hold or resume the call.
	Mute: During a call, Press Mute button to mute or unmute the call.
	Headset: Press to switch to headset mode
	Message: Press to view voicemail messages.
	Transfer: Press to transfer an active call to another number.
	Conference: Press to conference call.

	Speaker: Press to switch between speaker and handset mode in an active call.
	Send/Redial
	Volume: Adjust volume.
	Up Navigation key: In idle screen, press for 3 seconds to see the IP.
	MENU Button

GRP261X/GRP2624/GRP2634/GRP236/GRP2650/GRP2670 Keypad Buttons

Configuration via Keypad

To configure the LCD menu using the phone's keypad, follow the instructions below:

- **Enter MENU options.** When the phone is idle, press the round MENU button to enter the configuration menu.
- Navigate to the menu options. Press the arrow keys up/down/left/right to navigate to the menu options.
- Enter/Confirm selection. Press the round MENU button or "Select" Softkey to enter the selected option.
- Exit. Press "Exit" Softkey to exit the previous menu.
- **Return to Home page.**

In the Main menu, press Home Softkey to return home screen.

In the sub-menu, press and hold "Exit" Softkey until Exit Softkey changes to Home Softkey, then release the Softkey.

- The phone automatically exits MENU mode with an incoming call, when the phone is off-hook, or the MENU mode if left idle for more than 60 seconds.
- When the phone is idle, press and hold the UP-navigation key for 3 seconds to see the phone's IP address, IP setting, MAC address, and software address.

The MENU options are listed in the following table.


Call History	Displays Local call logs:All Calls/Answered Calls/Dialed Calls/Missed Calls/Transferred Calls.
Status	Displays account status, network status, software version number and HardwareAccount Status: View the status of each account configured on the phone.Network Status: Press to enter the sub menu for MAC address, IP setting information (DHCP/Static IP/PPPoE), Ipv4 address, Ipv6 address, Subnet Mask, Gateway and DNS server.System Information: Press to enter the sub menu for Hardware version, P/N number. Boot, Core, Base, Prog version, IP Geographic Information, Certificates Type, Security Version, and Software Version.Provider Status: Press to view the SIP provider for each SIP account configured on the phone. If there is no SIP account configured, no information will be shown.
Contacts	Contacts sub menu includes the following options:Local PhonebookLocal GroupLDAP DirectoryContacts sub menu is for Local Phonebook, Local Group, LDAP Directory and Broadsoft Phonebooks. User could configure phonebooks/groups/LDAP options here, download phonebook XML to the phone and search phonebook/LDAP directory.
Messages	Message sub menu include the following options:- Instant Message: Displays received instant messages- Voice Mails: Displays voicemail message information in the format below: new messages/all messages (urgent messages/all urgent messages).

Preference	Preference sub menu includes the following options:- Do Not Disturb: Enables/disables Do Not Disturb on the phone.- Keypad Lock: Turns on/off keypad lock feature and configures keypad lock password. The default keypad lock password is null. If user enabled Star Key lock without configuring password, user can unlock keypad by holding * key 4 seconds and pressing "OK" button.- Sounds: Ring Tone: Configures different ring tones for incoming call.Ring Volume: Adjusts ring volume by pressing left/right arrow key- Appearance:Active LCD Brightness: Adjusts active LCD brightness by pressing left/right arrow key.Idle LCD Brightness: Adjusts idle LCD brightness by pressing left/right arrow key.Active LCD Timeout: Adjusts the minute of active backlight timeout.Screensaver: Enables/Disables Screensaver.Screensaver Timeout: Configures the minutesof idle before the screensaver activates. Valid range is 3 to 60.- MPK LCD Settings (Available on GRP2614/GRP2616 only):MPK LCD Display Order: Choose MPK LCD Display Order whether to be Sequential or AlternatingDisplay Contact on MPK LCD: Enable / Disable Display Contact on MPK Order- Language and Input: Display Language: Selects the language to be displayed on the phone's LCD. Users could select Automatic for local language based on IP location if available. By default, it is Auto.Default Input Selection: Selects the Input mode from Multi-Tap and Shiftable. By default, it is Multi-Tap. - Multi-Tap: User may tap the same key multiple times to switch to the desired character. -Shiftable: After pressing the number button, user will see the IDs of the characters that matching to the button. User can select the desired character by entering the corresponding ID on keypad.- Date Time:Allow DHCP Option 42 to override NTP serverAllow DHCP Option 2 to override NTP serverTime SettingsIt is used to configure date and time on the phone. The administrator can enable or disable the display of the year on the date on the LCD screen.- Search Mode: Specifies the phonebook search mode to QuickMatch or ExactMatch. By default, it is QuickMatch.
Phone	Phone sub menu includes the following options:SIP: Configures SIP Proxy, Outbound Proxy, SIP User ID, SIP Auth ID, SIP Password, SIP Transport and Audio information to register SIP account on the phone.Call Features:Configures call forward features for Forward All, Forward Busy, Forward No Answer and No Answer Timeout.

System	System sub menu includes the following options:- Network: Internet Protocol :Selects Prefer IPv4 / Prefer IPv6 / IPv4 only or IPv6 only. The default setting is "Prefer IPv4".IP Setting: Selects IP mode (DHCP/Static IP/PPPoE); Configures PPPoE account ID and password; Configures static IP address, Netmask, Gateway, DNS Server 1 and DNS Server 2.802.1X: Enables/Disables 802.1X mode; Configures 802.1x identity and MD5 password.Layer 2 QoS: Configures 802.1Q/VLAN Tag and priority value. Select "Reset VLAN Config" to reset VLAN configuration.- Wi-Fi Settings (GRP2612W, GRP2614, GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only): Enables/disables Wi-Fi: Enables/disables Wi-FiScan: Enables/disables Wi-Fi- Bluetooth Settings (GRP2614/GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only): Bluetooth Status: Displays the status of BluetoothBluetooth MAC: Displays the GRP phone's Bluetooth MAC address.Power: Turns on/off the Bluetooth feature.Handsfree Mode: Enables/Disables Handsfree modeBluetooth Name: Specifies GRP phone name when discovered by other Bluetooth devices.Start Scan: Starts to scan other Bluetooth devices around the phone. If found, user could press "Pair" Softkey, and enter Pin code to pair to other Bluetooth devices.- Web Access: Web Access ModeHTTP web portHTTPs web port- Upgrade: Firmware Server: Configures firmware server for upgrading the phone.Config Server: Configures config server for provisioning the phone.Upgrade Via: Specifies upgrade/provisioning via TFTP/FTP/FTPS/HTTP/HTTPS.Start Provision: Starts Provision immediately.- Language Download: Auto Language DownloadLanguage Download- Factory Functions:Diagnostic Mode: All LEDs will light up. All keys' name will display in red on LCD screen before diagnosing. Press any key on the keypad to diagnose the key's function. When done, the key's name will display in blue on LCD. Lift and put back the handset to exit diagnostic mode.Audio Loopback: Speak to the phone using speaker/handset/headset. If you can hear your voice, your audio is working fine. Press "Exit" Softkey to exit audio loopback mode.LCD on/off: Selects this option to turn off LCD. Press any button to turn on LCD. LCD Diagnostic: Selects this option to turn off LCD. Press any button to turn on LCD. Certificate Verification: This is used to validate certificate chain for the server's certificate.- UCM Detect: Detect/connect UCM server to process auto-provision. Manually input the IP and port of the UCM server phone wants to bind with; Or select from the available UCM server in network.- Authentication: Admin Password: This is used to change the admin password for Web UI access.End User Password: This is used to change end user password for Web UI access.Settings: Turns on/off Test Password Strength feature. This will allow only passwords with some constraints to ensure better security.- Operation: Factory Reset: It is used to restore the phone to factory default settings.Ping and Traceroute: It is used to show the route taken by packets across to an URL.Alternative firmware: It is used to show current and alternative firmware versions available on the phone. Users can "rollback" to alternative firmware from this menu.
Reboot	Reboots the phone.

Configuration Menu

The following picture shows the keypad MENU configuration flow:

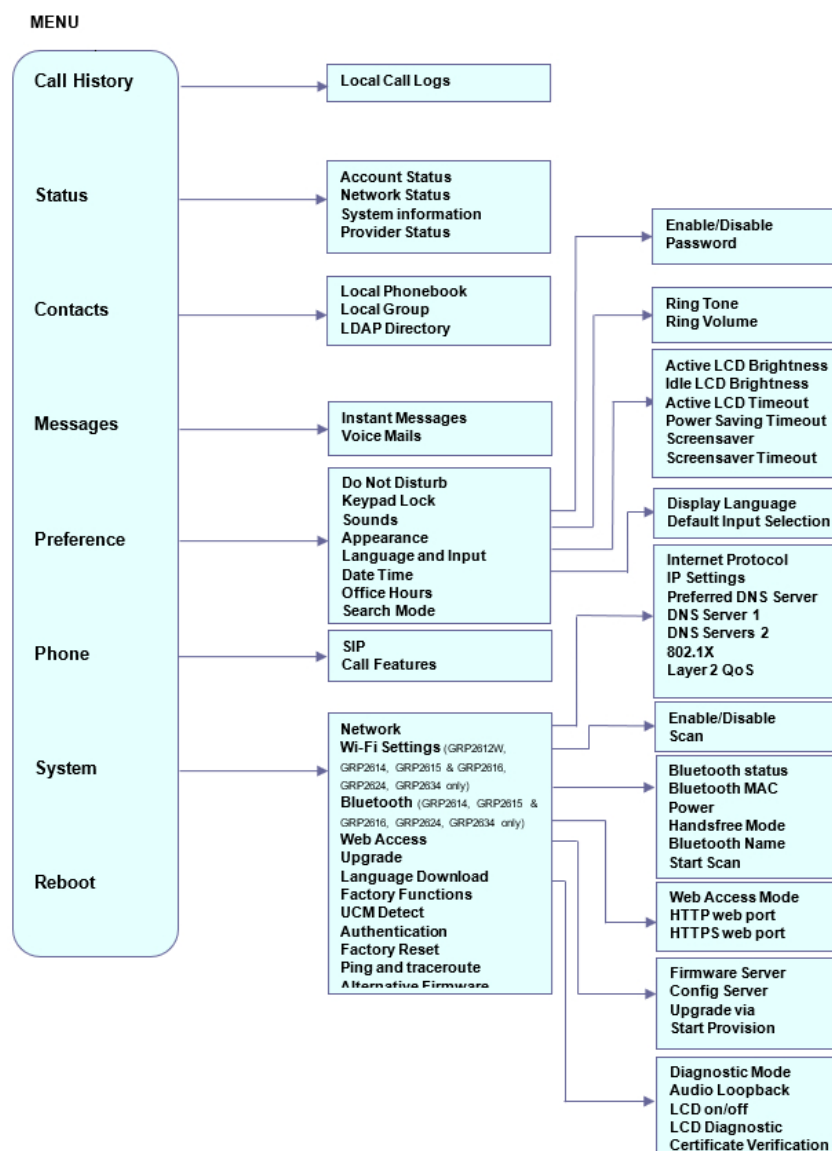

GRP261x Menu

Characters Input

The GRP261x/GRP2624/GRP263x/GRP2670/GRP2650 keypad can be used by tapping on an input field. GRP261x/GRP2624/GRP263x/GRP2670/GRP2650 keypad has 4 modes "123", "ABC", "abc" and "1Bc". The default mode is "1Bc".

If the input field is accepting only digits, only "123" mode will be available.

- **"123" Mode:** This mode allows you to enter digits and . only.
- **"ABC" Mode:** This mode allows the entry of capital letters, digits, and symbolic characters.
- **"abc" Mode:** This mode allows the entry of small letters, digits, and symbolic characters.
- **"1Bc" Mode:** This mode allows entering capital letters, small letters, digits, and symbolic characters.

The following table describes the allowed characters for each key.


Key	Description	Key	Description	Key	Description
1	1 Space . : / ' ` @ * + - = , & ? ! % () ~ _ < > { } [] ^	2	2 A B C a b c	3	3 D E F d e f
4	4 G H I g h i	5	5 J K L j k l	6	6 M N O m n o

7	7 P Q R S p q r s	8	8 T U V t u v	9	9 W X Y Z w x y z
*	*	0	0	#	#

MPK LCD

MPK LCD is available on GRP2614 & GRP2616 only.

The GRP2614/GRP2616 supports MPK LCD with 8 physical MPKs and 3 pages, allowing for configuration up to 24 fully programmable phone extensions to the phone.

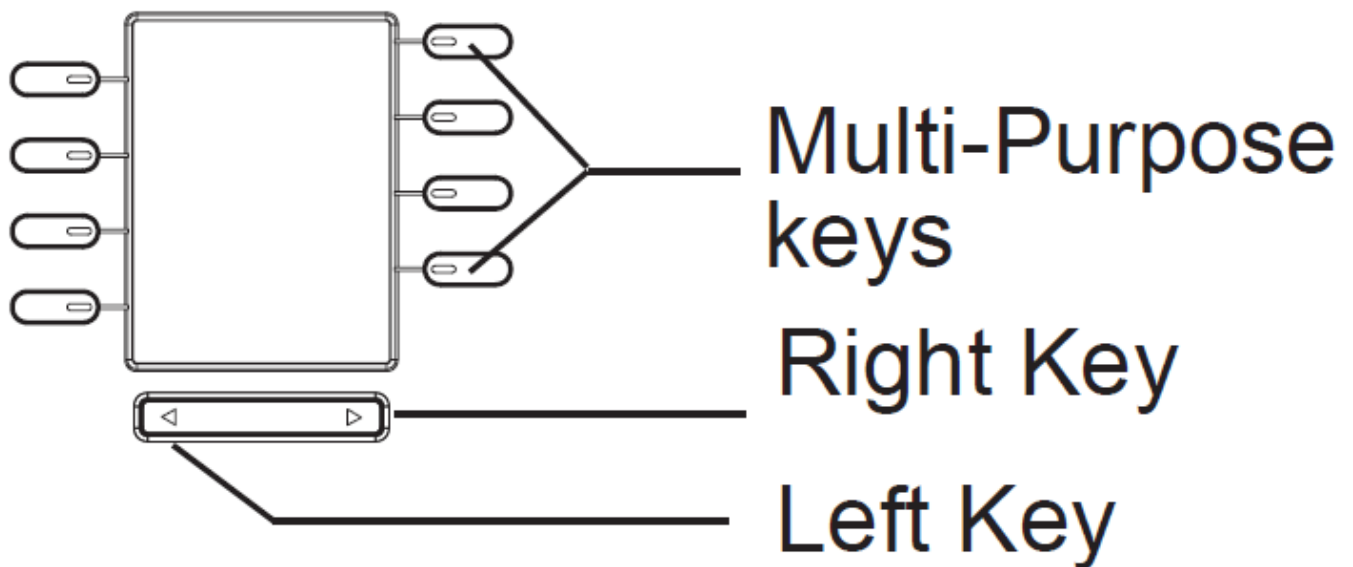

GRP2614 MPK LCD

The MPKs can be configured via:

- Web GUI **Settings** -> **Programmable Keys** -> **Physical Multi-Purpose Keys**.
- Or from the phone directly, by pressing and holding for 5 seconds the MPK button to configure. The phone LCD and MPK LCD will display related settings as shown below:

Multi Purpose Key 1	
Mode	◀ None ▶
Account	6003
Description	
Value	

Save

Phone LCD Configuration MPK1

After finishing the configuration, press the Left or Right button at the bottom to browse all the MPK's status on the different pages.

For more information, please refer to the admin guide:

<https://documentation.grandstream.com/knowledge-base/grp261x-grp262x-grp263x-series-administration-guide/>

View Phone Status

The GRP261x/GRP2624/GRP263x/GRP2670/GRP2650 series supports a built-in Status Information preview feature, which allows users to view key system and connectivity details organized by category:

- **Account Status:** Displays SIP account information, including whether each configured account is registered or not.
- **Network Status:** Shows network details such as MAC address, IP address, gateway, and DNS server.
- **System Information:** Provides hardware details, security version, software and firmware information, web access mode, IP-based geographic information such as city and time zone, as well as open-source information.
- **Provider Status:** Displays the configured SIP service provider associated with each account.


Status	
Account Status	>
Network Status	>
System Information	>
Provider Status	>



View Phone Status

To access the phone's status information:

1. Press the Menu/Ok button
2. Select the "Status" option on the Menu

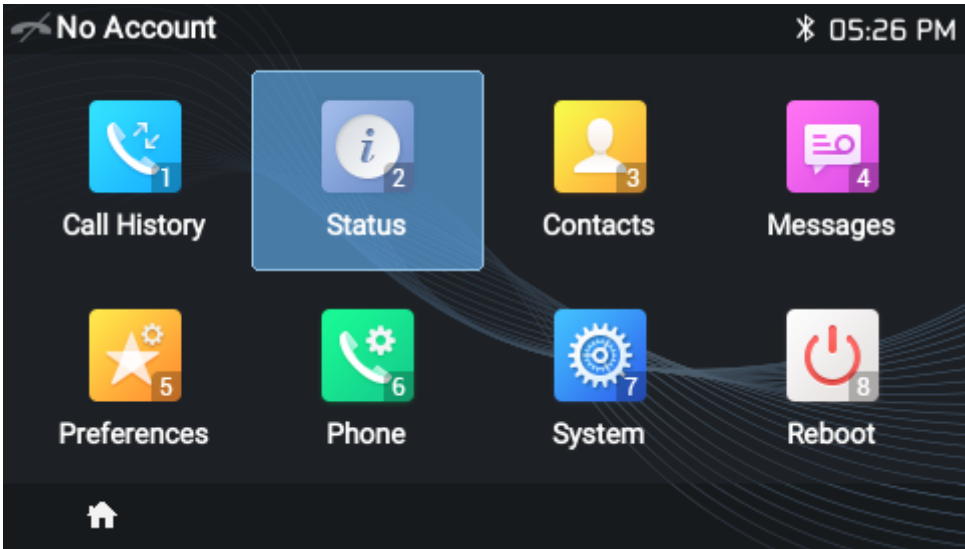

View Phone Status

TELEPHONY FEATURES

Make Phone Calls

Handset, Speaker, and Headset Mode

The GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 allows users to switch between handset, speaker, or headset when making calls. Press the Hook Switch to switch to the handset; press the Headset button to switch to the headset, or press the Speaker button to switch to the speaker.

If enabled by the administrator, the audio stream of the call can be transmitted to both the handset and the headset at the same time.

Multiple SIP Accounts and Lines

GRP2610/GRP2610P support up to 2 SIP accounts with 2 line keys; GRP2611G support up to 3 SIP accounts with 3 line keys; GRP2612/GRP2612P/GRP2612W/GRP2612G support up to 4 SIP accounts (and up to 2 accounts for legacy hardware) with 4 line keys; GRP2613 supports up to 4 SIP accounts (and up to 3 accounts for legacy hardware) with 6 line keys and GRP2614 supports up to 12 SIP accounts with 4 line keys. GRP2615 supports up to 16 SIP accounts with 10 line keys. GRP2616 supports up to 16 SIP accounts with 6 line keys, GRP2624/GRP2634 supports up to 12 SIP accounts and 8 lines, GRP2636 supports 6 SIP accounts with 12 lines, GRP2670 supports 16 SIP accounts with 12 lines, and GRP2650 supports 16 SIP accounts with 14 lines. Each account is capable of independent SIP server, user, and NAT settings. Each of the line buttons is "virtually" mapped to an individual SIP account. In the off-hook state, select an idle line, and the dial tone will be heard.

To make a call, select the line you wish to use. The corresponding LINE LED will light up in green. The user can switch lines before dialing any number by pressing the LINE buttons.

For example: If 2 independent accounts are registered on GRP261X/GRP2624/GRP263x/GRP2670/GRP2650, when LINE 1 is pressed, the LINE 1 LED will light up in green. If LINE 2 is pressed, the LINE 2 LED will light up green, and the subsequent call will be made through SIP account 2.


Incoming calls to a specific account will attempt to use its corresponding LINE if it is not in use. When the "virtually" mapped line is in use, the phone will flash the other available LINE in red. A line is ACTIVE when it is in use, and the corresponding LED is red.

- Support added for disabling the feature of selecting an account from LCD.
- When no SIP accounts are configured on the phone and Direct IP calls are disabled, a congestion tone will be played on the dial screen to indicate that outgoing calls cannot be completed under the current configuration.

Completing Calls

There are several ways to complete a call.

- **On-hook dialing.** Enter the number when the phone is on-hook and then send it out.
 1. When the phone is idle, enter the number to be dialed.
 2. Take the handset off-hook, or press the Speaker button, or press the Headset button with the headset plugged in, or select an available LINE key.
 3. The call will be dialed out.

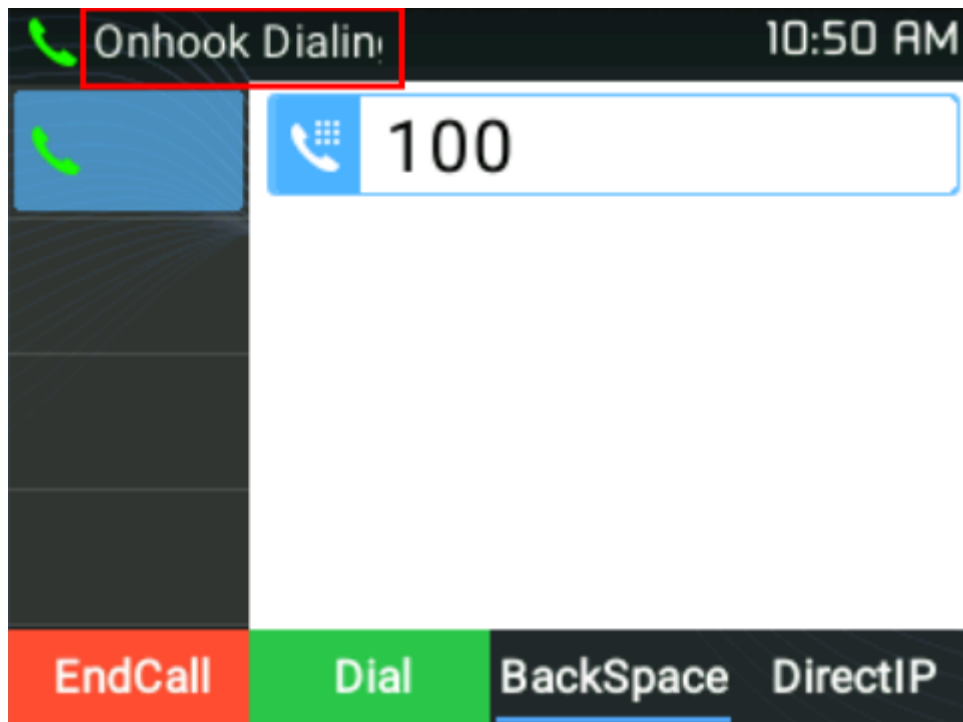

On hook dialing

- **Off-hook and dial.** Off-hook the phone, enter the number, and send it out.

1. Take the handset off-hook, or
 - Press the Speaker button; or
 - Press the Headset button with the headset plugged in; or
 - Press an available LINE key to activate the speaker.
2. You shall hear a dial tone after off-hook.
3. Enter the number.
4. Press SEND, *, or # keys to dial out.



- **Predictive dialing.** When dialing numbers, based on the entered digit or digits, the phone will predict and list the candidates of the target number.

If the target number is already saved in the phonebook, when entering the first several digits, the phone will display a list of matching numbers. If the target number appears on the list, the user could select the number using the Up/Down key and dial out. GRP261X/GRP2624/GRP2634 has a predefined call feature code (the first digit is *). When the user enters * as the first digit of the target number, the phone will list all the available feature codes.

- **Redial.** Redial the last dialed number.

1. Take the handset off-hook, or

- Press the Speaker button; or
- Press the Headset button with the headset plugged in; or
- Press an available LINE key to activate the speaker; or
- When the phone is in an idle state;

2. Press the SEND key or the REDIAL softkey.

- **Via Call History.** Dial the number logged in the phone's call history.

1. Press the MENU button to bring up the main menu, then enter Call History, or
2. Press the "History" soft key when the phone is in an idle state.
3. Select the entry you would like to call using the navigation arrow keys.
4. Press the SEND button to dial out.

- **Via Phonebook.** Dial the number from the phonebook.

1. Press the MENU button to bring up the main menu then enter Contacts; or Press the Contacts button;
2. Enter Local Phonebook/ Broadsoft Phonebook using the navigation arrow keys;
3. Select the contact you would like to call
4. Press SEND button to dial the selected contact.

Pressing the **MENU** button, users can edit the phone number and choose which account to dial that number by clicking "**Edit / Dial**" soft key.

- **Speed Dial from Line Key.** Dial the number configured as Speed Dial on Line Key.

1. Go to the phone's Web GUI **Settings -> Programmable Keys**, and configure the Line Key Mode as Speed Dial. Select the account to dial from, and enter the extension number to be dialed out in Value. Click on "Save VPK" at the bottom of the Web GUI page;
2. Off-hook the phone, or directly press the Speed Dial key to dial out.

- **Call Return.** Dial the last answered call.


1. Go to the phone's Web GUI **Settings -> Programmable Keys**, and configure the Line Mode as Call Return. Select the account to dial from. No Value must be set for Call Return.
2. Off-hook the phone, or directly press the Call Return key to dial out.

- **Via Paging/Intercom.**

1. Take the handset off-hook, or

- Press the Speaker button; or

- Press the Headset button with the headset plugged in; or
Press an available LINE key to activate the speaker.
- 2. You shall hear a dial tone after off-hook.
- 3. Press the MENU button to switch from "Dialing" to "Paging" (top left of the LCD screen);
- 4. Enter the number.
- 5. Press SEND, * or # keys to dial out.

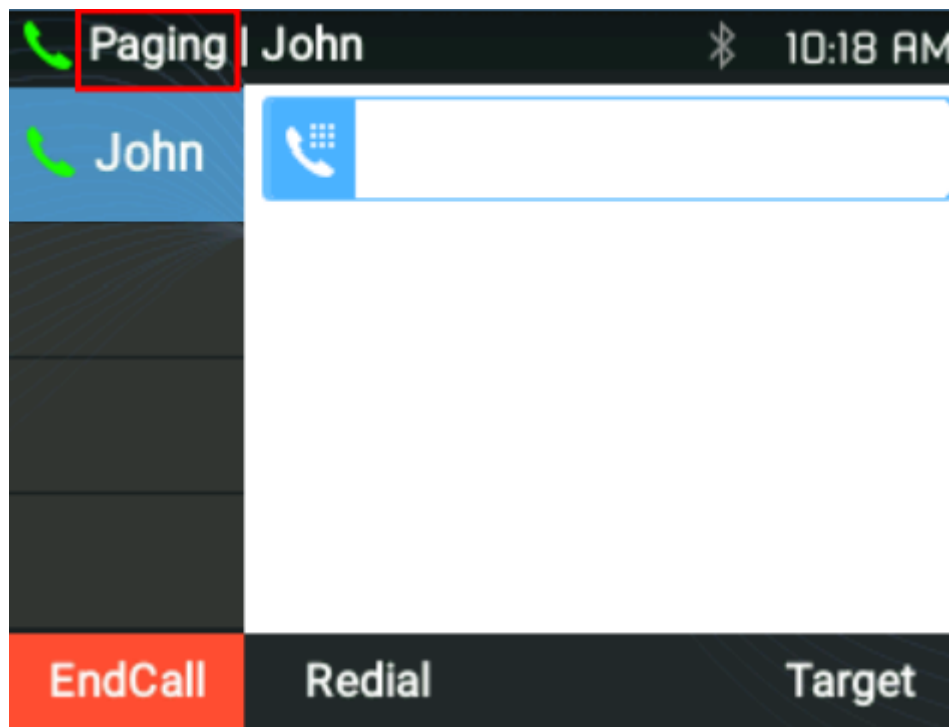

Call using PagingIntercom

- After entering the number, the phone waits for the No Key Entry Timeout (Default timeout is 4 seconds, configurable via Web GUI) before dialing out. Press SEND or # key to override the No Key Entry Timeout;
- If digits have been entered after taking the handset off-hook, the SEND key will work as SEND instead of showing the history of Dialed extensions;
- By default, # can be used as SEND. Users could disable it by setting "User # as Dial Key" to "No" from Web GUI **Account X -> Call Settings**.
- For Paging/Intercom, if the SIP Server/PBX supports the feature and has the Paging/Intercom feature code set up already, users do not necessarily need to switch to paging mode on the call screen. Simply dial the feature code with the extension as a normal call.
- When a call is dialed out via paging, users can see the "call-info" header contains "answer-after=0" and "the **alert-info**" header contains "**info=alert-autoanswer;delay=0**" in the outgoing INVITE.
- During an active call, users can see the call info on LCD:
 - The call lasting time
 - Contact information if the number is already saved in the phonebook.
 - When dialing DTMF, the user can press the round Menu button to switch to the call info page.
- It is possible to mute the call at the dialing stage by composing a number, dialing the call, and pressing the mute button before the call is answered.

Making Calls Using IP Addresses

Direct IP Call allows two phones to talk to each other in an ad-hoc fashion without a SIP proxy. VoIP calls can be made between two phones if:

- Both phones have public IP addresses; or
- Both phones are on the same LAN/VPN using private or public IP addresses; or
- Both phones can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

To make a direct IP call, please follow the steps below:


1. When the phone is at an idle state, press any number key or * key to bring up "On-hook Dialing" page;
2. Press round MENU key or "DirectIP" softkey
3. Input the target IP address (Please see the example below);
4. Press the "**Dial**" softkey to dial.

When completing direct IP call, "Use Random Port" option should be set to "No".

For example:

If the target IP address is 192.168.1.60 and the port is 5062 (i.e., 192.168.1.60:5062), input the following: 192*168*1*60#5062. The * key represents the dot (.), and the # key represents the colon (:).

When only dialing the IP address (example: 192*168*1*60) the call will automatically go through the default port 5060.

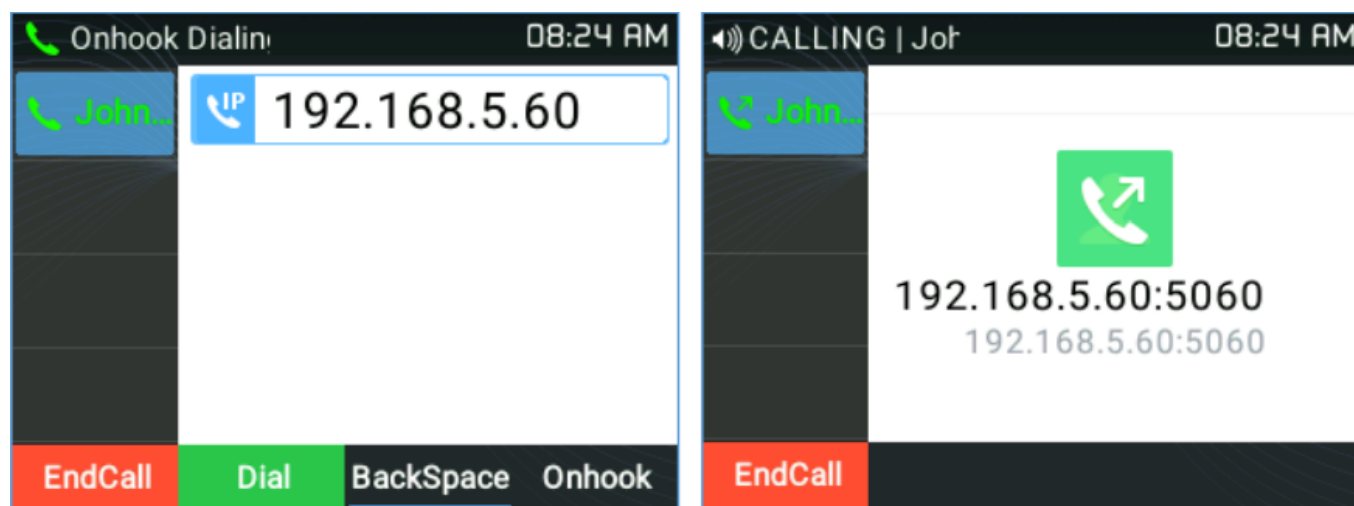

Direct IP Call

Making Calls using SIP URI/Hostname

This feature allows GRP26xx IP phones to place and receive direct SIP calls to other devices using **SIP URIs** (e.g., sip:user@domain.com) or **hostnames** (e.g., server.example.net) directly from the contact book. It integrates DNS resolution and IP-based call setup, enabling seamless VoIP communication without requiring a SIP server or registration.

Users can input SIP URIs or hostnames as primary contact numbers via:

- **LCD Menu:** Manual entry under **Contacts -> Local Phonebook**.
- **WebGUI:** Bulk upload via XML (field: <phonenumber>sip:user@domain.com</phonenumber>).

Local Phonebook	
Title	
Favorite	☐
Company	
Department	
Job	
☒ Work	example.com
☐ Home	
← BackSpace abc Save	

Add Contact to Local Phonebook

GRP2650

English
admin

Status
Accounts
Phone Settings
Network Settings
Programmable Keys
System Settings
Maintenance
Application
Web Service
XML Application
Contacts
LDAP
Enterprise Directory
Remote Phonebook
Call History
External Service

Contacts
Group Management
Phonebook Management

Enable Phonebook XML Download
Disabled

HTTP/HTTPS Username

HTTP/HTTPS Password

Phonebook XML Server Path

Phonebook Download Interval
0

Remove Manually-edited Entries on Download
☒

Import Group Method
Replace

Sort Phonebook by
Last Name

Download XML Phonebook
Download

Upload XML Phonebook
Upload


Phonebook Key Function
Default

Default Search Mode
Quick Match

Replace Duplicate Items
No


Upload XML Phonebook

After the contact is added, users can select the contact in phonebook and press dial softkey.

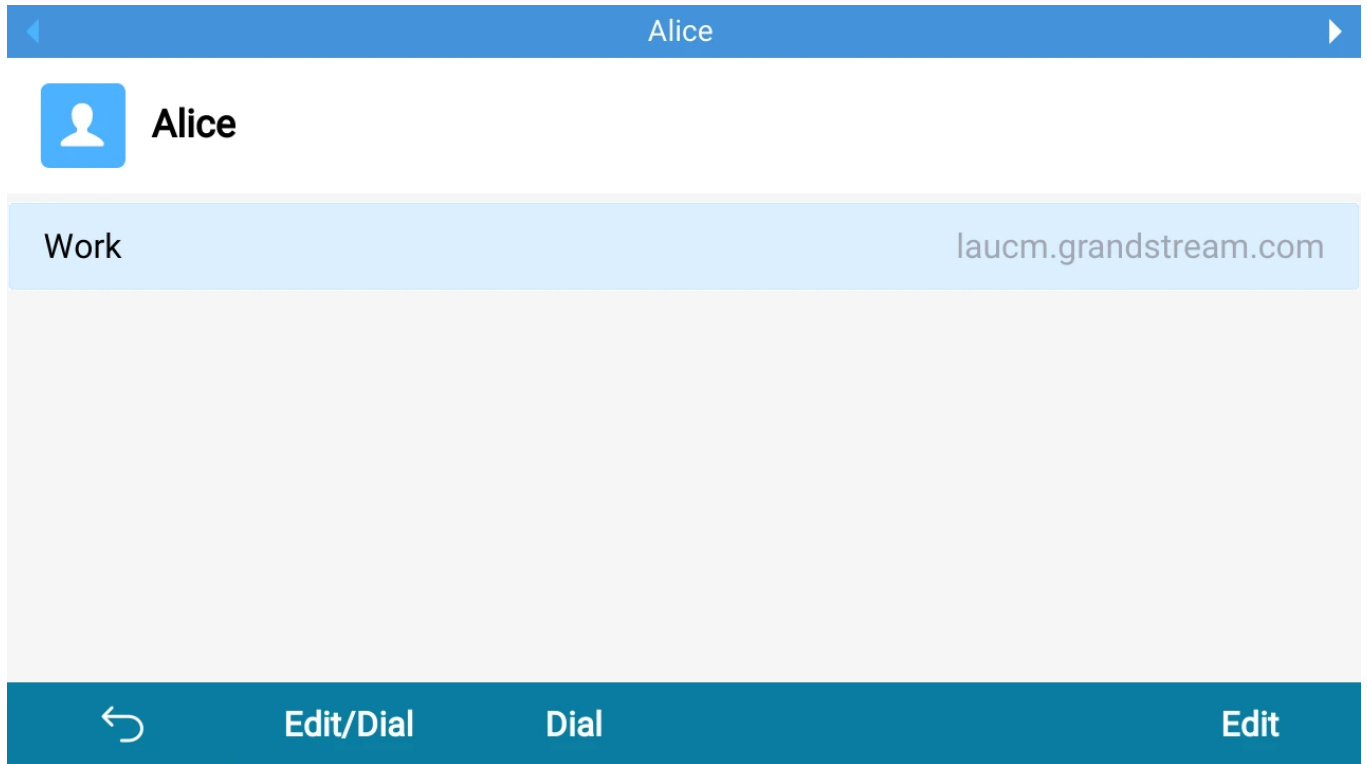

Phonebook Contact Information

After pressing the dial key, an IP call will be established to the IPv4 address resolved using the hostname.

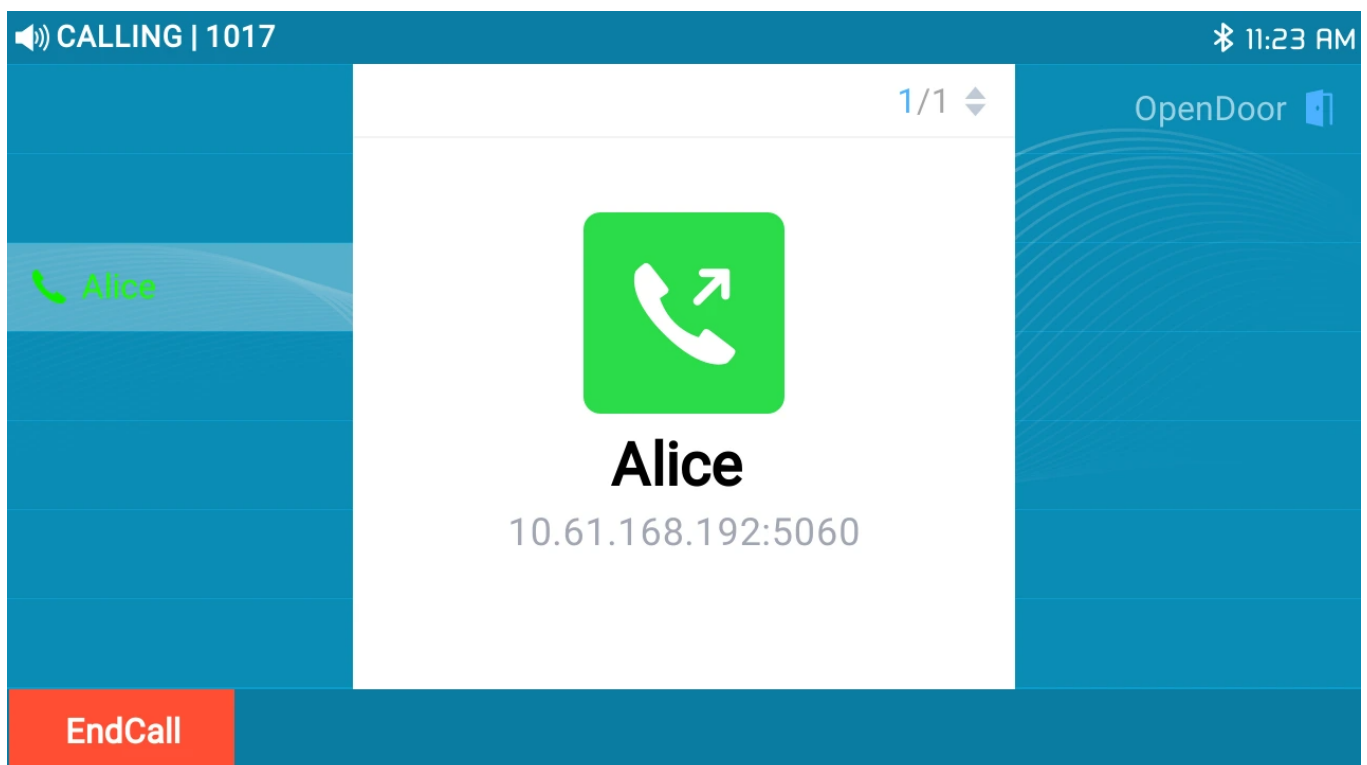

Established Call

Answering Phone Calls

Receiving Calls

- **Single incoming call.**


The phone rings with the selected ringtone. The corresponding LINE key will flash in red. Answer call by

taking the handset off-hook, or using Speaker/Headset, or pressing the flashing LINE key;

Users can choose when receiving a call to either ring from their headset, ring from both headset and the speaker, or only ring from the speaker. This option can be enabled from the Web GUI under **Settings -> Preferences -> Audio Control**, and configure **"Always Ring Speaker"**.

- Multiple incoming calls.

When another call comes in while having an active call, the phone will produce a Call Waiting tone (stutter tone). The other LINE key will flash in red. Answer the incoming call by pressing the flashing LINE key. The current active call will be put on hold automatically.

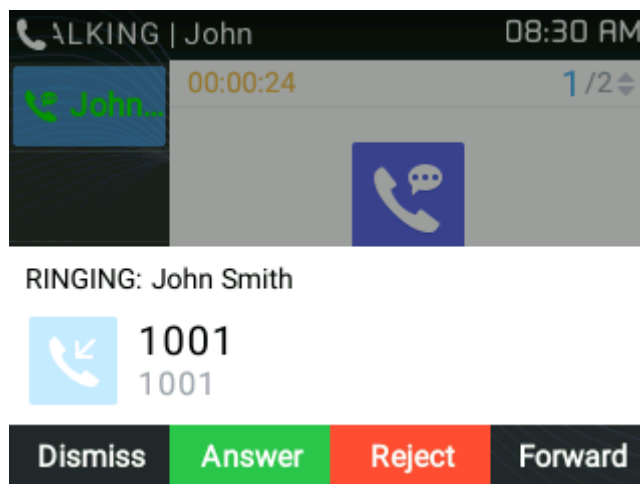

Multiple Incoming Calls

- When there is an ongoing call, users can disable the incoming call notifications pop-up. This way, users will not get disrupted by unexpected pop-up calls but still get notified by the flashing LED. This option can be enabled from the Web GUI under **Settings -> Call Features**. For further information, please refer to the admin guide.
- The user can send DTMF while there is a call waiting on the screen.
- The user can send out star codes to the SIP Server while being able to use local call features via LCD.

- Ring Group Call

If the phone is a member of a Ring Group when the SIP server receives a call to the Ring Group extension, all the phones will start ringing. Once a phone answers the call, a missed call notification will be shown on all the other phones. The GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 Series support reason header, which allows the phones not to log a missed call if it is answered elsewhere. The following message will be included in the CANCEL SIP message received by phone to notify the user that another user has answered the call.

Reason: SIP; cause=200;text="Call completed elsewhere"

Do Not Disturb

Do Not Disturb can be enabled/disabled from the phone's LCD by following the steps below:


1. Press the Menu button and select **"Preference"** using navigation keys.
2. Press the Menu button again to get into the Preference options.
3. When "Do Not Disturb" is highlighted, press the Left/Right key to disable/enable DND;
4. Press the **"Save"** softkey to save the change

Users could also enable/disable DND quickly by pressing the Mute button



Do Not Disturb

- The mute button function can be set also to idle Mute, or be disabled under the web GUI option **Settings -> Call features -> Mute Key Function While Idle**.
- During an active call, press the MUTE button to mute/unmute the microphone. The LCD will show the Mute icon on the top of the screen when the call is muted.

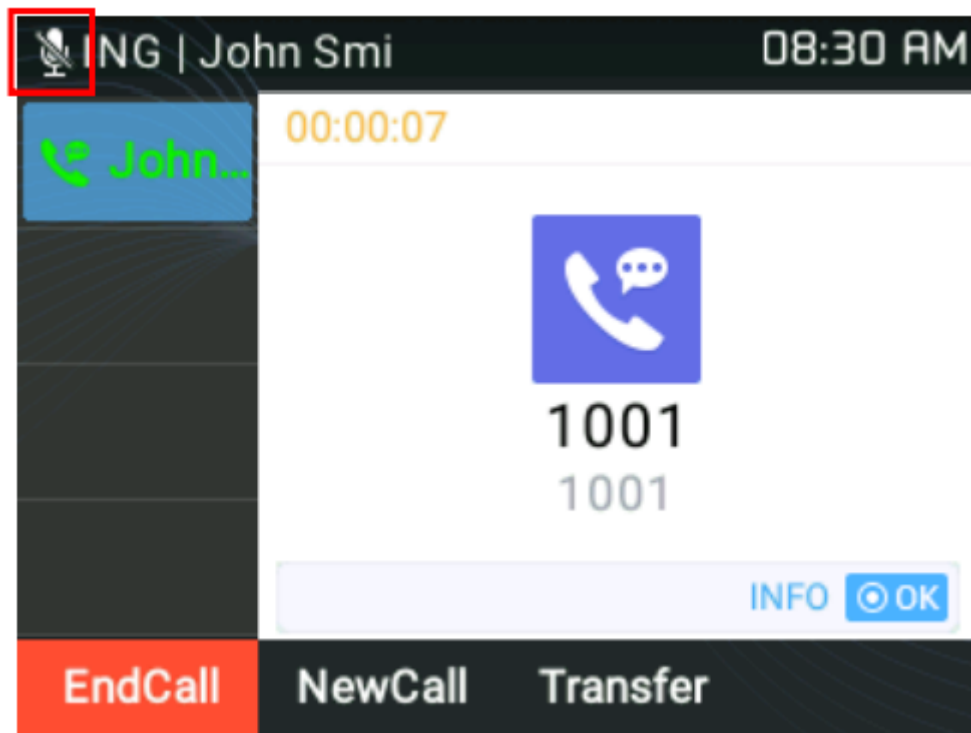

Call Mute

- **Block/Allow listing:** If the contact number belongs to the Blocklist group, the call from that number will always be blocked. If the contact number belongs to the Allowlist group, the call will be allowed even in DND mode.

This can be configured from the web GUI, under **Application -> Contacts** by adding a user into either the "Blocklist" or "whitelist" group, as shown below:

Add Contact
✕

First Name

Last Name

Favorite ☐

Company

Department

Job

Job Title

Work

Blocklist

Home

Allowlist

Blacklist

Whitelist

Accounts

Company

Groups

Ringtone

No Ringtone

Picture

Select

Cancel

Save

BlockAllow List from Web GUI

Or from the phone's LCD under **Menu -> Contacts -> Local Phonebook** as shown below:

Local Phonebook

☐ Mobile

Account Auto

Ringtone No Ringtone

Groups

◀ ☐ Allowlist ▶

⏮

Check

Save

Local Phonebook

☐ Mobile

Account Auto

Ringtone No Ringtone

Groups

◀ ☐ Blocklist ▶

⏮

Check


Save

BlockAllow List from LCD

Call Hold

Place a call on hold by pressing the HOLD button . The active LINE key will blink in green.

- If "**On Hold Reminder Tone**" is enabled under the web GUI **Account X-> Call Settings** then a reminder tone will be played to notify the user that he has a call on hold.
- **Resume**. Resume call by pressing the blinking LINE key.
- **Multiple calls**. Automatically place the active call on hold or switch between calls by pressing the LINE key. The call waiting tone (stutter tone) will be audible on a new incoming call during the active call.
- **Call hold duration**. The phone will show the call hold duration as shown in the figure below. The hold duration will be displayed only if there are two calls on hold or more, and the user can use the up/down arrows to check the hold duration of each call.
- **End call**. Users can end the call without having to resume it first.

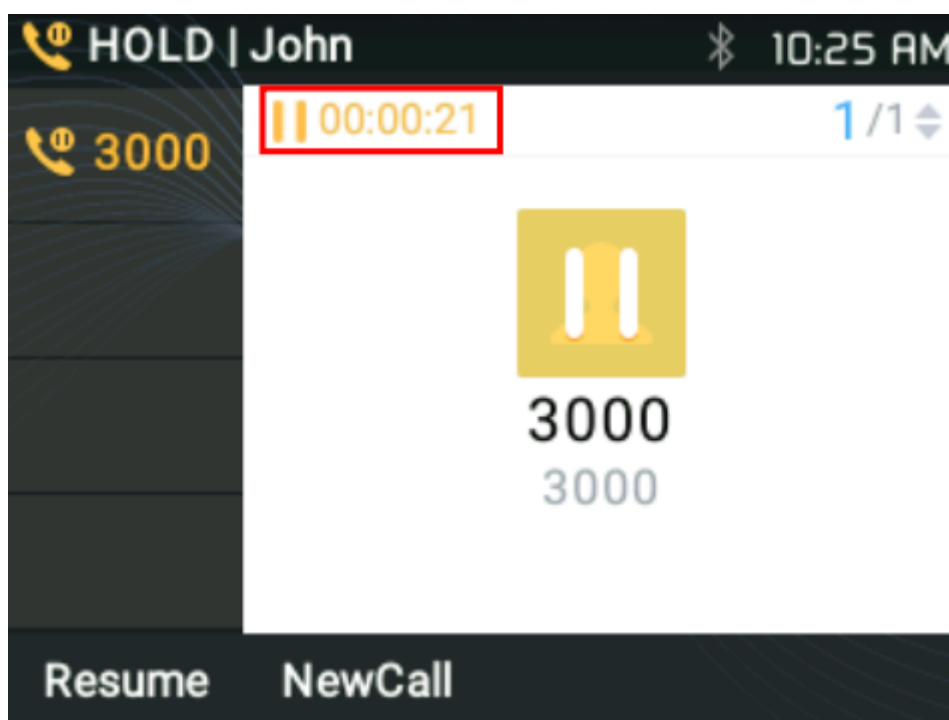

On hold duration

Call Transfer

GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 series support Blind Transfer and Attended Transfer. This feature can be disabled from the web GUI menu under **Settings -> Call features -> Disable Transfer**.

- **Blind Transfer:**

1. During the first active call, press TRANSFER and dial the number to transfer to.
2. Click "Blind Transfer" softkey to complete the transfer of the active call.

- **Attended Transfer:**

- When set to "**Static**"

1. During the first active call, open a new LINE
The first call will be automatically put on hold
2. Enter the number for the second call in the new line and establish the call.
3. Press TRANSFER;
4. Press the other LINE key, which is on hold, to transfer the call.


- When set to **"Dynamic"**

1. During the first active call, press TRANSFER.
2. A new line will be brought up, and the first call will be automatically placed on hold.
3. Dial the number and press **"AttTrnf"** soft key to make a second call.
4. Press TRANSFER again. The call will be transferred.



Dynamic Attended Transfer

When attended transfer is initiated during the transfer process, after dialing out the number for the second call. If the second call is not established yet (ringing), pressing "Cancel" will hang up the second call. If the second call is established (answered), pressing "Split" will resume the second call and keep the first call on hold.

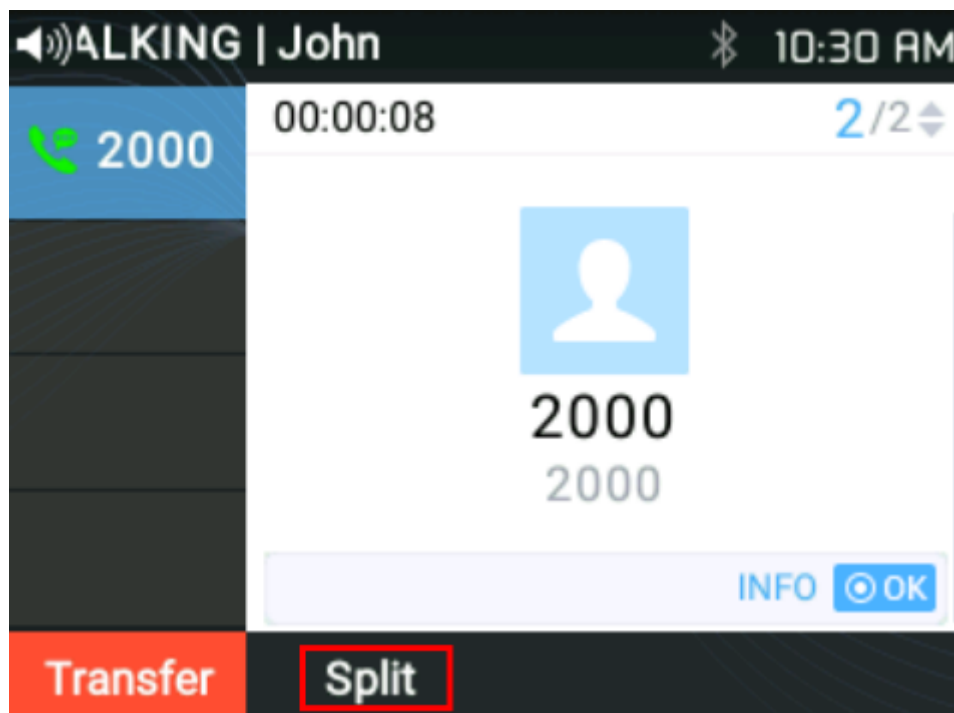

Split softkey

- Clicking the red-highlighted "**Transfer**" Key would force a Blind Transfer.

Target Selection


Using the target selection feature, users can use the following functions:

1. Add a new softkey "**Target**" under the transfer/conference LCD action screen.
2. When clicking on the softkey, it will take the user to a target selection page in which the user can choose other possible transfer/conference targets (e.g., Local/BS Phonebook, Local/BS Call Logs, LDAP...)
3. When accessing the Local/BS Phonebook and Local/BS Call History page, the softkey will show limited options (e.g., Dial) if the phone is in a busy state to make it easier for users to perform the dialing task.
4. When accessing Smart VPK List, the phone will display the list of the VPK targets that are allowed to be used as the transfer/conference target based on the current account.
5. When accessing Line, the phone will list the lines that are available for transfer/conference.

Example:


- Under Transferscreen:

A new softkey "**Target**" is added under the transfer/conference action page.

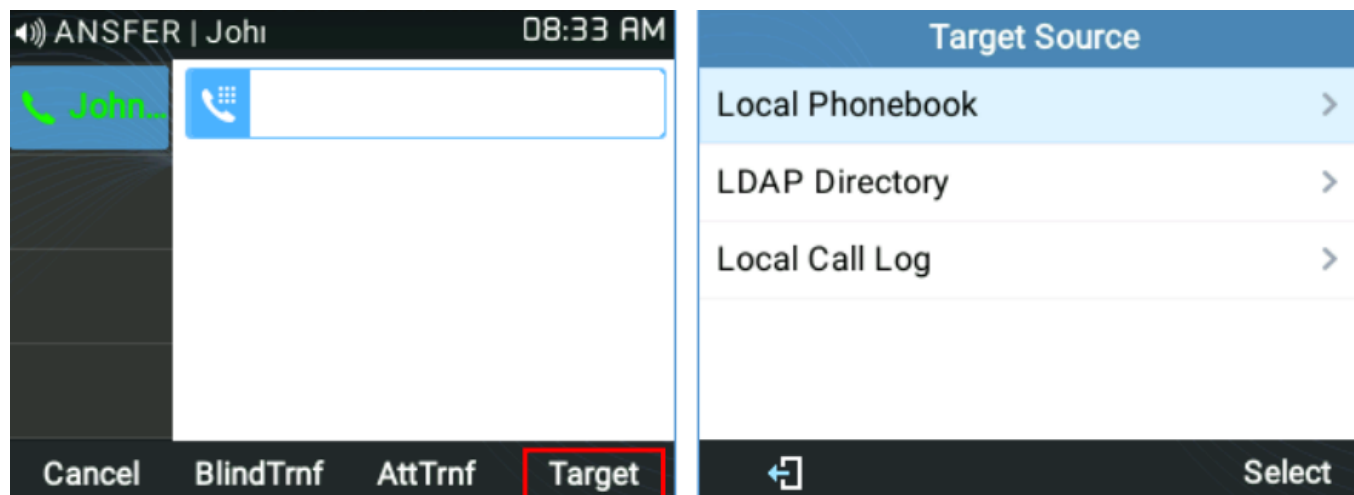

Target softkey under Transfer Action Page


Users can use navigation keys to select a target from the list and use the Menu button or "Select" softkey to dial out. By selecting Local/Broadsoft Phonebook, Local/Broadsoft Call Log, or LDAP Directory, LCD will display the appropriate screen page with limited options (e.g. Dial) to make it easier for users to perform the dialing task.

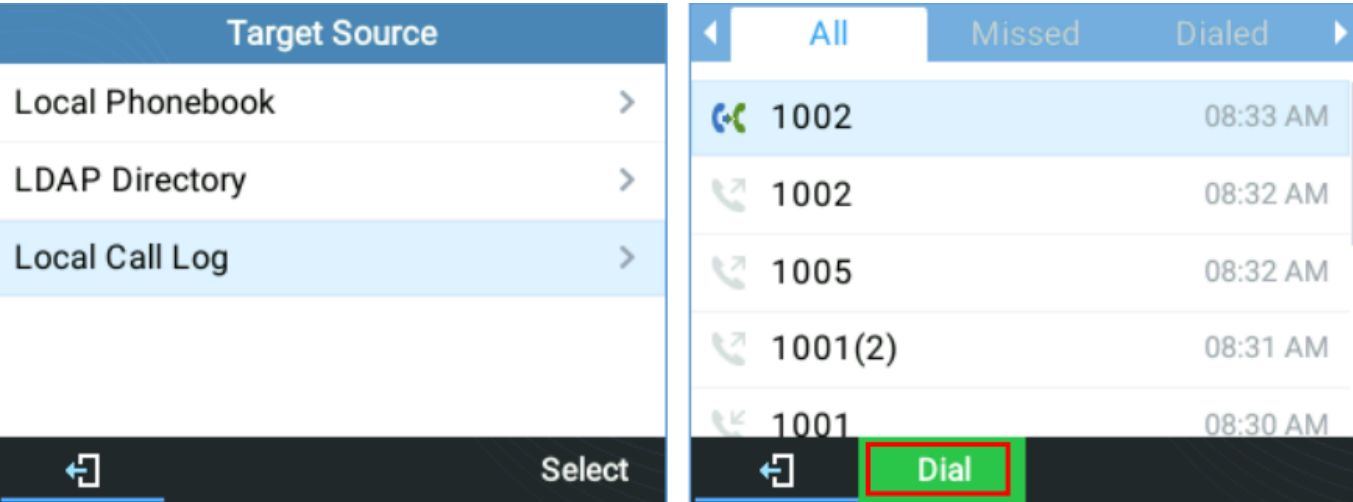

Target Local Call Log Page

Transfer Information:

The phone displays Transfer information so users can see who transferred the call...

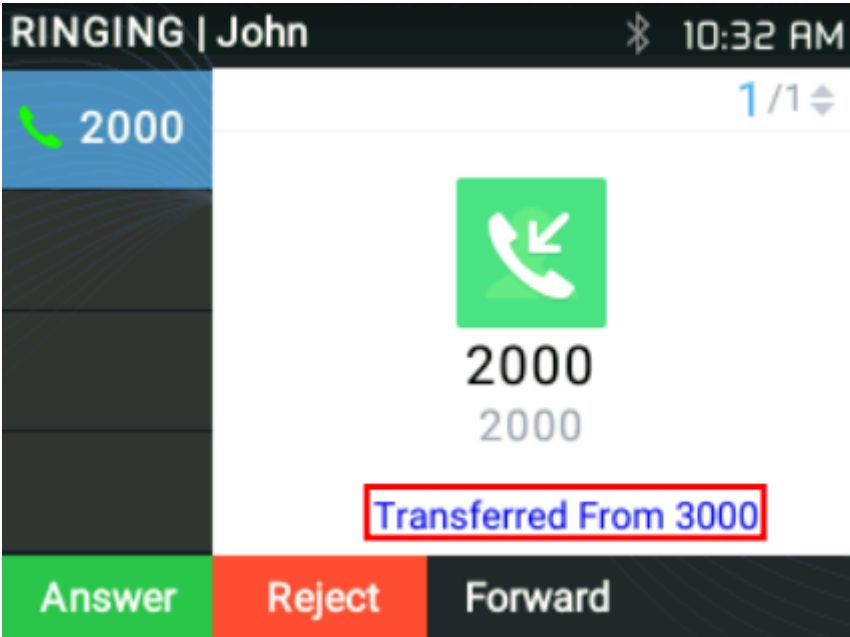

Transfer from Information While Ringing and During Incoming Call

Call Park

Call Park is a feature that allows users to put an ongoing call on hold and retrieve it from any other extension. The GRP26xx series supports Call Park via VPKs/MPKs as well as Enhanced Call Park using Softkeys.

Call Park using Virtual Multi-Purpose Keys/Multi-Purpose Keys

- 1. To add a Parking Lot, log in to the UCM, go to **Call Features -> Parking Lot**, and click on the button. For this example, we're using the default Parking Lot of the UCM, which is "700".

Parking Lot > Edit Parking Lot: 700

* Parking Lot Extension	700	* Parking Lot Name	DefaultLot
* Parking Slots	701-720	Use Parking Slot as Extension	☐
* Parking Timeout (s)	300	Music on Hold Playlists	Default
Forward to Destination on Timeout	☐	Fallover Destination	
Ring-All Callback on Timeout	☐	Parking Lot Timeout Alert-Info	None


The UCM Default Parking Lot

- To configure the call park VPK/MPK, go to the corresponding **Programmable Keys** page and choose "CallPark" in **Mode** and enter the Parking Lot under **Value**.

Order	Mode	Account	Value	Label
1	Line	Account 1	4006	
2	CallPark	Account 1	* 700	

Call Park VPKMPK

- During an ongoing call, press the configured VPK/MPK to park the call.

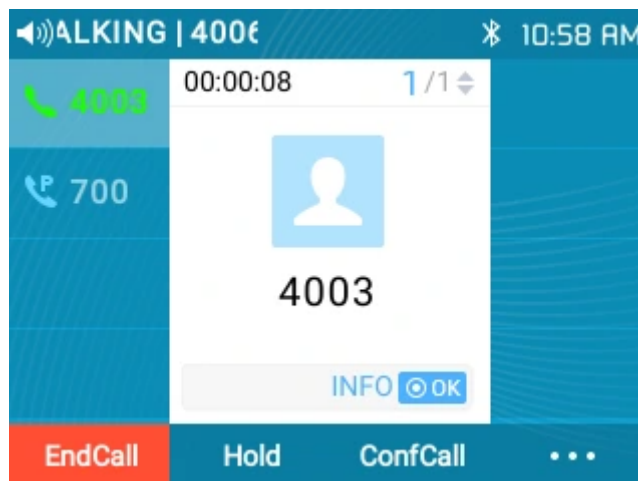


Parking Ongoing Call

- Once the call is successfully parked, users can either retrieve the call by dialing the correct Parking Slot or by configuring a VPK/MPK to monitor specific parking slots. This can be done by accessing the corresponding **Programmable Keys** page and choosing "Monitored Call Park" in **Mode** and entering the Parking Slot number under **Value**.

Order	Mode	Account	Value	Label
1	 Line ▾	Account 1 ▾	4001	 
2	 Monitored Call P... ▾	Account 1 ▾	* 701	 
3	 Monitored Call P... ▾	Account 1 ▾	* 702	 
4	 Monitored Call P... ▾	Account 1 ▾	* 703	 

Monitored Call Parks VPKMPK

1. After the call is parked, the Monitored Call Park VPK/MPK LED indicator turns solid red, and the remote extension appears on the LCD screen (for VPK only). Users can press the configured key to pick up the parked call.

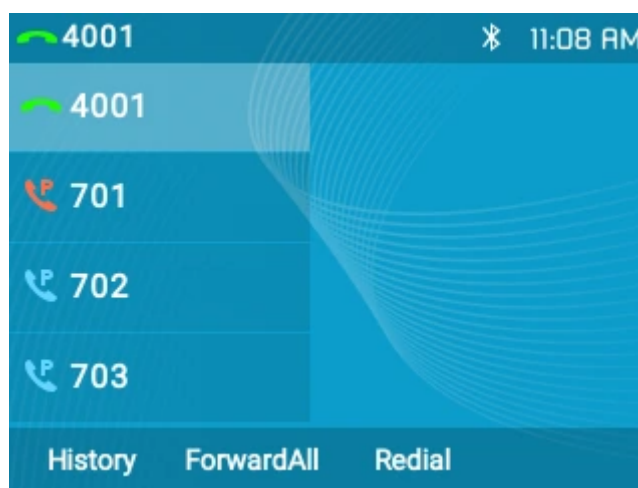

Available Parked Call

Enhanced Call Park

The Enhanced Call Park feature transforms how users temporarily suspend and retrieve calls, replacing manual feature codes (FACs) with intuitive softkeys and notifications. This section explains how to use the PortSIP PBX's enhanced call park feature with GRP26xx phones.

To activate the Enhanced Call Park Softkey, users need to access the phone's Web UI and go to **Phone Settings -> Call Settings**

Call Park

Enable Call Park Softkey ?	☒
Call Park Mode ?	Transfer
Call Park Softkey Feature Code ?	*68
Call Park Retrieve Softkey Feature Code ?	*88
Group Call Park Softkey Feature Code ?	*58


Enhanced Call Park Feature

- **Enable Call Park Softkey:** Used to enable/disable the call park-related softkeys.
- **Call Park Mode:** Allows users to choose one of the call park modes described below:
 1. **Transfer Mode** - Implements blind transfer for call parking without requiring FAC prefixes.
 2. **FAC Mode (Feature Access Code)** - Uses predefined codes to perform direct and group call parking.
 3. **XSI Mode** - Uses HTTP requests for BroadSoft XSI-based call parking.
- **Call Park Softkey Feature Code:** This feature access code is used to park an ongoing call to an extension or a parking lot.
- **Call Park Retrieve Softkey Feature Code:** This code allows the user to retrieve a parked call from an account or a parking lot.
- **Group Call Park Softkey Feature Code:** Configures the feature access code to park an ongoing call to the group current user is in.

For this example, we configured all the GRP26xx phones with the Feature Codes shown in the screenshot above.

Call Park softkeys on the call-connected screen

1. During an ongoing call, click on the Call Park softkey that appears.

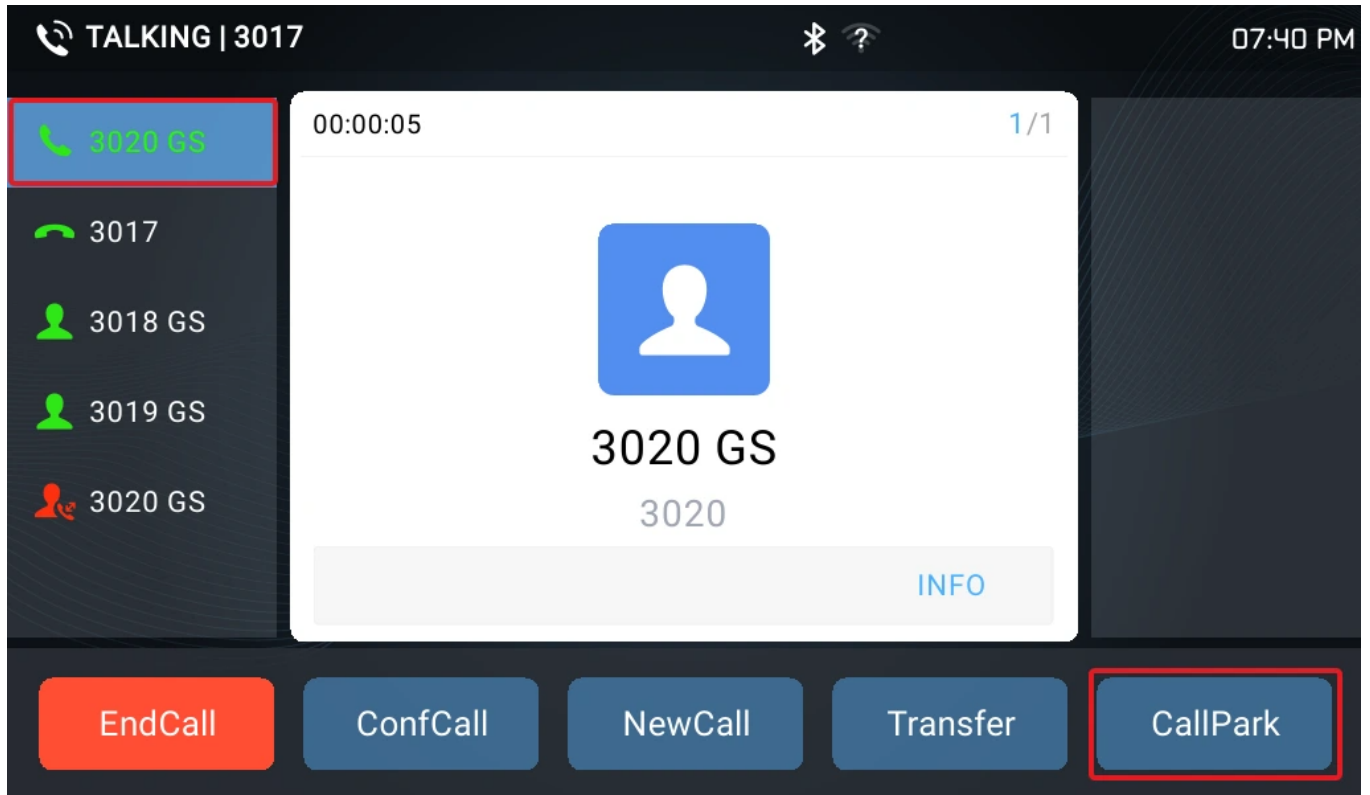


Call Park Softkey During Ongoing Call

Please note that the call park softkey cannot be controlled using a custom call screen softkey layout under **Programmable Keys**. To manage its visibility, navigate to Web UI **Phone Settings -> Call Settings -> Call Park** and use the "**Enable Call Park Softkey**" option.

1. A new prompt screen will appear with the following options:

- **Park** button.
- **GPark** button.
- Number pad for manual entry.

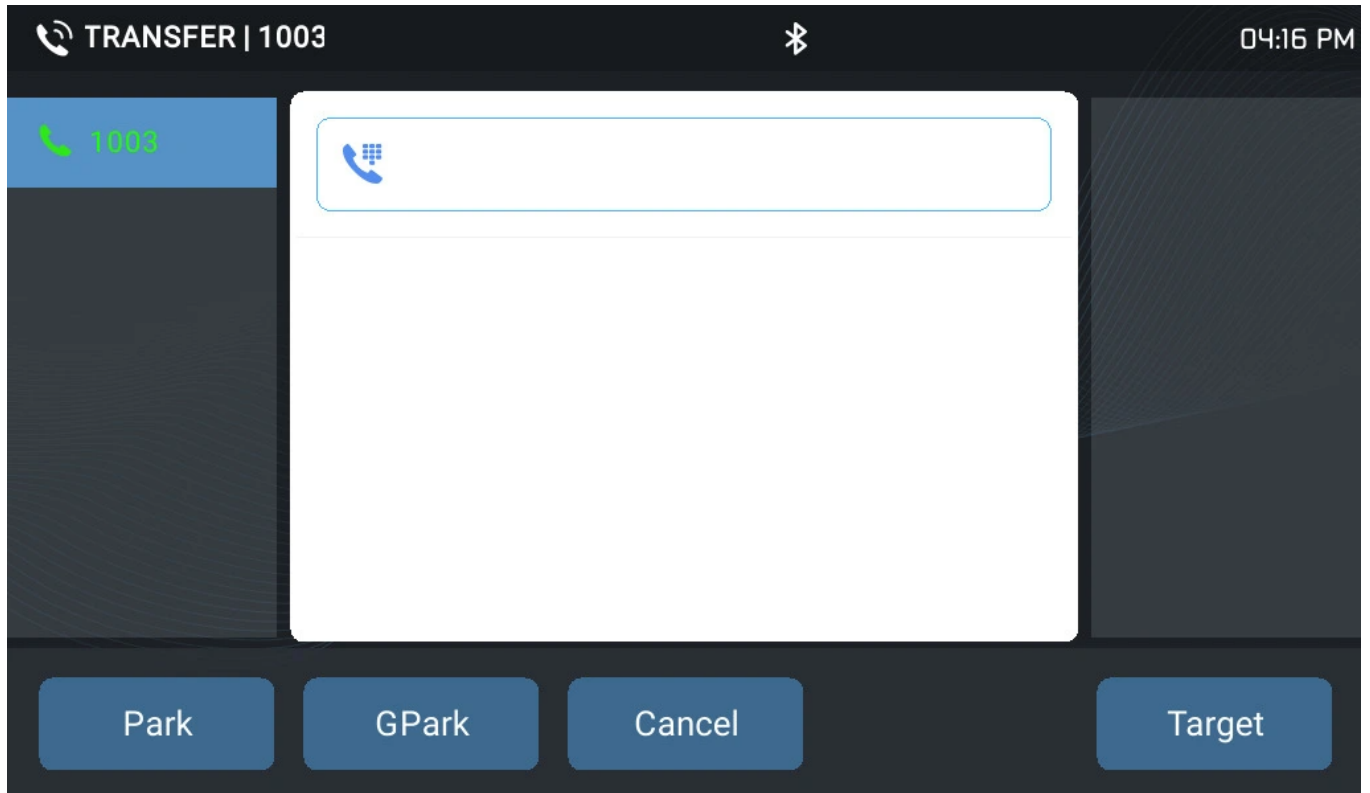


Call Park Screen

1. The user can press **Park** to park the current call to their own extension or enter a target extension before pressing **Park** to park the call to another user. Alternatively, pressing **GPark** will park the call to the assigned call park group.
 - Pressing **Park** dials ***68 + [Extension Number]**, parking the call on the specified extension or the current account.
 - Pressing **GPark** dials ***58**, parking the call within the user's assigned call park group.


Retrieving a Parked Call

Once a call is parked to a remote extension, a window will show up to notify the user of the parked call (only for phones that support the Enhanced Call Park feature).

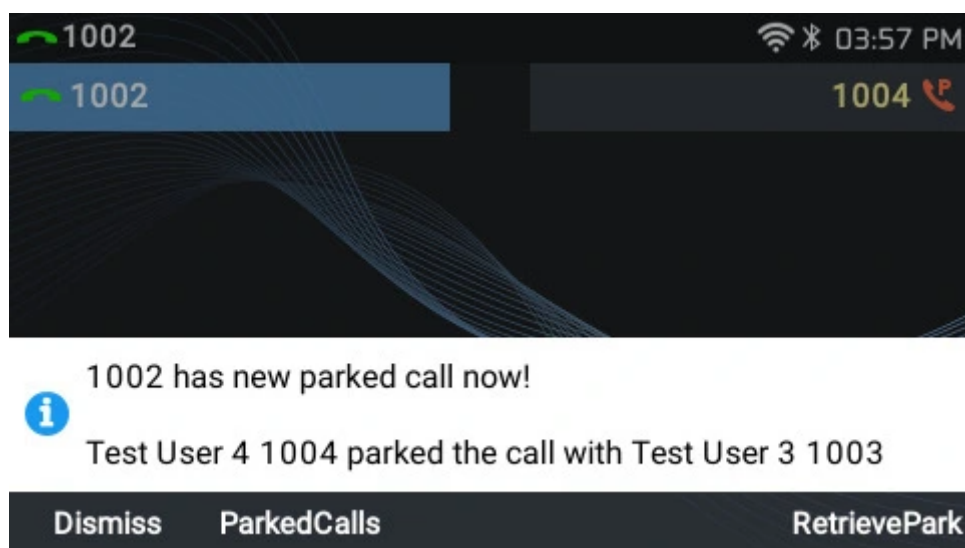


Call Park Notification

1. If the current phone has a parked call, the **RetrievePark** softkey will show up on the dialing screen as such:

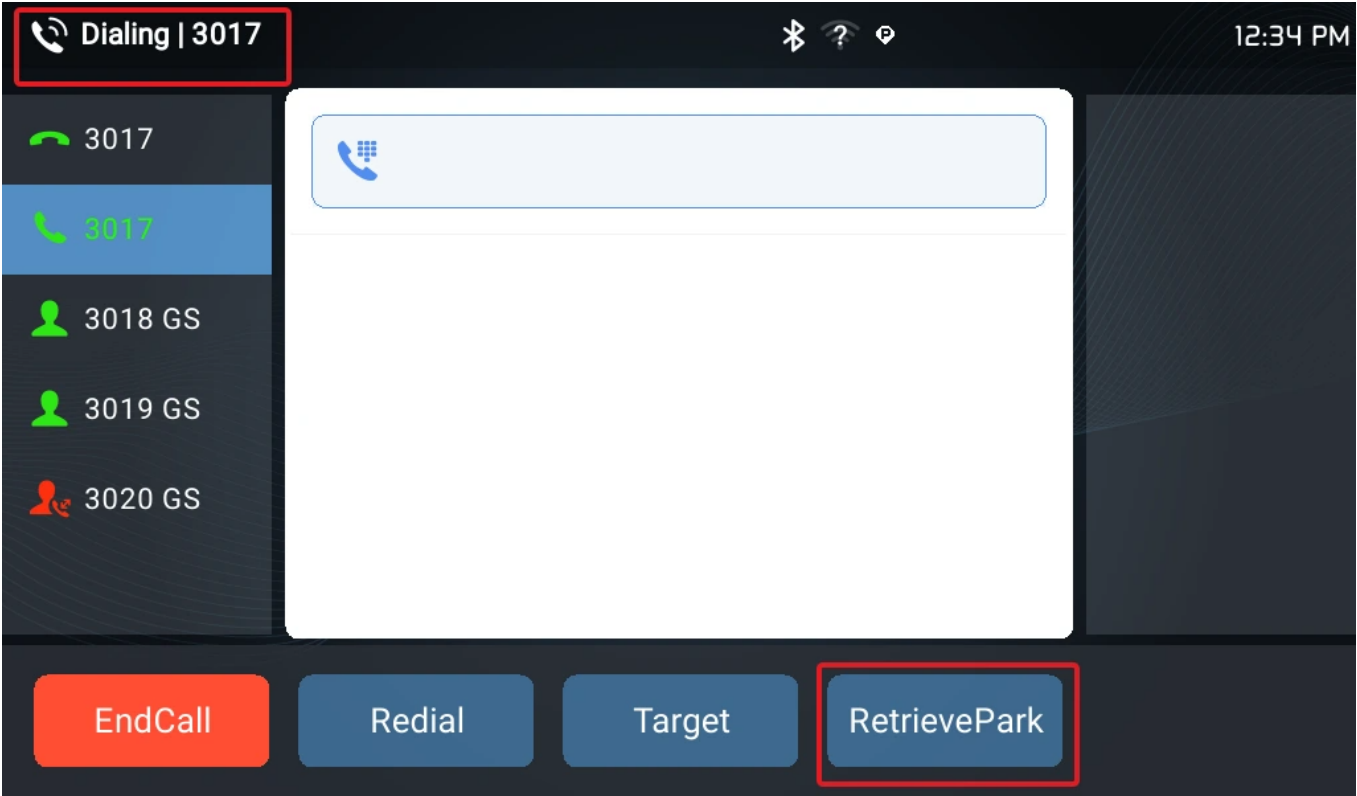


Retrieve Parked Call from Dialing Screen

1. Users can also click on **ParkedCalls** to view the list of parked calls for different accounts.

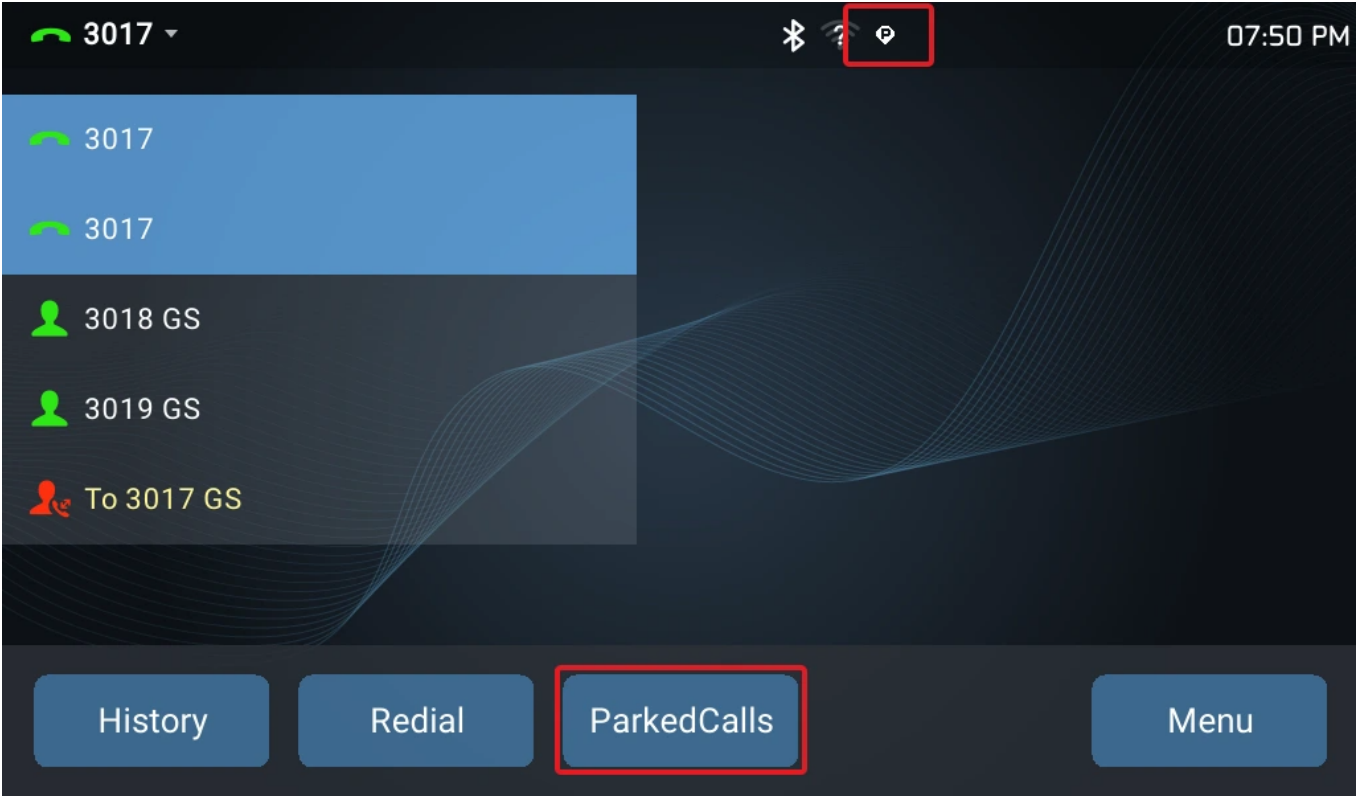


Parked Calls Softkey

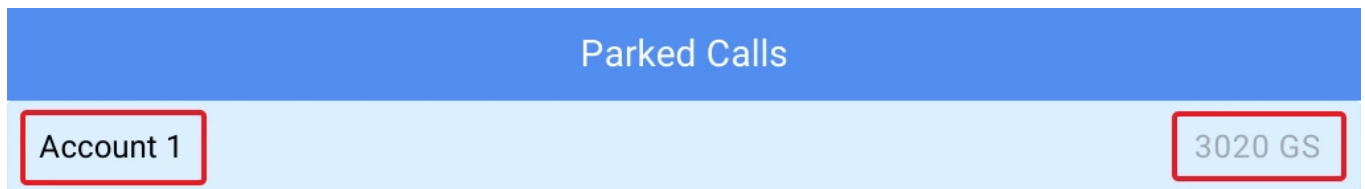

Parked Calls List

1. When the user presses the "**RetrievePark**" softkey, the current account will dial *88 (or the configured retrieve parked feature code) to retrieve the parked call associated with the current account.

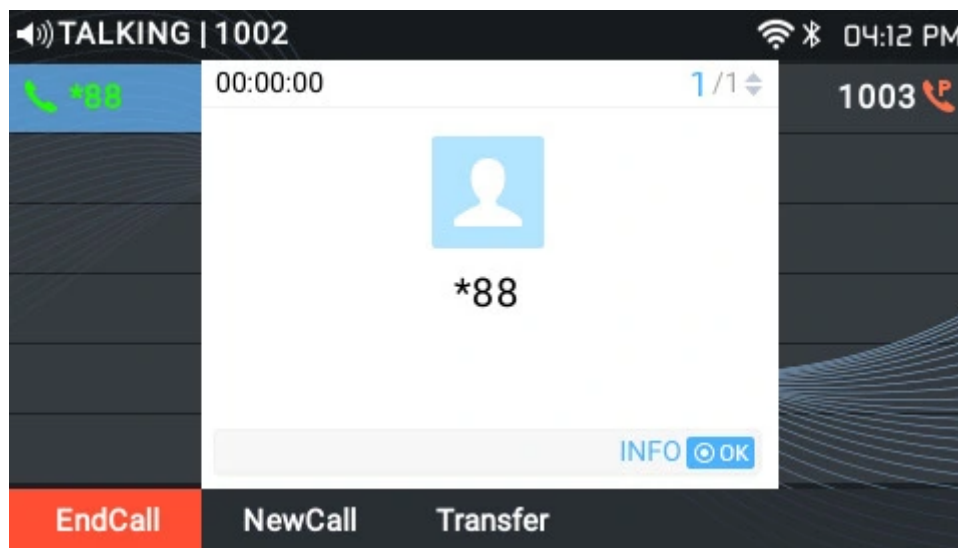

Retrieve Parked Call

Conference Call


5-way conferencing

The GRP26xx series can host a 5-way conference call with other parties (PCMU/PCMA). Users can disable/enable the conference call feature from the phone's web GUI under the menu **Settings -> Call features -> Disable Conference**.


- Initiate a conference call:

1. Establish calls with 1 or 4 parties respectively;

2. While 1 call is active, the other call will be put on hold with its LINE key blinking in green;
 3. Press the CONF key;
- On the **GRP2613**: Click on "**ConfCall**" SoftKey
4. The conference will be established after pressing the desired LINE key on hold.
- On the **GRP2613**: Press the "**UP arrow**" key. Then, click on "**ConfCall**" SoftKey.

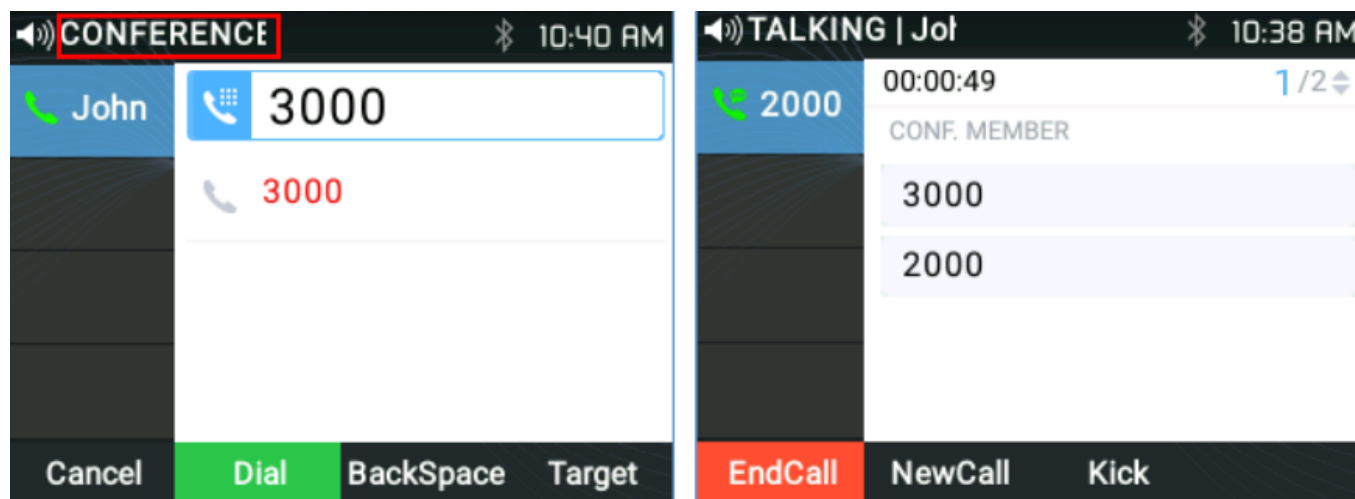

Established Conference

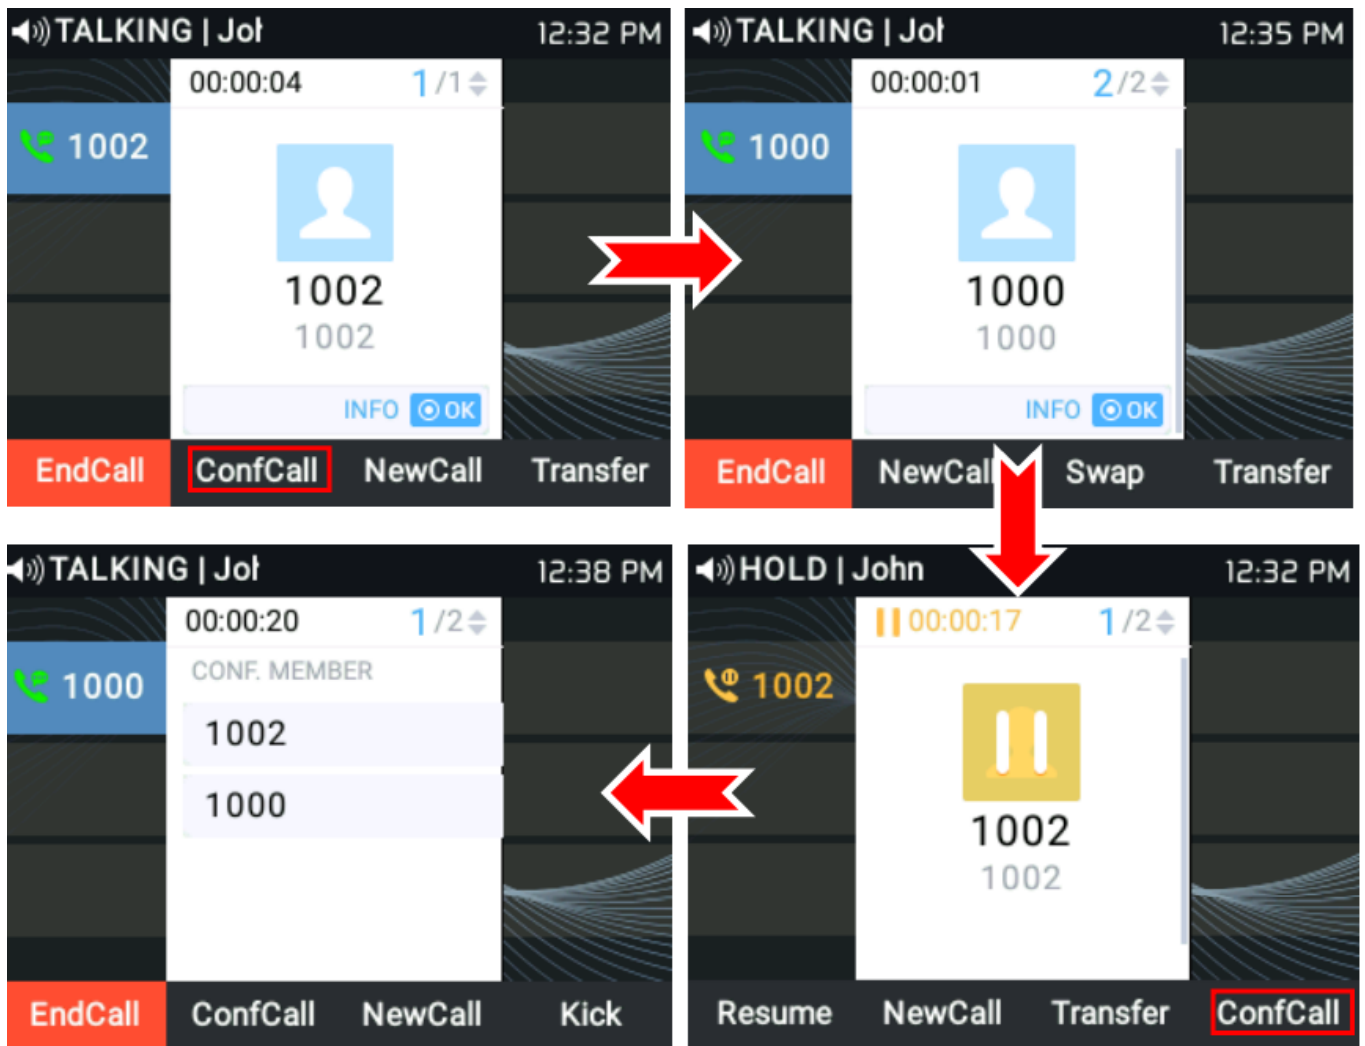

Establish a Conference Call on the GRP2613

Users may click the "**Swap**" Softkey to toggle between active calls.

- **Cancel Conference:**


1. If after pressing the CONF key, the user decides to cancel the conference, press the "Cancel" soft key or the current active LINE key (LED in solid green);
2. This will resume the 2-way conversation with the current line.

- **Kick:**

Users can remove an extension from the ongoing conference by pressing the "Kick" soft key, specifying which extension/number to be kicked out, then clicking on the "Submit" soft key.

- **Split and Re-conference:**

1. During the conference, press the HOLD key. The conference call will be split, and the calls will be put on hold separately with the LINE keys blinking in green.
2. Press a LINE key to resume the 2-way conversation.
3. If users would like to re-establish a conference call. Press the "ReConf" softkey right after the conference call is split

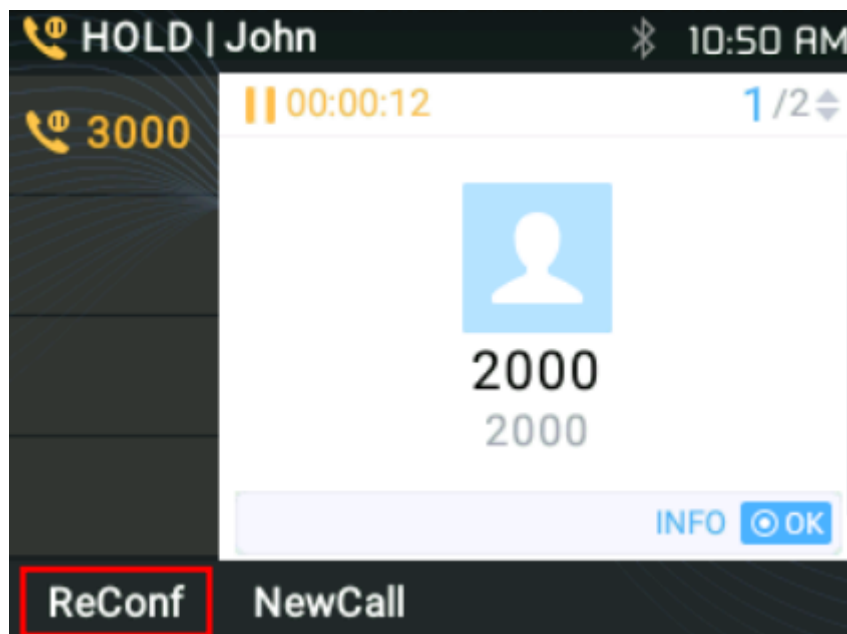

Split conference

- **End Conference:**

1. Press the HOLD key to split the conference call. The conference call will end with both calls on hold; Or
2. Users could press the "EndCall" softkey or simply hang up to terminate the conference call.

Easy Conference Mode

GRP2610/GRP2610P/GRP2611G/GRP2612/GRP2612P/GRP2612W/GRP2612G/GRP2613/GRP2614/GRP2615/GRP2616 supports **Easy Conference Mode**, which can be used combined with the traditional way to establish the conference.

- **Initiate a conference call.**

1. Establish 1 call;
2. Press the CONF key, and a new line will be brought up using the same account.
3. Dial the number and press the SEND key to establish the second call.
4. Press the CONF key or press the "ConfCall" softkey to establish the conference.

- **Split and Re-conference.**

1. During the conference, press the HOLD key. The conference call will be split, and both calls will be put on hold separately with 2 LINE keys blinking in green.
2. Press a LINE key to resume the 2-way conversation.
3. If users would like to re-establish a conference call, before 1 separate LINE is selected, press the "ReConf" softkey right after the conference call is split.

- **Cancel Conference.**

1. If the user decides to cancel the conference after establishing the second call, press the "EndCall" softkey instead of the "ConfCall" softkey/CONF key;
2. This will end the second call and the screen will show the first call on hold.

- **End Conference.**

1. Press the HOLD key to split the conference call. The conference call will be ended with both calls on hold; Or
2. Users could press the "EndCall" softkey or simply hang up to terminate the conference call.

- The party that starts the conference call must remain in the conference for its entire duration, you can put the party on mute, but it must remain in the conversation. In addition, this is not applicable when the feature "Transfer on Conference Hang-up" is turned on. Under Web GUI **Accounts -> Account X -> Call settings**
- The option "Disable Conference" must be set to "No" Web UI **Settings -> Call Features** to establish a conference call.
- Users can limit the ability of the phone to cross conferencing different accounts. This option can be found under device Web UI **Settings -> Call Features**.


For more information, please refer to the admin guide.

<https://documentation.grandstream.com/knowledge-base/grp261x-grp262x-grp263x-series-administration-guide/>

UCM Conference

Participate in UCM Conference Room

Users could dial the UCM conference room extension to join the conference. If a password is required, enter the password to join the conference either as a normal user or as an administrator.

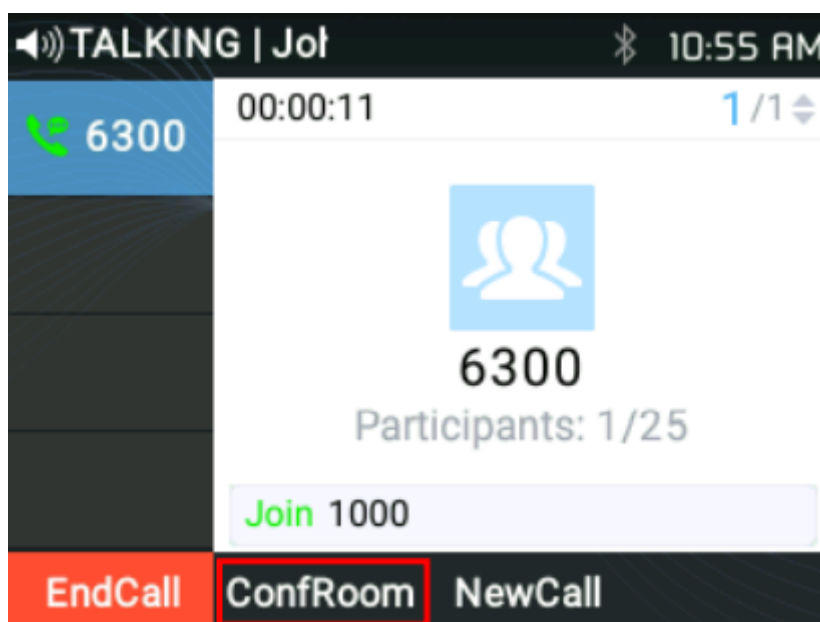

Join UCM Conference

- Follow the Interactive Voice Response (IVR) instructions.

Conference Call Menu (CCM)

During a UCM conference, only conference Administrators can press on the **ConfRoom** softkey to view/invite members, bridge conference, remove the bridge, mute, unmute and lock the conference.

Conference Room Participants		
1	1000	1000
2	4000	4000
3	3000	3000
5	2000	2000

	Invite	Bridge	...
--	--------	--------	-----

List of Conference Room Users

Conference Call Operations

- Invite User:

Press the **Invite** softkey, specify the target extension number then click **OK**. The phone will note the operation by displaying [**Join User_Extension**] on the conference home screen.

Conference Room Participants		
1	1000	1000
3	3000	3000
5	2000	2000

Invite User	
Number	4000
Prompt	Yes


	Invite	Bridge	...
--	---------------	--------	-----

	OK	BackSpace	1Bc
--	----	-----------	-----

UCM Conference Menu Invite User

- Kick User:

Select the user's extension then press **Kick**. The phone will note the operation by displaying [**Exit User_Extension**] on the conference home screen. Then the user won't be available on the Conference Room Participants List.

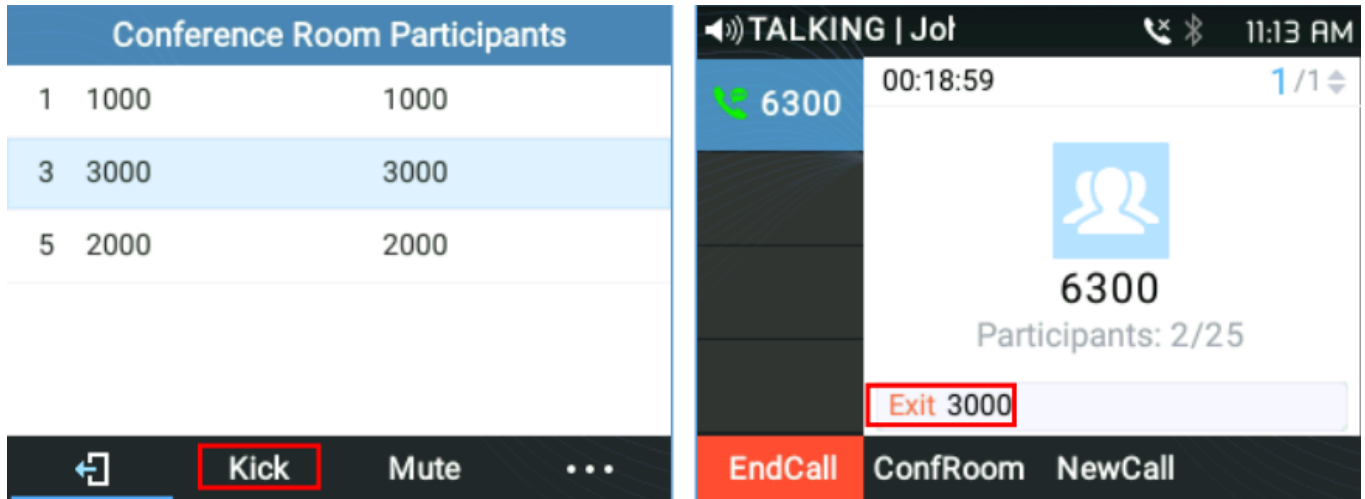


UCM Conference room Kick user

- Mute/Unmute User:

Select the user's extension then press **Mute**. The phone will note the operation by displaying [**Exit User_Extension**] on the conference home screen. But the user will still be available on the Conference Room Participants List.

An **Unmute** softkey will show to cancel the operation.

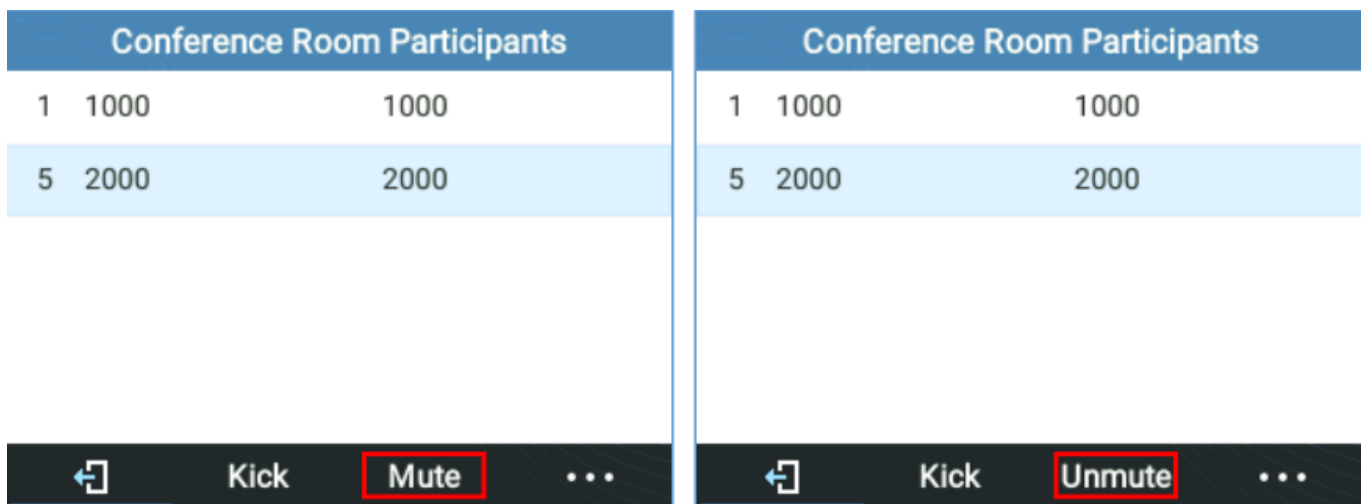

UCM Conference room Mute Unmute user

- Conference Bridge:

To bridge another conference, enter the conference number and password and a Bridge request will be sent.

Conference Room Participants		
1	1000	1000
3	3000	3000
5	2000	2000

Bridge Conference	
Number	6301
Password	

←
Invite
Bridge
...

←
OK
BackSpace
123

UCM Conference Menu Bridge Conference

- More:

Press [...] for more conference room operations. Users can choose to **Lock/ Unlock** the conference, **Kick All**, or **Mute/ Unmute All** participants.

Conference Room Participants		
1	1000	1000
5	2000	2000

←
Invite
Bridge
...

UCM Conference Menu More

UCM Call Center

The GRP26xx series phones support the **UCM Call Center** feature, allowing static agents to log in and out of call queues directly from their phone using a dedicated softkey. Please follow the steps below to configure this feature.

- Ensure the agent is set as a static agent in the call queue settings on the UCM.
- The phone must be registered to the account linked to the agent.

1. From the UCM web interface, navigate to the **Call Queue settings** and enable **Agent Login** for the desired queue.

CTI

Enable Agent Login



Queue Chairman

☐ 15 items
 Available

Search

☐ 1000
☐ 1001
☐ 1002
☐ 1003
☐ 1004
☐ 1005



☐ 0 item
 Selected

Search

None

Enable Agent Login for Call Queue

- On the registered phone, go to **Account -> Advanced Features -> Special Feature**.
- Set the **Special Feature** to "UCM Call Center".

Advanced Features

Special Feature ?

UCM Call Center


Feature Key Synchronization ?



Conference URI ?

UCM Call Center Special Feature

- A new softkey labeled "**UCM-CC**" will appear at the bottom of the phone's idle screen.

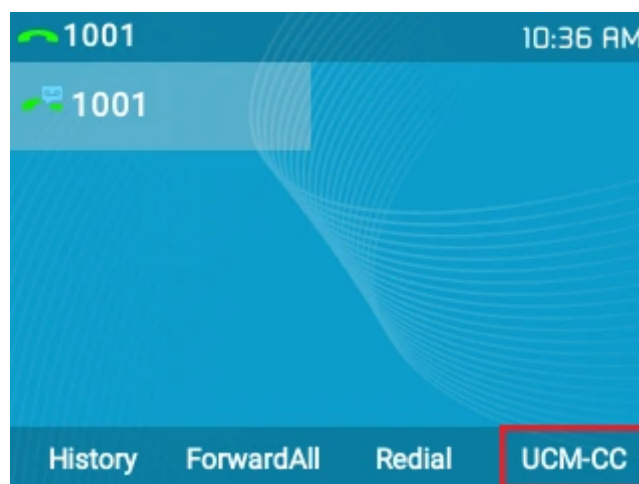

UCM Call Center Softkey

- Press the **UCM-CC softkey** to view a list of available call queues associated with the account (names and extension numbers).

Account 1 : Call Queues	
Sales	
6501	Unavailable >
Support	
6502	Unavailable >
FrontDesk	
6500	Unavailable >
	LoginAll Select

Call Queues List

1. Select the desired queue and toggle login/logout status, or click on the **LoginAll/LogoutAll** softkeys to login to all the associated queues.

Account 1 : Call Queue Status	
Call Queue Number	6501
Call Queue Name	Sales
Agent Status	Unavailable
Login/Logout	◀ LogOut ▶



Call Queue Status

Account 1 : Call Queues	
Sales	
6501	Available >
Support	
6502	Unavailable >
FrontDesk	
6500	Unavailable >
	LoginAll LogoutAll Select

LoginAllLogoutAll Softkeys

- This feature is only available for static agents; dynamic agent login via feature codes will be disabled once enabled.
- If the agent is registered on multiple devices, status changes will sync across all phones.

Call Forwarding

Under **Menu (OK)** -> **Phone** -> **Call Features** -> **Account X**.

- When disabled the LCD screen will look like the following figure:

Call Features: Account 1

● Forward All

1002

● Forward Busy

● Forward No Answer

No Answer Timeout

12

←

Enable

BackSpace

...

Disabled Call Forward

- When the feature is enabled, the phone's LCD screen will show the following figure.

Call Features: Account 1

● Forward All

1002

● Forward Busy

1003

● Forward No Answer

1004

No Answer Timeout

12


←

BackSpace

Save

Enable Call Forward

- When forwarding a call, the recipient will display a "diverted from" message.

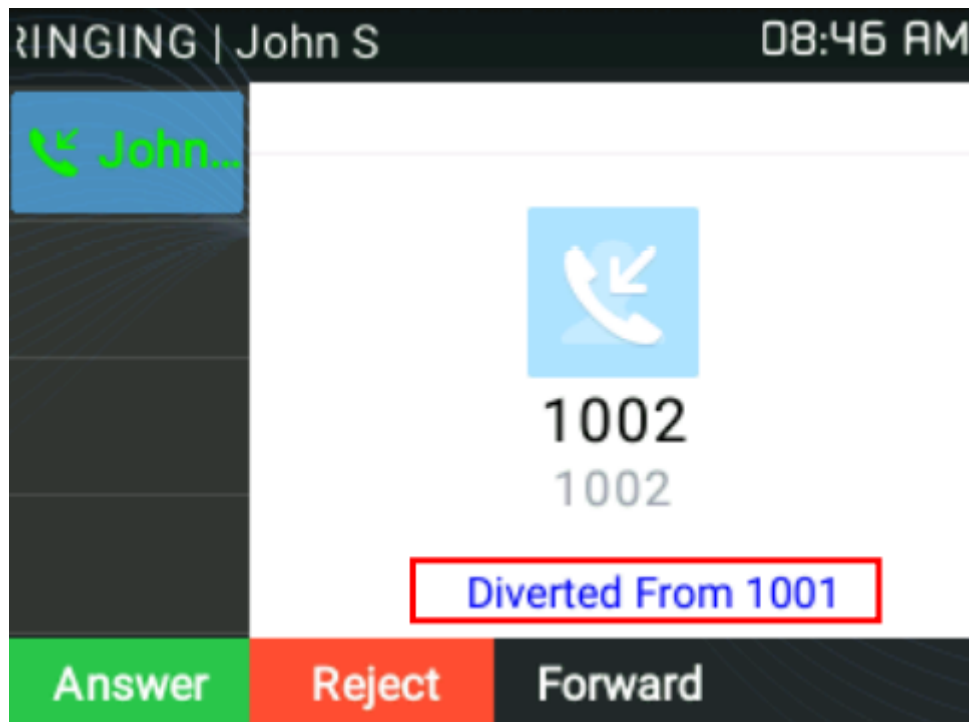

Diversion Information

This information will only appear if the "Enable Diversion Information Display" feature is activated in the Web UI under **Phone Settings -> Call Settings**. If disabled, the original number the call was intended for will not be displayed during an incoming forwarded call.

- A Call Forward using BLF can also be performed by pressing the BLF key set on VPK/MPK as a forward destination. You only need to Subscribe to a valid BLF and press Forward Key then the BLF key to perform the call forward.

Voice Mail

A blinking green MWI (Message Waiting Indicator) on the top right corner of the phone indicates a message is waiting. Check the voicemail box to retrieve the message by entering the voice mail number of the server; Or by pressing the Voicemail button; or from the Phone's **Menu -> Messages -> Voice Mails**

- Voice Mail User ID and the voice mail number must be properly configured under Web GUI **Account X -> General Settings**.
- An IVR will prompt the user through the process of message retrieval.

Virtual Voice Mail

With this feature, the phone downloads the voicemail into a .wav file and stores it. Users don't have to dial feature codes and go to the BroadSoft server to listen to their voice mails. Also, they can pause/resume their voicemail messages at any time they want.

For more information, please refer to the admin guide.


<https://documentation.grandstream.com/knowledge-base/grp261x-grp262x-grp263x-series-administration-guide/>

Instant Messages

The


GRP2610/GRP2610P/GRP2611G/GRP2612/GRP2612P/GRP2612W/GRP2612G/GRP2613/GRP2614/GRP2615/GRP

allows users to send instant messages through the phone's LCD. Under **MENU (OK) -> Messages -> Instant Messages**

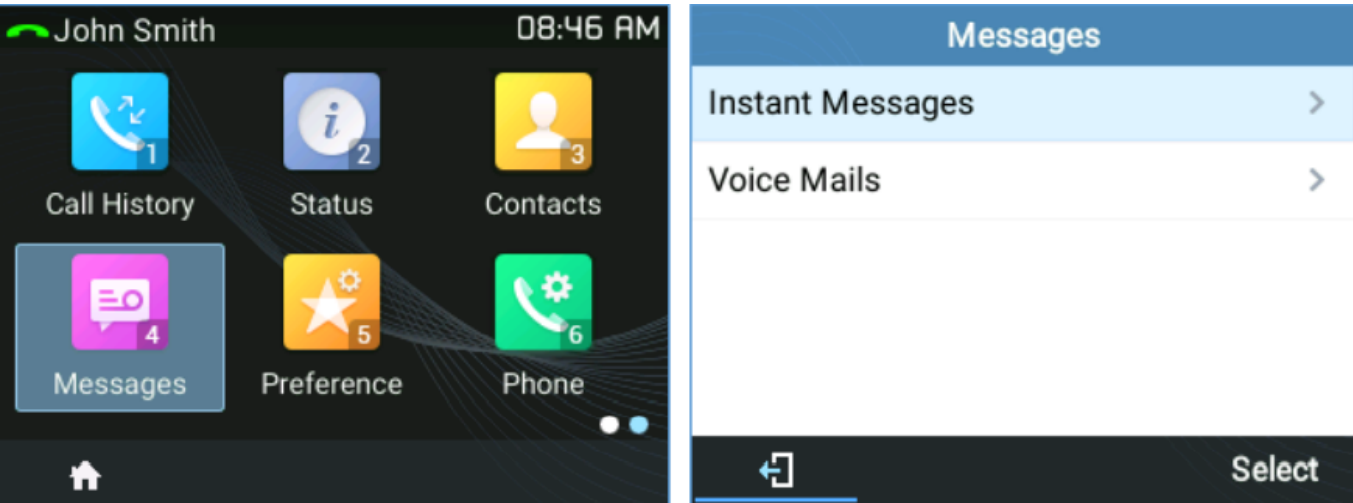


Instant Messages sub menu

Users can press the "New" soft key, then specify the Account, the recipient, and the contents of the IM.

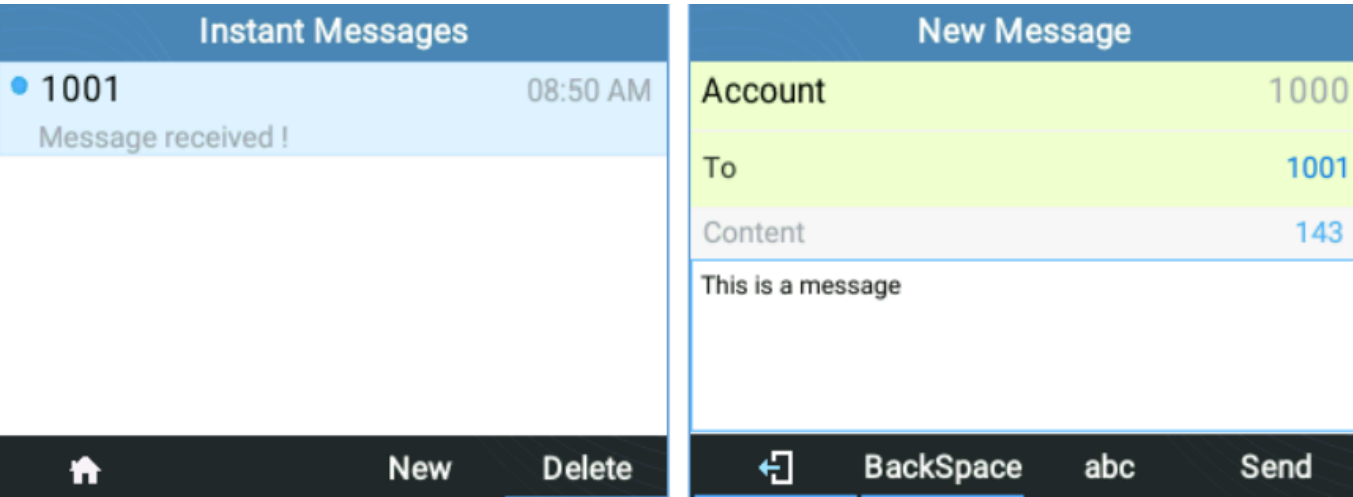

Sending an Instant Message

After pressing the "Send" soft key, a "Sent successfully" message will pop up to indicate that the operation was successful.

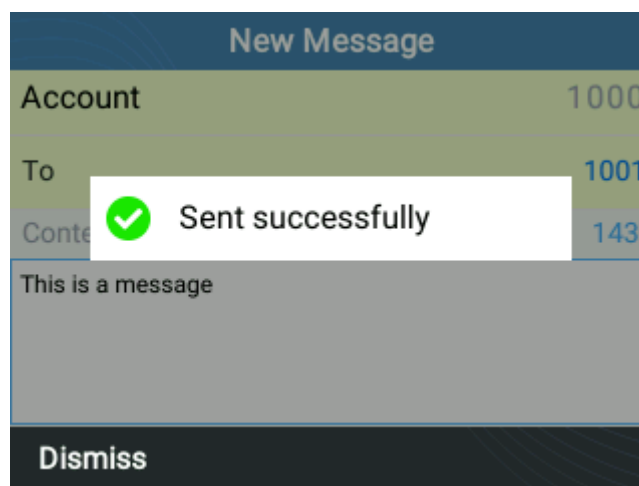

IM Sent Successfully

Call Features

The GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 supports traditional and advanced telephony features including caller ID, caller ID with caller Name, call forward, etc.


*30	Block Caller ID (for all subsequent calls)Off hook the phone.Dial *30
*31	Send Caller ID (for all subsequent calls)Off hook the phone.Dial *31
*50	Disable Call Waiting Off hook the phone.Dial *50
*51	Enable Call WaitingOf hook the phone.Dial *51
*67	Call with Caller ID Blocked (per call)Off hook the phone.Dial *67 and then enter the number to dial out.
*82	Call with Caller ID Enabled (per call)Off hook the phone.Dial *82 and then enter the number to dial out.
*70	Call with Call Waiting Disable (per call)Off hook the phone.Dial *70 and then enter the number to dial out.
*71	Call with Call Waiting Enabled (per call)Off hook the phone.Dial *82 and then enter the number to dial out.
*72	Unconditional Call Forward.Off hook the phone.Dial *72 and then enter the number to forward the call.Press OK softkey or SEND key.
*73	Cancel Unconditional Call Forward. To cancel the unconditional call forward:Off hook the phone.Dial *73.Hang up the call.
*90	Busy Call Forward. To set up busy call forward:Off hook the phone.Dial *90 and then enter the number to forward the call.Press OK softkey or SEND key.
*91	Cancel Busy Call Forward. To cancel the busy call forward:Off hook the phone.Dial *91.Hang up the call.
*92	Delayed Call Forward. To set up delayed call forward:Off hook the phone.Dial *92 and then enter the number to forward the call.Press OK softkey or SEND key.
*93	Cancel Delayed Call Forward. To cancel the delayed call forward:Off hook the phone.Dial *93.Hang up the call.

Call Features

Users may proceed as below:

1. Dial Star key (*): A list of all available feature codes will be displayed on the screen
2. Browse the codes using the UP/Down arrow keys

3. Select an option by pressing the MENU key; Or,
Click "Dial" Softkey.

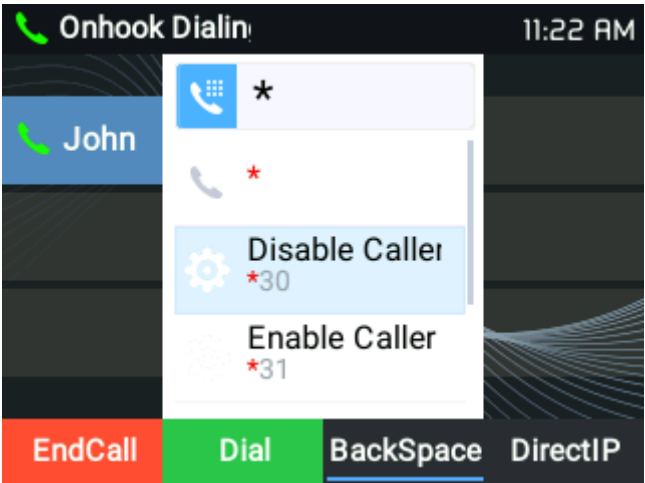


Feature Codes List

ADVANCED FEATURES

Virtual Multi-Purpose Keys

Web UI Configuration

Users can find the Virtual Multi-Purpose Keys (VPK) configuration under the phone's web UI **Settings** -> **Programmable Keys** -> **Virtual Multi-Purpose Keys** tab. It is recommended to select "Reset" on this page before configuring VPK here. By default, all fixed VPKs are listed.

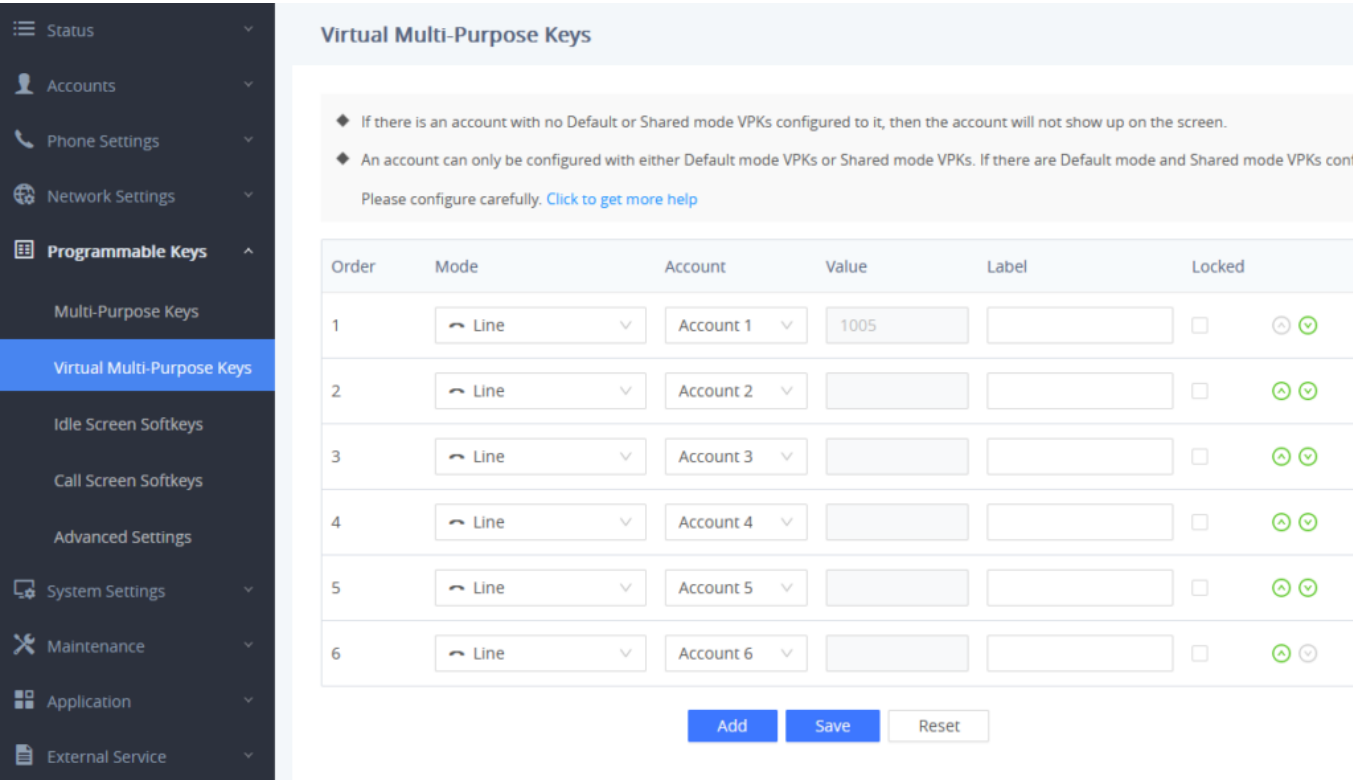

VPK Page

On the Virtual Multi-Purpose Keys page. Select the **Mode** from the drop-down list, and choose the account associated with the VPK. Users can also set the **Value** and the **Label** (description) of the configured VPK.

Order	Mode	Account	Value	Label	Locked
1	Line	Account 1	1005		☐
2	Line	Account 2			☐
3	Speed Dial	Account 3			☐
4	Busy Lamp Field (BLF)	Account 4			☐
5	Speed Dial via Active Ac...	Account 5			☐
6	Line	Account 6			☐

Add
Save
Reset

VPK Configuration

If users would like to configure more VPKs than the ones displayed on the page, they can click on "**Add VPK**" to configure dynamic VPK.

1. Dynamic VPK does not support "Default" and "Shared" modes. These two mode options are only available for fixed VPKs.
2. Dynamic VPK does not support NONE mode. If users do not need this VPK, click on "**Edit VPK**" for it and select "**Delete**" to remove it.
3. All settings require the user to click on "**Save**" on the prompted window and the "**Save VPK**" button at the bottom of the Virtual Multi-Purpose Keys page to take effect.
4. It's recommended to have at least two lines in **Default** mode, to be able to bring up another line during a call and perform whether a call pickup, an attended transfer, or a conference call.
5. When a value is configured in the Record VMPK field, the phone will send it as a DTMF signal to the server to initiate or stop server-side recording.

P-Value for VPK Mode in String Format:

Mode Name	Mode String	Mode P-Value
None	None	-1
Default	Line	31
Shared	Shared line	32
Speed Dial	Speed dial	0
Busy Lamp Field	BLF	1
Presence Watcher	presencewatcher	2
Eventlist BLF	eventlistblf	3
Speed Dial via Active Account	speeddialaa	4
Dial DTMF	dialdtmf	5
Voice Mail	voicemail	6

Call Return	callreturn	7
Transfer	transfer	8
Call Park	callpark	9
Monitored Call Park	Monitoredcp	16
Intercom	Intercom	10
LDAP search	Ldap Search	11
Conference	Conference	12
Multicast Paging	Multicast paging	13
Record	Record	14
Call Log	Call log	15
Menu	Menu	17
XML Application	Xmlapp	18
Information	Information	19
Message	message	20
Forward	forward	21
DND	DND	22
Redial	redial	23
Instant Messages	instant messages	24
Multicast Listen Address	multicast listen address	25
Keypad Lock	keypad lock	26
GDS OpenDoor	gds opendoor	27
Presence EventList	presence eventList	28
Provision	provision	29
Multicast Listener	Multicast Listener	42

VPK Modes in String Format

The string could be capital or lower-case letters, but there must be no "space" in between. For example, in the cfg.xml, "Transfer" or "transfer" is the same as "8", it will configure Virtual Multi-Purpose Key 3 as transfer mode.

```
<?xml version="1.0" encoding="UTF-8" ?>
<gs_provision version="1">
  <config version="1">
    ...
    <P1363>transfer</P1363>
    <P1364>2</P1364>
    <P1465>TEST</P1465>
    <P1466>7777</P1466>
  </config>
</gs_provision>
```


Line Key as Transfer Mode

LCD Indication and Configuration:

The configured fixed VPKs are displayed next to the corresponding line. If dynamic VPKs are configured, the

users can see a page number shown on the bottom left corner of the LCD.

The following figures show page 1 and page 2 of the VPKs on LCD. Pressing the "RIGHT" arrow key will switch to the next page; pressing the "LEFT" arrow key will switch back to the previous page.

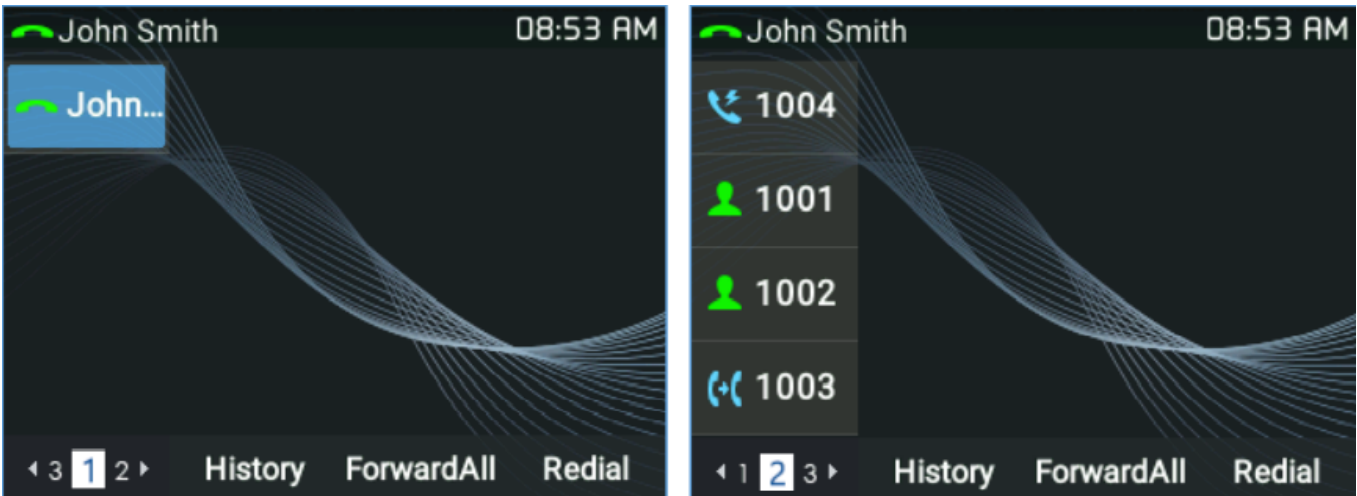

VPK LCD Indication

The users could also edit and add VPK from LCD.

1. To edit (fixed) VPK, press and hold the line key for about 4 seconds, and a configuration window will pop up for the user to configure.
2. To add (dynamic) VPK, press and hold the RIGHT arrow key for about 4 seconds, and a configuration window will pop up for the user to configure.
3. During a call, when the phone is on the call screen users can press and hold the VPK for 3 seconds to display the whole description label, to switch back the users can wait for 5 seconds or press the VPK again.

Up to 33 modes can be supported on fixed VPK, and up to 30 modes can be supported on dynamic VPK. Each mode is indicated by a different icon on the LCD, and the icon will be different when in different states.

Please find the icon indications below for different modes of VPK:


VPK Mode	Description	Default	Reverse
Line	Unregistered		
	Registered		
	Call Forward		
	Dial_1_open_voicemail		
	Dial_2_open_voicemail		
	Account_1_open_voicemail		
	Account_2_open_voicemail		
	Connect		
	Dial		
	Dial Invalid		
	Call Hold		
	Call Forward Always		
	Call Forward Busy		
	Call Forward No Answer		
	Call Failed		

SCA	Connect		
	Hold		
	Idle		
	Ringing		
	Seized		
	Error		
	Invalid		
	Unknown		
BLF	Away		
	Available		
	Unavailable		
	Busy		
	Chat		
	Connect		
	DND		
	Ringing		
	Unknown		
	User def		
Speed Dial	Speed Dial		
Dial DTMF	Dial DTMF		
Call Return	Call Return		
Transfer	Call transfer		
Call Park	Call Park		
	Call Park Busy		
	Call Park Online		
	Call Park Offline		
Intercom	Intercom		
	Multicast Intercom		
	Paging Call		
LDAP Search	LDAP Search		
Multicast Paging	Multicast Listen Address		
Record	Recording		
Menu	Menu		
Message	Message		
Conference	Conference		
Information	Information		
Keypad Lock	Keypad Lock		
DND	Do Not Disturb		
XML	XML		
Phonebook	Phonebook		

Call History	Call History		
Instant Message	Instant Message		
Redial	Redial		
GDS OpenDoor	Grandstream OpenDoor System		
Forward	Forward		
Provision	Provision		
Voice Mail	Voice Mail		
	Voice Mail New		
Multicast Listener	Multicast Listener		
Bluetooth Hands-free	Connected		
	Not Paired		
	Pending		
HTTP Command	HTTP Command		

VPK Modes Icon Indications

When the user is on the call screen (during a call), they can press the Right/Left arrow key to toggle between screens and choose which VPK to use.

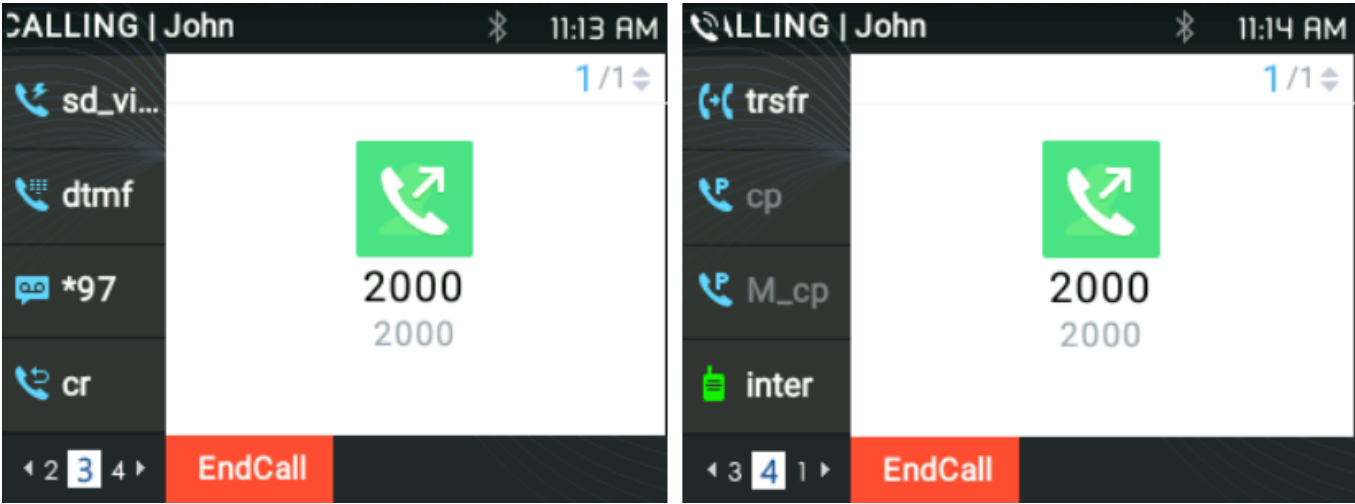

Toggle Between Screens on The Call Screen


- If a call is parked via the VPK call park, the display on the VPK will change between the CID of the active call and the parking number.
- When changing the VPK information that requires a subscription, the phone will perform unsubscribe first, then perform a new subscription. This way server will know that the previous subscription has been void.

Predictive Dialing

Search in Call History

Functionality

If the user dials digits matching some call history entries, a list of entries should be displayed with corresponding names.

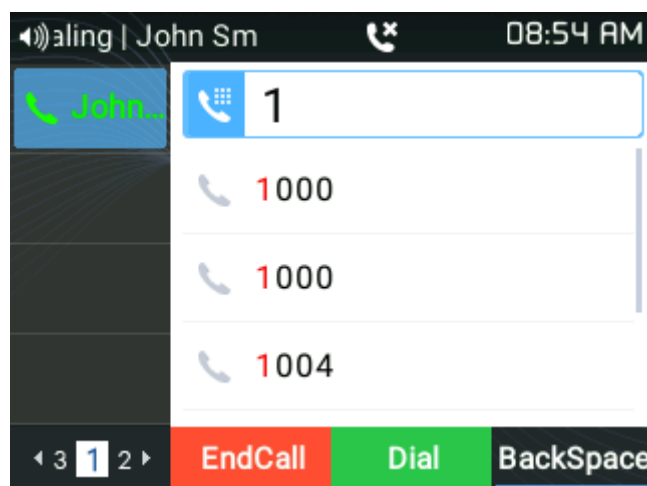

Predictive Dialing

Users can Disable the Predictive Dialing Feature from Web GUI under **Settings -> Call Features**.

Search in Broadsoft Directories

Web configuration

Users can configure Broadsoft XSI directories correctly from Web GUI under **External Service -> Broadsoft Xsi**.

BroadSoft Xsi

Authentication Login

Service Settings

Network Directories

Server ?

Port ?

200

Xsi Actions Path ?

Xsi Authentication Type ?

Login Credentials

BroadSoft User ID ?

Login Password ?

Save

Save and Apply

Reset

Broadsoft XSI web configuration

Functionality


The phone can predict possible contact information from Broadsoft XSI directories when users dial a number. Users can select from the list of predicted numbers that will show if Broadsoft XSI directory information is loaded after pressing the related number



Predictive Dialing from BS XSI Directories

VPK Paging Support inside the LCD Call Screen

Users can use their preconfigured VPK mode while on the call screen. Such as Speed Dial, BLF..., as shown in the figure below:

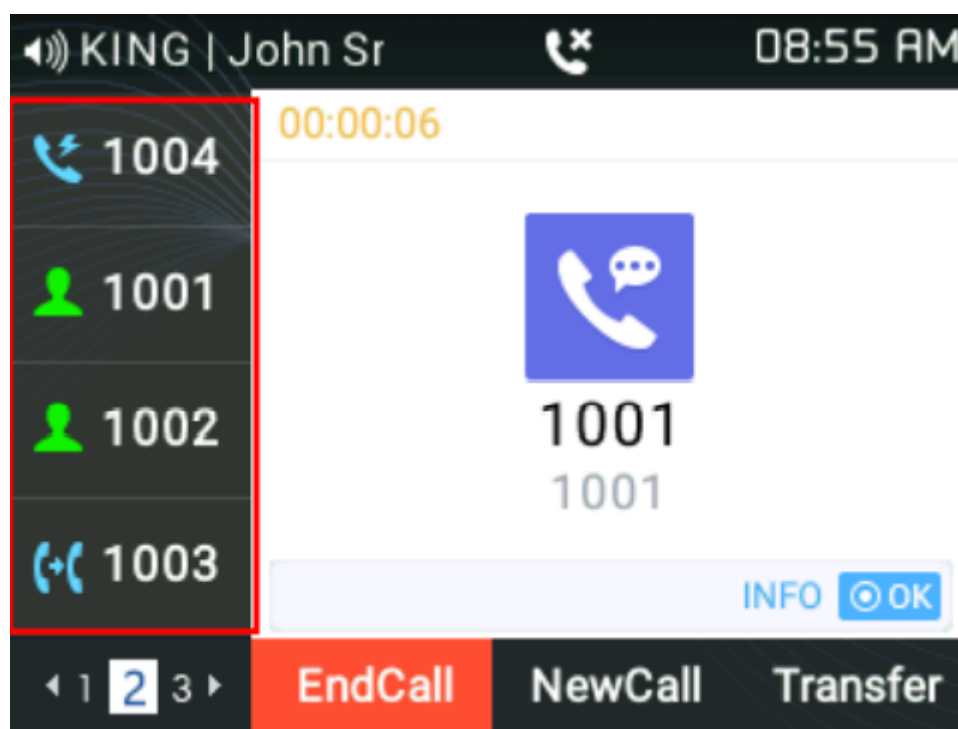

VPK Paging

Active VPK Page

If "Active VPK page" is enabled, when a monitored BLF number is called, the LCD screen will indicate the VPK Page that contains the VPK key as below

Noise Suppression

The GRP series offer noise suppression sound processing to provide clear voice through the handset. The phone processes the sound picked-up from the handset microphone to isolate the user's voice from the background noise, in order to deliver an intelligible voice to the other user on the other end of the line. To enable this feature, access the web UI as a user, then navigate to **System Settings -> Preferences -> Audio Control**, scroll down to **Other Noise Cancellation**.

Other Noise Cancellation

Noise Suppression Mode ⓘ

AI Noise Cancellation

Save Save and Apply Reset

Noise Suppression Mode

Select the mode to use:

- **AI Noise Cancellation:** This mode is effective at cancelling the environment noise, as well as the sudden change in the ambient noise, like a sudden loud sound.
- **Traditional Noise Cancellation:** This mode is effective at cancelling the environment noise.

AI Noise Suppression is not suppressed on the non-legacy hardware of the following models: GRP2610/P, GRP2611G, GRP2612/P/W/G, and GRP2613.

Configuring Eventlist BLF

Grandstream GRP261X/GRP2624/GRP2634/GRP2636/GRP2670 Carrier-Grade IP Phones support both Grandstream UCM Busy Lamp Filed and Event List BLF features and allows end-users, such as attendant, to monitor the call status of users in the list. GRP261X/GRP2624/GRP2634/GRP2636/GRP2650/GRP2670 supports this feature by sending out the subscription request to the UCM and changing the indicator status of the Line keys, MPKs, or virtual MPKs that are associated with the monitored users. Additionally, the phone is also able to display the original caller's call ID and to pick up the calls to the monitored extensions by using a pre-defined feature code called BLF- Call-pickup Prefix.

For more details on the Eventlist BLF configuration guide, please refer to:

<https://documentation.grandstream.com/knowledge-base/how-to-configure-eventlist-blf/>

Screenshots

Users can take screenshots of the GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 Screen, by pressing and holding the **"HOLD"** key and then the **"MENU"** key, the output will be shown on the phone's Web GUI under **Status -> System Info** as shown in the figure below:

Screenshot

Capture Screen Start

Screenshot screenshot.bmp 08/23/22 12:47:41 Download

Clear Screenshots Start

Screenshots

- When the device is added to GDMS Unified Communication platform, the user can take the screenshot directly from GDMS.

☐		—	GRP2614	1.0.13.59	No Account	Default	Enable	2025/09/19 13:03	   
☐		GXP2170	GXP2170	1.0.11.98	3050	Default	Enable	2025/09/19 13:03	
☐		—	GDS3710	1.0.13.15	1026	Default	Enable	2025/09/19 13:03	
☐		—	GRP2615	1.0.13.49	1001	Default	Enable	2025/09/19 13:03	
☐		—	GRP2636	1.0.13.31	No Account	Default	Enable	Not connected	

You will be taken to the Diagnostics page, where you can click on the button "Screenshot" to take the a screenshot of the LCD screen of the device, which also will be downloaded immediately.



Power
Download
Settings
Refresh

Device Name
—

MAC Address
—

Public IP
—

Private IP
192.168.6.161

Model
GRP2614

Device Category
Audio Device

[View More](#)

< route
Syslog
Capture Trace
Network Diagnostics
System Status
Screenshot
>

Screenshot

Screenshot Log

Screenshot Time	Operator	Screenshot Result
2025/10/15 13:33	emea_support	Success
2025/10/15 13:28	emea_support	Success


Total 2

10/page

<
1
>

Diagnosis

Users could access the factory functions menu in order to diagnose the phone's hardware/software. To do so please access to LCD menu under **System -> Factory Functions** or use the shortcut by pressing the "HOLD" Key and the "Up-arrow" key at the same time.

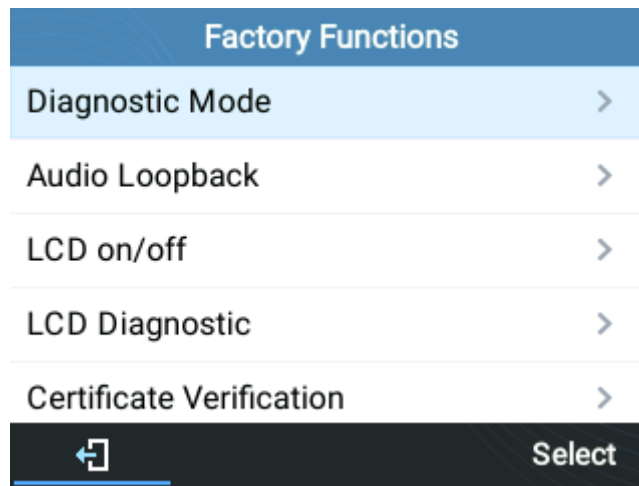


Factory Functions

These tools can be used to check the hardware and software status of the phone like verifying the LED, keypad buttons, LCD and certificates verification ...etc.

Call Flip

Call flip is a feature that allows switching devices, e.g., when a call is ongoing on Wave Desktop, the user can seamlessly switch to another device, given that both devices are registered to the same SIP account. Call Flip can be performed using the feature code *46.

GRP phones automatically detect if a call is ongoing on a different device. When a call is detected, the phone will show a prompt to the user asking them whether they want to switch their call to the IP phone.

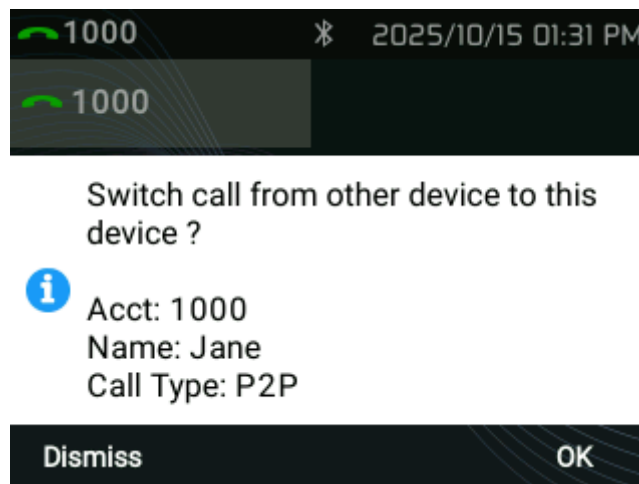

Call Flip Prompt

CONTACTS

Local Contacts


Users can manage contacts by adding, deleting, and modifying single contacts, downloading contacts from HTTP/TFTP server, importing contacts from external storage, and exporting contacts to external storage.

For more details please refer to the admin Guide:

<https://documentation.grandstream.com/knowledge-base/grp261x-grp262x-grp263x-series-administration-guide/>

Add a single Contact

On the Local Contacts menu, select Local Phonebook then press the "New" soft key. The phone will display the following:

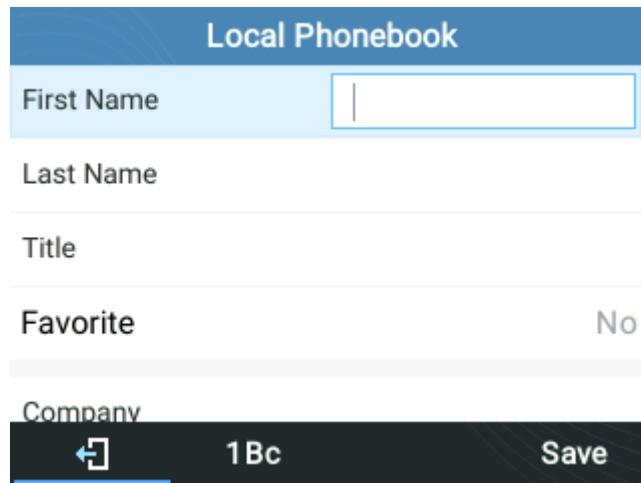

New Contact

Input the contact details then press "Save" soft key. The new contact will be added to your local phonebook.

Phonebook

XML Phonebook syntax

Users can add contacts using the below syntax in the **phonebook.xml** file:

```
<AddressBook><Contact><id>1</id><FirstName>abc</FirstName><LastName>def</LastName><JobTitle>jobtitl
e</JobTitle><Frequent>0</Frequent><Phone
type="Conference"><phonenumber>6300</phonenumber><accountindex>0</accountindex></Phone><Phone
type="Work"><phonenumber>1111</phonenumber><accountindex>0</accountindex></Phone><Phone
type="Home"><phonenumber>2222</phonenumber><accountindex>0</accountindex></Phone><Phone
type="Mobile"><phonenumber>3333</phonenumber><accountindex>0</accountindex></Phone><Primary>1</Prim
ary><Department>department</Department><Job>job</Job><Title>title</Title><Company>company</Company>
</Contact></AddressBook>
```

Download/Upload XML Phonebook from Web UI

From the phone's web interface under **Application -> Contacts -> Phonebook Management**, Use the button "Download" to retrieve the XML phonebook currently configured on the phone. Press the button "Upload" to choose your XML phonebook to upload to the phone.

Contacts

Contacts

Group Management

Phonebook Management

Enable Phonebook XML Download ⓘ

Disabled

HTTP/HTTPS Username ⓘ

HTTP/HTTPS Password ⓘ

Phonebook XML Server Path ⓘ

Phonebook Download Interval ⓘ

0

Remove Manually-edited Entries on Download ⓘ

☒

Import Group Method ⓘ

Replace

Sort Phonebook by ⓘ

Last Name

Download XML Phonebook ⓘ

Download

Upload XML Phonebook ⓘ

Upload

Phonebook Key Function ⓘ

Default

Default Search Mode ⓘ

Quick Match

Replace Duplicate Items ⓘ

No

Save

Save and Apply

Reset

DownloadUpload XML Phonebook

On the LCD screen, under Contacts. The phone will display the following:

abc def

abc def

jobtitle

Work	1111
Home	2222
Mobile	3333

↩

Edit/Dial

Dial

Edit

Local Phonebook Contact Information

Users can also input the "Company", "Title", and "Job" fields on the **phonebook.xml** like in the previous example or through the phone's LCD by pressing the "Edit" soft key, as below:

Local Phonebook	
Title	jobtitle
Favorite	No
Company	
Department	Grandstream
Job	
← BackSpace abc Save	

Local Phonebook CompanyTitleJob Fields

Dialed Numbers Filtering

After downloading the phonebook, when dialing a number from the contacts, the number may include special characters such as "()", "- ", or space in between numbers.


The phone also supports partial match search in Predictive Dialing. As you type digits, contacts from the local phonebook will be suggested even if the digits appear in the middle or end of the contact number.

For example, without partial match search, If a contact in the phonebook had the number "**05554321987**", typing "**432**" on the keypad wouldn't show that contact unless the number started with "432". with partial match search, typing any part of the number (e.g., "432" or "1987") will still trigger that contact as a suggestion under predictive dialing.

John Doe	
	John Doe
Work	(212)675236298
← Edit/Dial Dial Edit	

Contact Numbers with Special Characters

When pressing the Dial softkey, the phone will filter the special characters and make the calls send out properly.

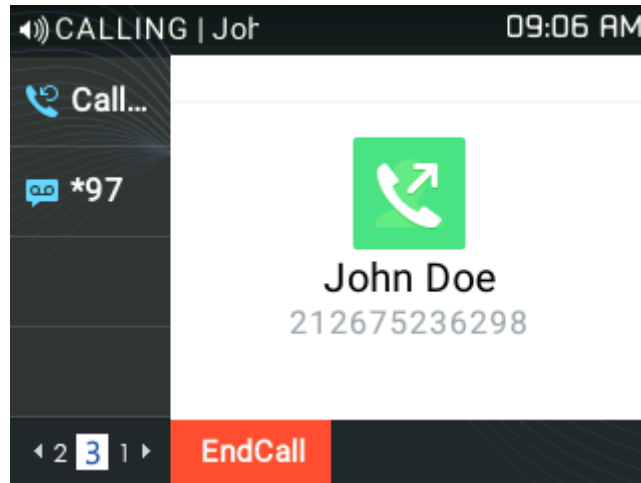


Call with Filtered Characters


Contact search mode

Quick Match

The quick search feature allows users to search parts and strings of the entries. For instance, if users only remember the first name, last name, or parts of the name/phone number, they can use the string in the search bar as displayed in the following screenshots:

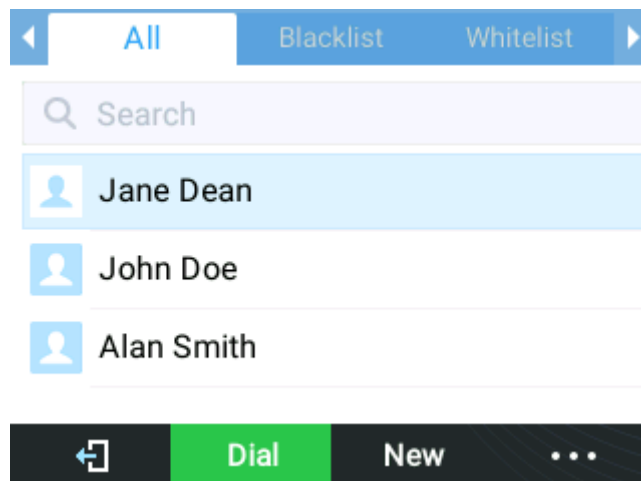


Before Search

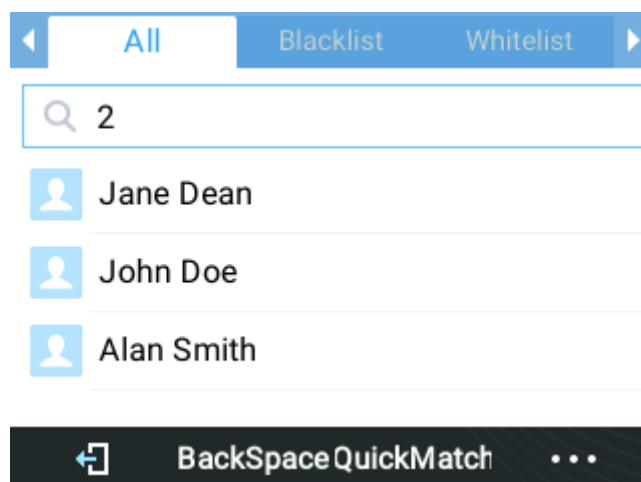

The phone also supports partial match search in Predictive Dialing. As you type digits, contacts from the local phonebook will be suggested even if the digits appear in the middle or end of the contact number. For example, without partial match search, If a contact in the phonebook had the number **"05554321987"**, typing **"432"** on the keypad wouldn't show that contact unless the number started with "432". with partial match search, typing any part of the number (e.g., "432" or "1987") will still trigger that contact as a suggestion under predictive dialing.

Exact Matching

Users can search their contacts using alphabets in the exact mode which allows them to find their contacts even if they forget the numbers. To perform this type of search, make sure that the search type is set to "ExactMatch" as shown in the following figure, then you can enter the exact name of the contact for lookup.

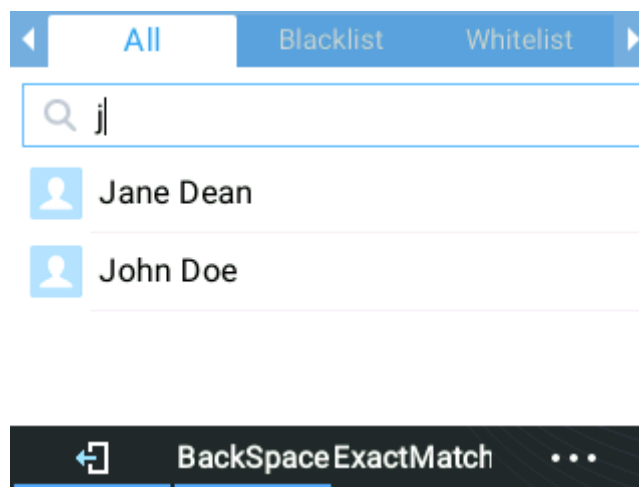


ExactMatch

LDAP

Functionality

Users can search contacts on the LDAP server from Contacts Menu, under LDAP Directory. This option can be configured under device Web UI **Phonebook** -> **LDAP**. For further information, please refer to the admin guide.

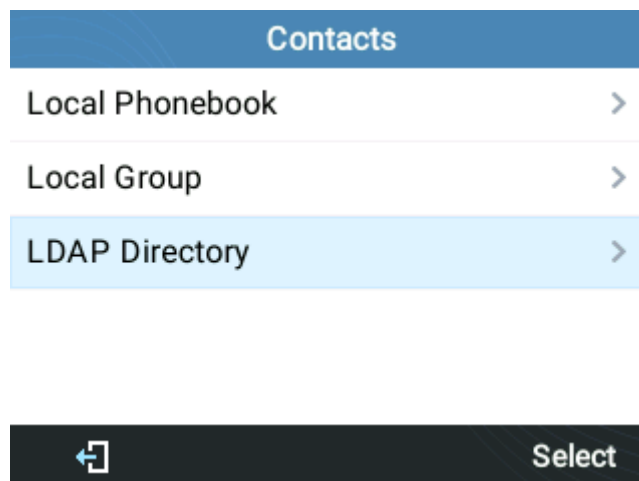

LDAP Directory

Search

1

1000

1001

1002

1003

↩

Search

BackSpace

...

LDAP search

<- 4008 ->

👤

4008

AccountNumber

4008

Type

Contact

↩

Dial

Edit/Dial

Save

<- 6301 ->

👤

6301

AccountNumber

6301

Last Name

6301

Type

Conference

↩

Dial

Edit/Dial

Save

LDAP Contacts

- When performing LDAP search, results will now load dynamically rather than after pressing the search softkey.
- The GRP261x phones support LDAP directory entries with the "Conference" type, allowing users to easily access and join conference resources directly from the phone's directory.

Broadsoft Directories

Functionality

Users can also search from the Broadsoft directories by entering target content in the search form. This option can be configured under device Web UI **Settings -> Broadsoft**. For further information, please refer to the admin guide.

Contacts

Local Phonebook

Local Group

Broadsoft Phonebook

LDAP Directory

SearchAll

Select

Broadsoft XSI Login

Username

1354

Password

Remember Me

NO

1Bc

OK


Search in Broadsoft Directories

CALL HISTORY

Local Call History

There are five different categories in the local call history. Users could use the navigation keys to browse call logs:

- All :
- Missed :
- Dialed :
- Answered :
- Transferred :

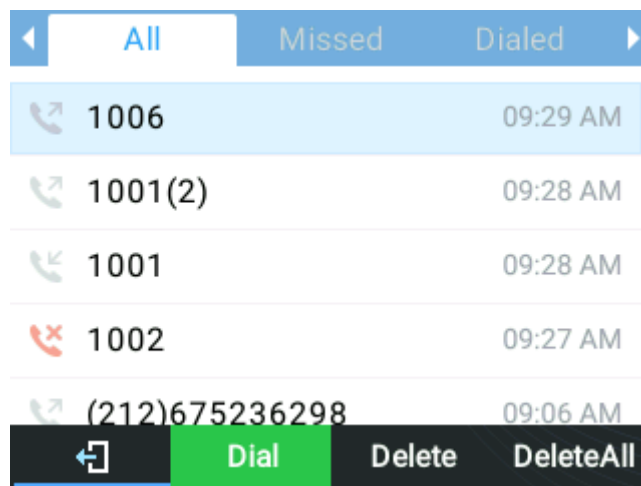

Call History Screen Page

- **Dial:** Tap on one of the call history entries to call this number directly. The phone will use the same account as the call log when dialing out.
- **Delete:** Select an entry then press the "Delete" soft key
- **DeleteAll:** Clear the call history

Missed Calls Indication

When users miss a call, the GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 will show the notification on the LCD screen as shown below:



Missed Calls

Users have the option to return the call immediately by clicking the "**CallReturn**" Softkey.

1. Users can set the phone to turn off the LCD backlight while having a missed call. This option can be found under device Web UI **Settings -> Preferences -> LCD Display -> disable missed call backlight**. If users want to have missed call notifications, select yes, bug flash MWI LED.
2. The phone LCD will also display VM notifications in case the voicemail isn't cleared yet.

Automatic Call History Clearing with UCM PMS Integration

The GRP26xx supports automatic clearing of call history when a guest checks out from the UCM PMS. This feature ensures that call logs are removed from the phone after the guest's stay, maintaining privacy and security.

In order to enable automatic call history clearing, please refer to the steps below:

1. **Log in to the UCM Web Interface** and navigate to **Integrations->PMS->Basic Settings**.
2. Under Basic Settings, set the **"Automatically Clear Phone Call History"** option to **"Check Out"**.

PMS

Basic Settings	Room Management	Room Status	Call Rate	Wakeup Service	Mini Bar	Housekeeper
PMS Module	Local PMS					
Wakeup Prompt	Wake Call					Upload Audio File
Room Status Update Prompt	Default Room Status Update Prompt					Upload Audio File
Back Up Voicemail Recordings	☐					
Sync Guest Name to Phone	☐					
Automatically Clear Phone Call History	Check Out					
Automatically Clear Wakeup Calls	None					
Automatically Clear Wave Chat History	None					
Automatically Reset User/Wave Password	☐					
Review Bill at Check-Out	☐					
Currency Unit	Dollar: \$					

UCM PMS Basic Settings

1. Ensure the GRP26xx extension is added to the **Room Management** section in the UCM PMS, the Check-in in **Room Status**.
1. After a guest checks out, the call history on the GRP26xx will be automatically cleared.

If the call history is not cleared after checkout, please verify that the GRP26xx and UCM firmwares are up to date.

CONNECTING TO DEVICES

EHS Headset


The GRP261X/GRP2624/GRP263x/GRP2670/GRP2650 supports a normal RJ11 headset and Plantronics EHS headset.

To use the Plantronics EHS headset, go to the web GUI **Settings -> Audio Control**: Headset Type. Select "Plantronics EHS" then reboot the phone.

1. Connect EHS Headset (Plantronics) to the phone. Insert headset connector into the RJ11 headset port on

the back of GRP261X/GRP2624/GRP263x/GRP2670/GRP2650.

- 2. To use headset mode, press the headset button . A headset icon will show on the LCD.

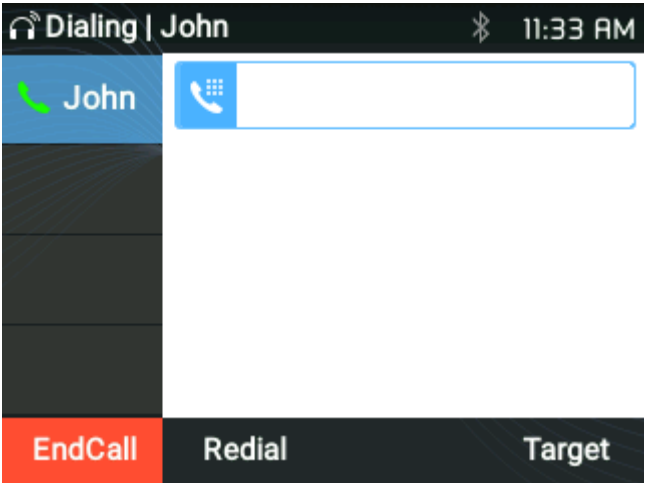

Headset enabled


Bluetooth

Bluetooth is available on GRP2614, GRP2615 & GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only.

GRP2614/GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 are also capable of connecting to Bluetooth devices. Users could connect to cellphones (supporting Bluetooth) via hands-free mode or use a Bluetooth headset for making calls.

To connect to a Bluetooth device, turn on the Bluetooth radio first. The first time when using a new Bluetooth device with the GRP2614/GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650, "pair" the device with the phone so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device.

Bluetooth-related settings are under the Phone's LCD Menu -> System -> Bluetooth.

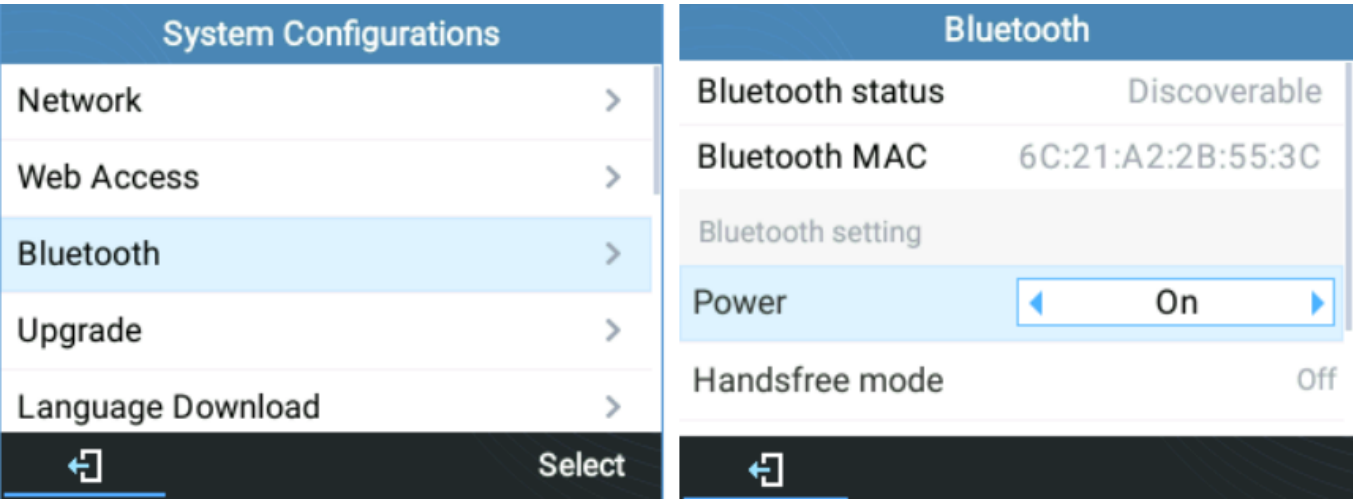


Bluetooth feature

There are two ways to pair the GRP2614/GRP2615/GRP2616/GRP2624/GRP2634/GRP2636/GRP2670 using the Bluetooth feature:


- From the GRP2615/GRP2614/GRP2616/GRP2624/GRP2634/GRP2636/GRP2670

1. Select "Start Scan" to search nearby Bluetooth devices

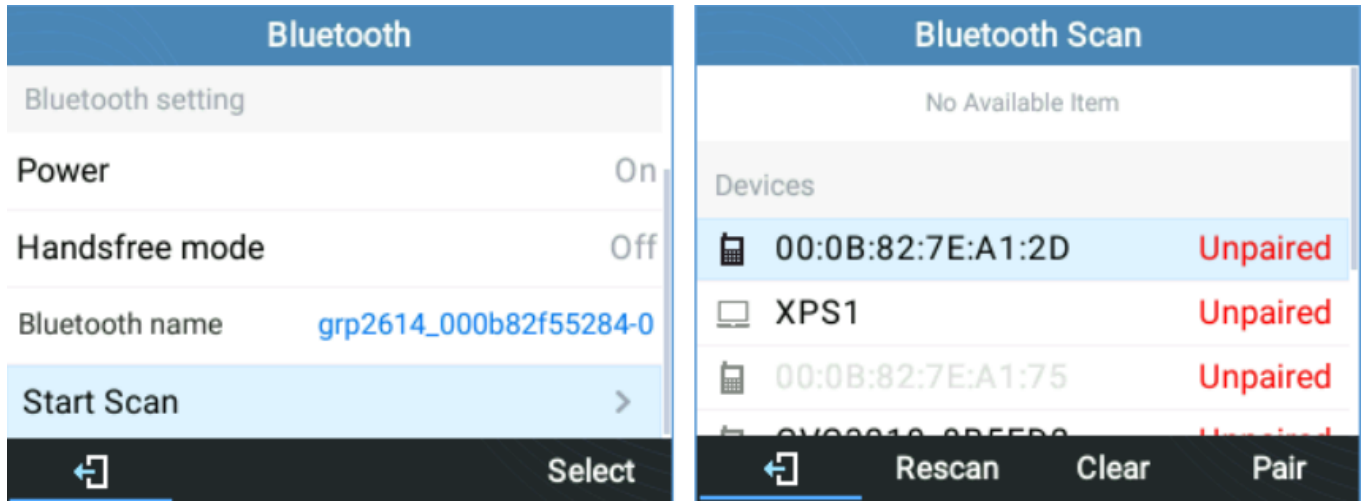


Bluetooth Scan

2. Choose a device then select "Pair". The phone will then start the pairing process

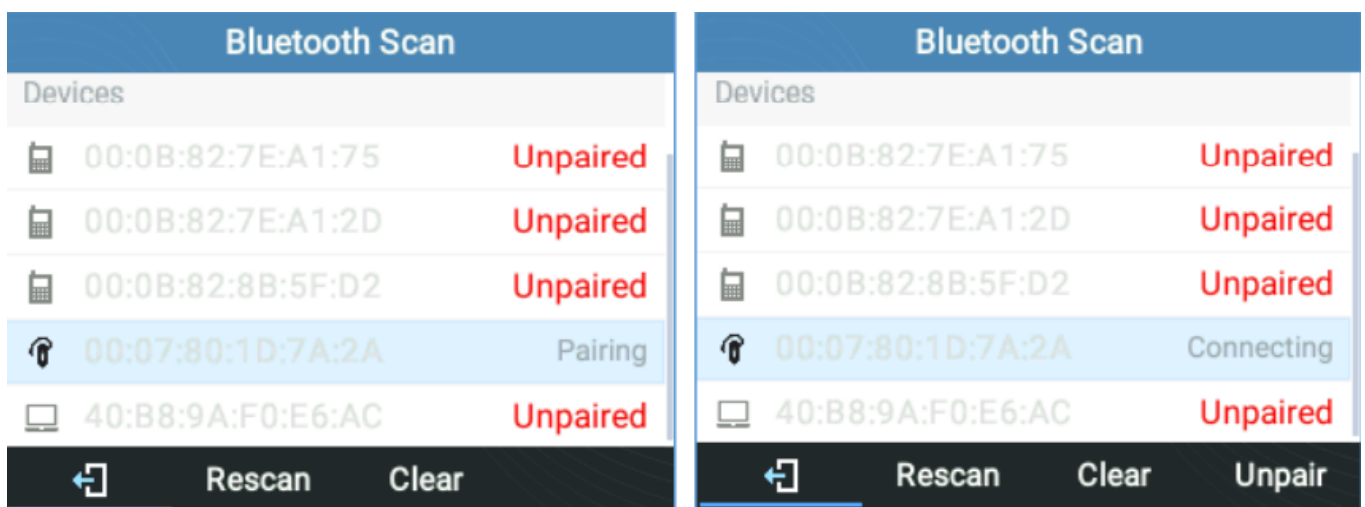

GRP2615GRP2614GRP2616GRP2624GRP2634GRP2636GRP2670GRP2650 Pairing Process

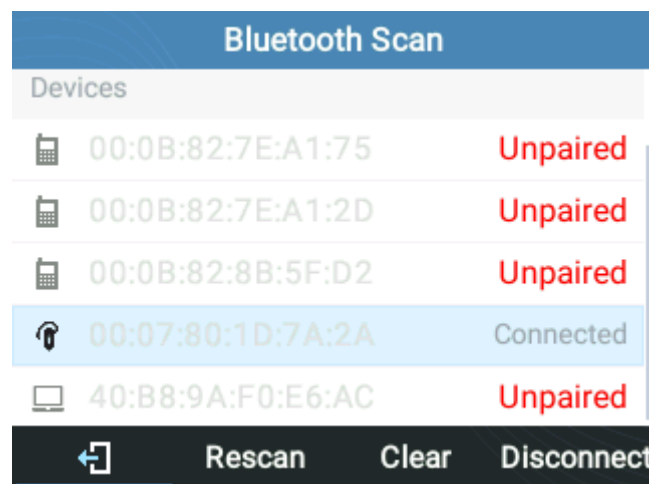


Successful Bluetooth pairing

3. If the pairing succeeds, users will see "Connected" next to the name of the Bluetooth device.


- From a Bluetooth different device:

1. Make sure the Bluetooth is powered on and shows "Discoverable" under "Bluetooth status"

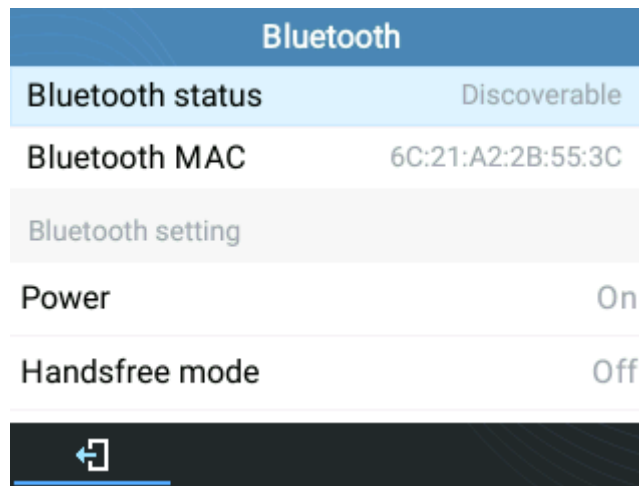

Bluetooth Status

2. Press "YES" to accept the pairing request

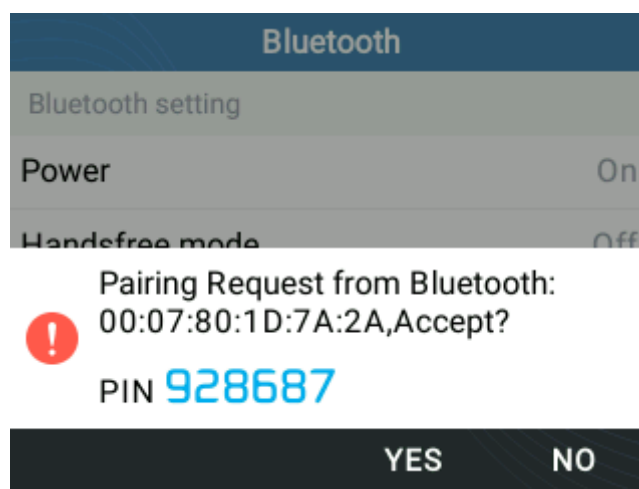

Pairing Request

- Turn off Bluetooth if it is not used.
- For more details on the Bluetooth features, please refer to:
<https://documentation.grandstream.com/knowledge-base/using-bluetooth-on-grp-phones/>

Hide Bluetooth Settings from LCD

There are two methods users can follow to hide Bluetooth settings from the GRP26xx LCD:

Method 1: Hide Bluetooth Settings Using the WebGUI

1. **Access the Web Interface** (Admin login required).
2. Navigate to **Bluetooth Settings** Set to **"Off & Hide Menu From LCD"**.

Bluetooth Settings

Bluetooth Power ?	Off & Hide Menu From LCD
Hands-free Mode ?	☐
Hands-free Disconnect Timer ?	0
Bluetooth Name ?	grp2634

Hide Bluetooth Settings from LCD

1. **Save & Reboot** the device for changes to take effect.

Method 2: Hide Bluetooth Settings Using P-Values (Provisioning)

Users can configure the following P-values via configuration file or SSH/NVRAM commands:

- **P22037** (Hide/Show Bluetooth Settings)
 - 0 = Hide Bluetooth settings
 - 1 = Show Bluetooth settings (default)
- **P2910** (Alternative method)
 - 2 = Off & Hide Bluetooth from LCD

Changes via P-values require a reboot to take effect.

Wi-Fi

Wi-Fi is supported on GRP2612W, GRP2614, GRP2615, GRP2616, GRP2624, GRP2634, GRP2636, GRP2670 & GRP2650 only.


For easy deployment, GRP2612W/GRP2614/GRP2615/GRP2616/GRP2624/GRP263x/GRP2670/GRP2650 out of the box is preconfigured to connect to a default SSID named wp_master with a password (WPA/WPA2 PSK) equal to **wp!987@dmín**, for this to work the following criteria needs to be met:

1. The IP phone should not be connected by a LAN cable.
2. No SIP account should be registered on the IP phone.
3. SSIDs from previous connections should not be saved on the IP phone, please factory reset the device to confirm.

Connect to a Wi-Fi Network


To connect these models to a Wi-Fi Network through the keypad menu. Please follow the below steps:

1. On LCD **MENU**, navigate to **System -> Wi-Fi settings**.

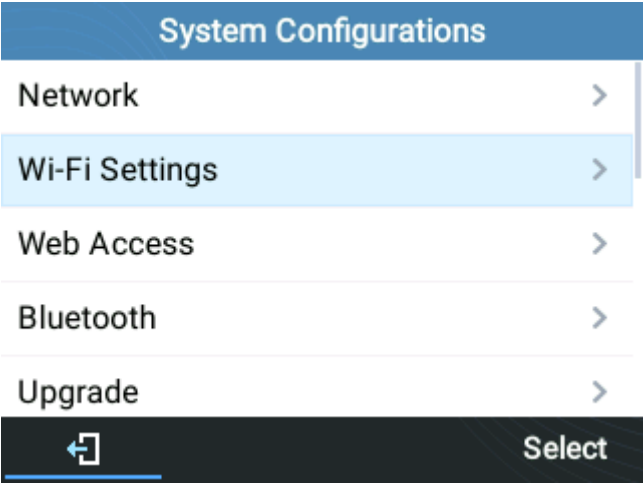

Wi Fi feature


2. Set Wi-Fi to "Enabled" and press the "Save" button.

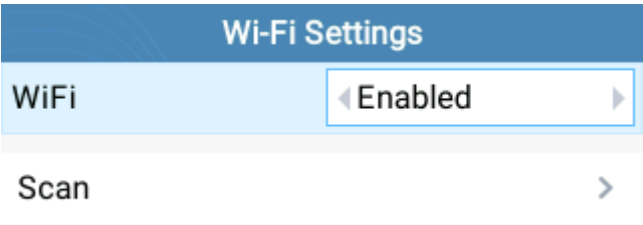

Enable Wi Fi


3. Select "Scan".

The device will automatically start scanning for Wi-Fi access points within the range

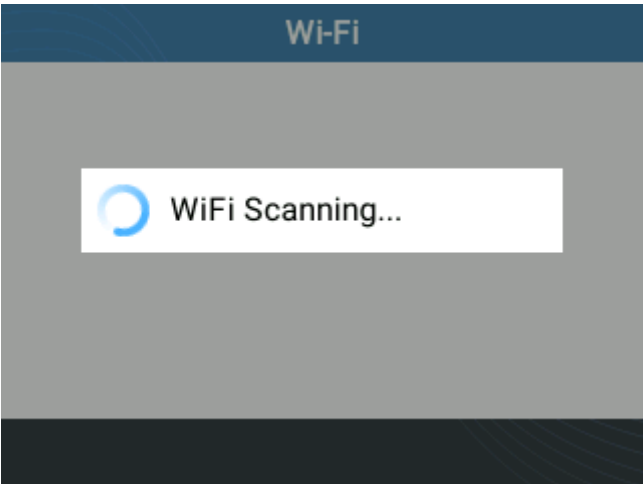


Wi Fi Scanning

4. A list of available Wi-Fi networks will be displayed. Select the desired network,

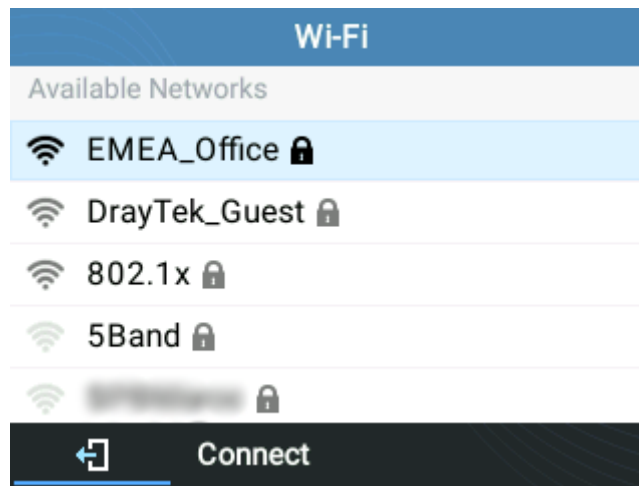

Nearby Wi Fi networks



5. If required, enter the password to connect.

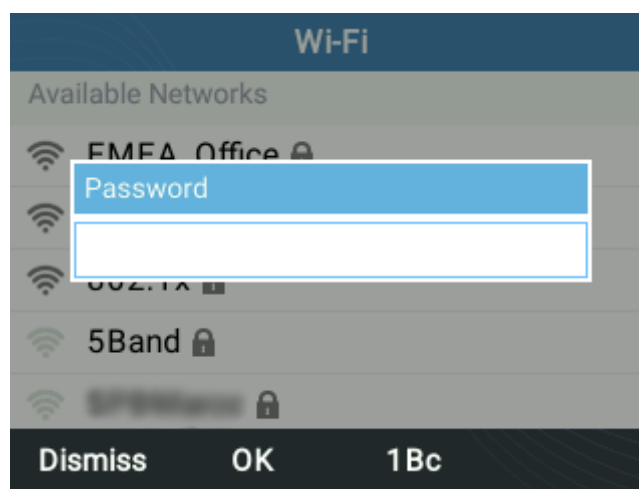


Wi Fi password required

- A softkey to show or hide passwords has been added on firmware upgrade 1.0.9.62.

6. An incorrect password will trigger an error message "Cannot connect to the selected network".
 - If the connection is successful a "Wi-Fi NetWork Connected" message will display on the screen

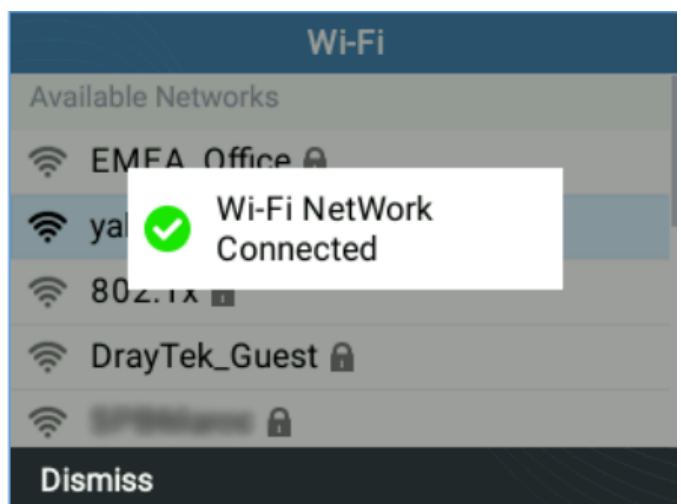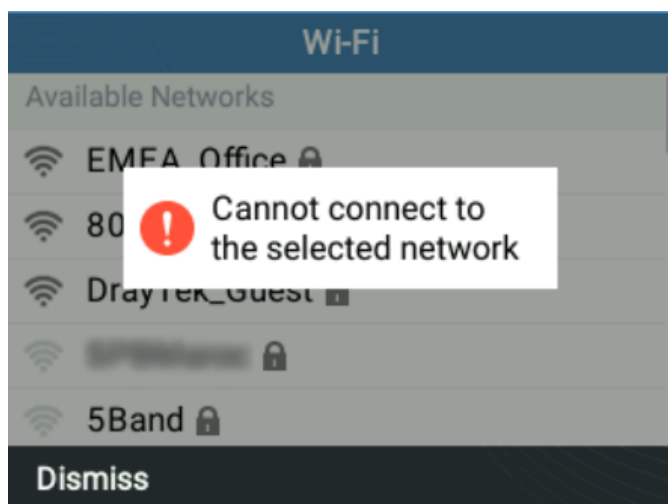

7. Check the Wi-Fi icon on the idle screen to verify if the Wi-Fi network is properly connected.

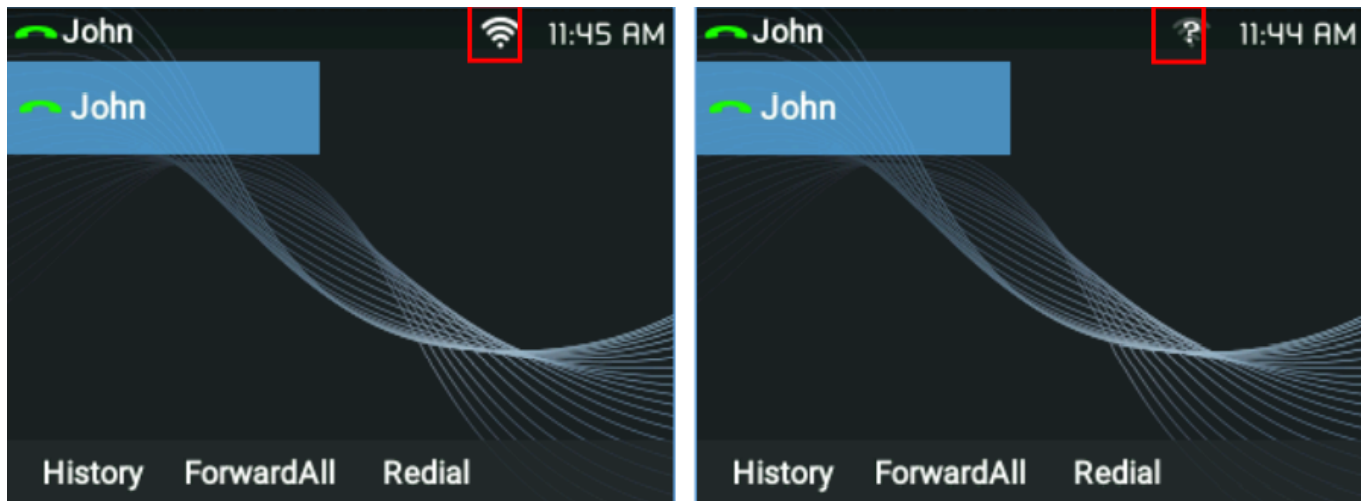

Wi Fi Status

Checking Current Connection Information

To view detailed information about the current Wi-Fi connection, please navigate to the **LCD Menu -> Status -> Network Status -> Current Connection**.

The details displayed in this window are outlined in the table below.

WiFi	
BSSID	c0:74:ad:62:c0:d6
MAC Address	C0:74:AD:4B:D0:A0
Security Type	WPA_PSK
Cent Frequency	5220
Signal Strength (dBm)	-65
←	

WiFi	
Current Connection	
SSID	EMEA_Office
BSSID	c0:74:ad:62:c0:d6
MAC Address	C0:74:AD:4B:D0:A0
Security Type	WPA_PSK
←	

SSID	The name of the connected network.
BSSID	The MAC address of the access point.

MAC Address	The device's Wi-Fi adapter MAC.
Security Type	Authentication method (e.g., WPA2/PSK).
Channel Frequency	Channel frequency in MHz.
Signal Strength (dBm)	Shown in dBm (closer to 0 is stronger).

Hide Wi-Fi Settings from LCD

There are two methods users can follow to disable Wi-Fi settings from appearing on the GRP261x LCD:

Method 1: Hide Wi-Fi Settings Using the WebGUI

1. **Access the Web Interface** (Admin login required).
2. Navigate to **Wi-Fi Settings** Set to "**Disable & Hide Menu From LCD**"

Wi-Fi Settings

Wi-Fi Function ⓘ

☐ Disable
☐ Enable
☒ **Disable & Hide Menu From LCD**

Wi-Fi Band ⓘ

☒ 5G & 2.4G
☐ 5G
☐ 2.4G

Country Code ⓘ

Germany

⌵

ⓘ

ESSID ⓘ

Scan

Add Network

Disable Wi Fi Settings from LCD

1. **Save & Reboot** the device for changes to take effect.

Method 2: Hide Wi-Fi Settings Using P-Values (Provisioning)

Users can configure the following P-values via configuration file or SSH/NVRAM commands:

- **P22038** (Hide/Show Wi-Fi Settings)
 -
 - 0 = Hide Wi-Fi settings (disable & hide from LCD & WebGUI)
 - 1 = Show Wi-Fi settings (default)
- **P7800** (Alternative method)
 - 2 = Disable & Hide Wi-Fi from LCD

Changes via P-values require a reboot to take effect.

RESTORE FACTORY DEFAULT SETTINGS

Restoring the Factory Default Settings will delete all configuration information on the phone. Please backup or print all the settings before you restore to the factory default settings. Grandstream is not responsible for


restoring lost parameters and cannot connect your device to your VoIP service provider.

Restore Factory Settings Using the LCD Menu

Please follow the instructions below to reset the phone:

1. Press the MENU button to bring up the keypad configuration menu.
2. Select "System" and enter.
3. Select "Operations - Factory Reset".
4. A warning window will pop out to make sure a reset is requested and confirmed.

Press the "Yes" Softkey to confirm and the phone will reboot, or "No" Softkey to cancel the Reset.

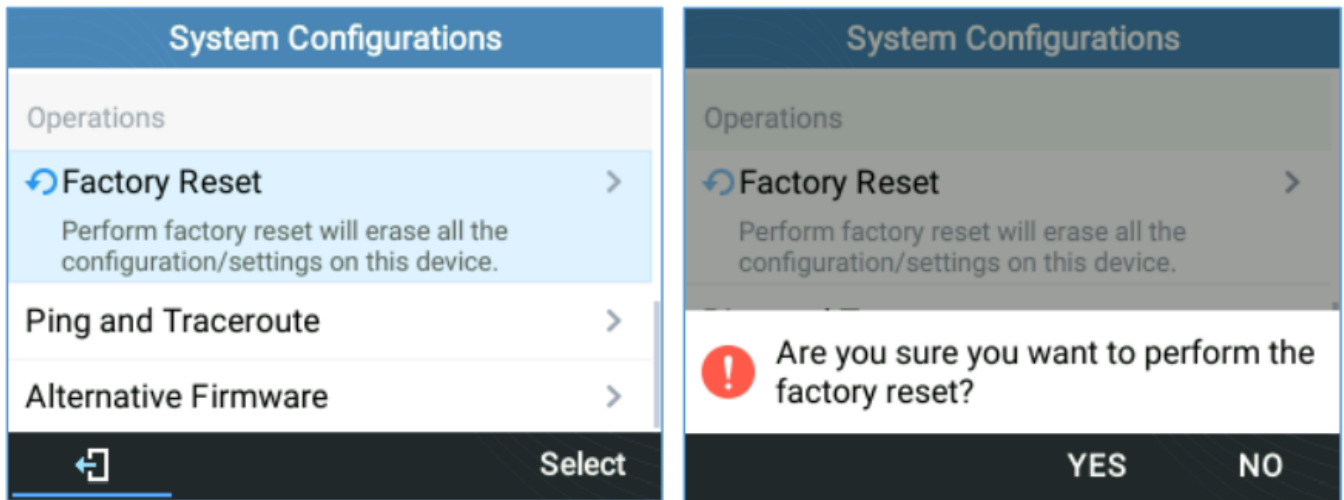


Factory Reset using LCD Menu


Restore Factory Settings Using the Keypad

Please follow the instructions below to reset the phone using the keypad:

1. While the device is booting, press and hold the **1 + 9** keys on the keypad.
2. The LCD will display a recovery menu with two options:
 - **Factory Reset:** Restore all settings to defaults.
 - **Rollback Firmware:** Revert to the last installed alternative firmware.
1. Use the **up/down arrow keys** to highlight your choice, then press the **Submit softkey** button to confirm.

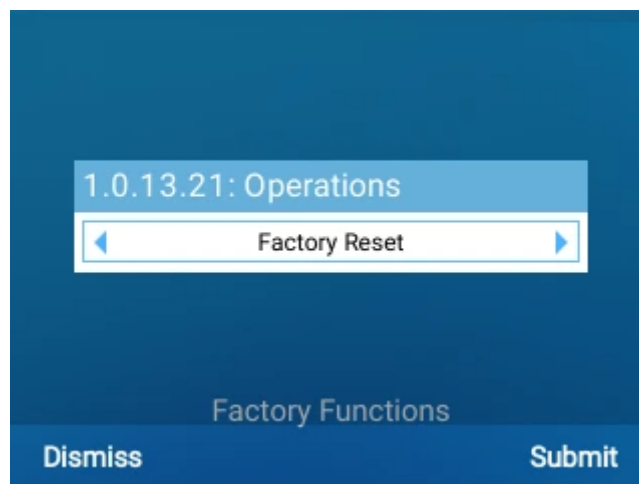

Factory Reset

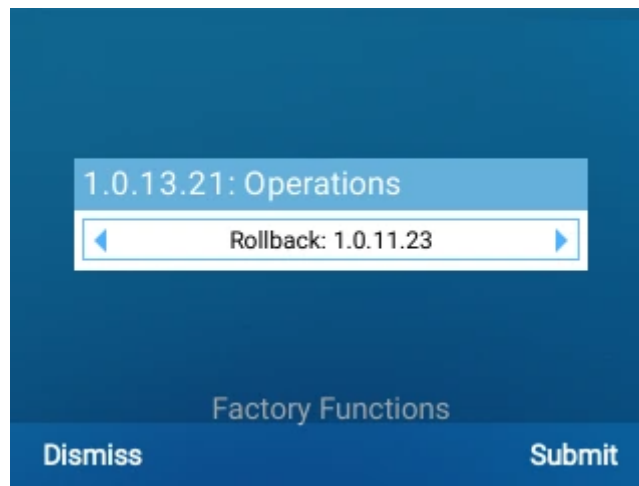

Rollback to Alternative Firmware

CHANGE LOG

This section documents significant changes from previous versions of user manuals for GRP261X/GRP2624/GRP263x/GRP2670/GRP2650. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.13.127

- No major changes.

Firmware Version 1.0.13.122

- No major changes.

Firmware Version 1.0.13.119

- Added ability to display location information on LCD under Status / System Info based on the HELD location response. [[IP-based geographic information](#)]
- Added a congestion tone on the dial screen to be played when no accounts are configured and Direct IP calls are disabled. [[Congestion tone](#)]
- Added a "Enable VLAN" setting to the LCD menu under System -> Network -> Layer 2 QoS [[Enable VLAN](#)]
- Added ability to configure "Features" softkey under Custom Idle Screen Softkey Layout [[Features](#)]
- Added "Dial DTMF" as a mode for Custom Call Screen Softkeys [[Dial DTMF](#)]
- Added the ability to configure "Record" VMPK so that it will send the value field of the Record VMPK as a DTMF to the server to start/stop server-side recording. [[Record](#)]

Firmware Version 1.0.13.59

- Added AI noise suppression to non-legacy hardware (excluding: GRP26010/P, GRP2611G, GRP2612/P/W/G, and GRP2613). [[Noise Suppression](#)]
- The security software version can now be viewed in **Status > System Information** menu. [[Configuration Via Keypad](#)]
- A maximum of 6 softkeys instead of 3 can now be configured by the administrator. [[Softkeys in Idle Screen](#)]
- Added the ability for the administrator to display the year on the status bar. [[Date and Time](#)]
- Added the ability for the administrator to enable listening to a call through the handset and the headset at the same time. [[Handset, Speaker, and Headset Mode](#)]
- Added an icon to the status bar when remote access through GDMS is ongoing. [[Remote Access to Web UI Through GDMS](#)]
- Added Call Flip prompt when a call is ongoing on the same extension on a different device. [[Call Flip](#)]

- Added Multicast Listener VPK function. [[Virtual Multi-purpose Keys](#)]
- Added support for taking a screenshot from GDMS UC platform. [[Screenshots](#)]

Firmware version 1.0.13.31

- Added the ability to ignore the diversion header. [[Enable Diversion Information Display](#)]
- Added partial match support in Predictive Dialing Search for Phonebook contacts. [[Quick match](#)]

Firmware version 1.0.13.21

- Added support for LDAP type "Conference". [[LDAP](#)]
- Added support for phone type "Conference" in XML phonebook. [[XML Phonebook syntax](#)]
- Added support for displaying the call queue name that the phone receives from UCM. [[UCM Call Center](#)]
- Added support for rolling back to alternative firmware when booting up by holding the 1+9 keys. [[Rollback Firmware](#)]
- Added support for SIP URI. [[Making Calls using SIP URI/Hostname](#)]
- Added support for deleting call logs after guest checkout when using UCM. [[Automatic Call History Clearing with UCM PMS Integration](#)]
- Added support for Enhanced Call Park. [[Enhanced Call Park](#)]
- Added support for hiding Bluetooth and WiFi settings from LCD and WebUI. [[Hide Bluetooth Settings from LCD](#)][[Hide Wi-Fi Settings from LCD](#)]
- Added display of connected Wi-Fi signal strength on LCD. [[Signal Strength \(dBm\)](#)]
- Increased maximum number of SIP accounts of GRP2614/GRP2624/GRP2634 to 12 accounts and GRP2615/GRP2616/GRP2636/GRP2650/GRP2670 to 16 accounts. [[Multiple SIP Accounts and Lines](#)] [[Technical Specifications](#)]
- Added a "Login from LCD" button when accessing the Web GUI. [[Accessing the Web UI via LCD](#)]
- Added support for remote access to Web UI via GDMS for firmwares 1.0.13.21+. [[Remote Access to Web UI through GDMS](#)]

Firmware version 1.0.11.23

- No Major Changes.

Firmware version 1.0.11.18

- Added support for dynamic search results during LDAP search. [[LDAP](#)]
- Increased the maximum number of SIP accounts for GRP2614 and GRP2615 to 6 accounts. [[Multiple SIP Accounts and Lines](#)] [[Technical Specifications](#)]

Firmware version 1.0.11.15

- Increased maximum number of SIP accounts for the GRP2612, GRP2613 to 4 SIP accounts and GRP2624, GRP2634 to 6 SIP accounts (with the exception of legacy hardware discontinued in 2020). [[Multiple SIP Accounts and Lines](#)] [[Technical Specifications](#)]

Firmware Version 1.0.9.141

- No Major Changes.

Firmware Version 1.0.9.136

- No Major Changes.

Firmware Version 1.0.9.132

- Added ability to send out star codes to the server while being able to use local call features via LCD. [[Receiving calls](#)]

Firmware Version 1.0.9.103

- No Major Changes.

Firmware Version 1.0.9.99

- No major changes.

Firmware Version 1.0.9.83

- Added the ability to connect to the pre-configured default SSID "wp_master" on Wi-Fi supported models [[Wi-Fi](#)]

Firmware Version 1.0.9.74

- Added a softkey to toggle displaying or hiding the WIFI password when inputting the field.[\[Wi-Fi\]](#)
- Added support for Greek LCD strings.
- Improved Japanese LCD strings.
- Added Energy saving Icon Definition [[GETTING TO KNOW GRP261X/GRP2624/GRP2634/GRP2650](#)]
- Added support for DTMF hard key press to the command element.

Firmware Version 1.0.9.22

- Added support for GRP2650.
- Modernized the look of the Web UI.
- Added the ability to send DTMF while the DUT has a call waiting on screen. [[Receiving calls](#)]

Firmware Version 1.0.7.33

- No major changes.

Firmware Version 1.0.7.25

- No major changes.

Firmware Version 1.0.7.23

- No major changes.

Firmware Version 1.0.7.22

- No major changes.

Firmware Version 1.0.7.19

- Added "Yerevan" to GMT+04:00 Timezone.
- Added option to disable all Local Call Features except Call Forwarding and DND.
- Added support for additional display headers: P-Served-Application and P-Served-User.

Firmware Version 1.0.5.93

- Added ability to end the call on hold without having to resume it first [[End call](#)]
- Added ability to display the entire VPK description label by holding the VPK for 3 seconds when in call [[VPK description LCD display](#)]
- Added a voicemail notification popup when receiving a new voicemail message or after reboot/reset if there are new(or not played) voicemail messages [[VM notification](#)]

Firmware Version 1.0.5.67

- No major changes.

Firmware Version 1.0.5.48

- No major changes.
- This is the initial version for GRP2624/GRP2634.

Firmware Version 1.0.5.45

- No major changes.

Firmware Version 1.0.5.44

- No major changes.

Firmware Version 1.0.5.36

- Added support for a power-saving feature of turning off the LCD display automatically according to a configurable schedule. [Office Hours]
- Added support for a power-saving feature of turning off the LCD display automatically according to a timer when not during office hours. [Power Saving Timeout]

Firmware Version 1.0.5.33

- Extended the amount of text that can be displayed on the Extension label.
- Added support for disabling the feature of selecting an account from LCD. [[Multiple SIP Accounts and Lines](#)]

Firmware Version 1.0.5.15

- Added ability to configure Headset TX/RX gain on LCD. [Audio]

Firmware Version 1.0.3.6

- No major change.

Firmware Version 1.0.1.23

- No major change.

Firmware Version 1.0.1.17

- No major change.

Firmware Version 1.0.1.7

- Added support for GRP2616.
- Added support for GRP2615.
- Added support of Bluetooth handsfree feature. [[Bluetooth](#)]
- Improved Features of blocklist and allowlist in Contact. [[Block/Allow Listing](#)]

Firmware Version 1.0.0.31

- Added support for more MPK/VPK modes [[VIRTUAL MULTI-PURPOSE KEYS](#)]
- UCM conference room updates [[UCM CONFERENCE](#)]

Firmware Version 1.0.0.16

- This is the initial version for GRP261X.

EXPERIENCING

GRP261X/GRP2624/GRP263x/GRP2670/GRP2650

Please visit our website: <https://www.grandstream.com> to receive the most up-to-date updates on firmware releases, additional features, FAQs, documentation, and news on new products.

We encourage you to browse our product-related documentation, FAQ, and User and Developer Forum for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all your questions. Contact a technical support member or submit a trouble ticket online to receive in-depth support.

Thank you again for purchasing the Grandstream IP phone, it will be sure to bring convenience and color to both your business and personal life

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this guide, could void your manufacturer warranty.

Please do not use a different power adaptor with devices as it may cause damage to the products and void the manufacturer warranty

GNU GPL Information

GRP261X/GRP2624/GRP2634/GRP2670/GRP2650 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license. Grandstream GNU GPL-related source code can be downloaded from the Grandstream website from: https://www.grandstream.com/hubfs/Product_Documentation/GRP261X/GRP2624/GRP2634_gnu_gpl.zip

U.S. FCC Part 68 Regulatory Information

This equipment complies with Part 68 of the FCC rules. Located on the equipment is a label that contains, among other information, the ACTA registration number and ringer equivalence number (REN). If requested, this information must be provided to the telephone company.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive REN's on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total REN's contact the telephone company to determine the maximum REN for the calling area.

This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact (Agent in the US):

Company Name: Grandstream Networks, Inc.

Address: 126 Brookline Ave, 3rd Floor Boston, MA 02215, USA

Tel: 1-617-5669300

If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

This equipment uses the following USOC jacks: RJ45C.

It is recommended that the customer install an AC surge arrester in the AC outlet to which this device is connected. This is to avoid damaging the equipment caused by local lightning strikes and other electrical surges.

Since this device has the HAC function, the earpiece is easy to absorb small, please take care to avoid scratching.

U.S. FCC Part 15 Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Directive 2014/53/EU Regulatory Information

This applies to GRP2612W/GRP2614/GRP2615/GRP2616 only

Operating Frequency Band (RF)	Max Power	
2402-2480MHz (TX&RX)	BT-EDR	8.15dBm
2402-2480MHz (TX&RX)	BT-BLE	7.21dBm
2402-2480MHz (TX&RX)	802.11b	18.15dBm
	802.11g	18.42dBm
	802.11n-20	19.06dBm
2402-2480MHz (TX&RX)	802.11a	19.28dBm
	802.11n-20	18.78dBm
	802.11n-40	19.10dBm
	802.11ac20	18.89dBm
	802.11ac40	18.66dBm
	802.11ac80	15.80dBm
5250-5350MHz (TX&RX)	802.11a	18.63dBm
	802.11n-20	18.60dBm
	802.11n-40	18.93dBm
	802.11ac20	18.59dBm
	802.11ac40	18.38dBm
	802.11ac80	15.85dBm
5470-5725MHz (TX&RX)	802.11a	18.19dBm
	802.11n-20	18.32dBm
	802.11n-40	18.34dBm
	802.11ac20	18.44dBm
	802.11ac40	17.72dBm
	802.11ac80	15.45dBm

Caution: Exposure to Radio Frequency Radiation

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

U.S. FCC Part 15 Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

U.S. FCC Part 68 Regulatory Information

This equipment complies with Part 68 of the FCC rules. Located on the equipment is a label that contains, among other information, the ACTA registration number and ringer equivalence number (REN.) If requested, this information must be provided to the telephone company.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive REN's on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the REN's should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total REN's contact the telephone company to determine the maximum REN for the calling area.

This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

This equipment uses the following USOC jacks: RJ45C.

It is recommended that the customer install an AC surge arrester in the AC outlet to which this device is connected. This is to avoid damaging the equipment caused by local lightening strikes and other electrical surges.

Terminal equipment

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

Ce produit repond a la innovation, des sciences et de Developpement economique Canada specifications techniques applicables.

Le nombre equivalent de sonneries (REN) indique le nombre maximal de terminaux qui peuvent etre raccordes a une interface telephonique. La terminaison d'une interface peut consister en une combinaison de dispositifs, a la seule condition que la somme des REN de tous les dispositifs ne depasse pas cinq.

CAN ICES-003 (B) / NMB-003(B)

If trouble is experienced with this equipment, please contact (Agent in the US):

Company Name: Grandstream Networks, Inc.

Address: 126 Brookline Ave., 3rd Floor Boston, MA 02215, USA

Tel: 1-617-5669300

CE Authentication



BE	BG	CZ	DK	DE	EE	IE	EL	LI
ES	FR	HR	IT	CY	LV	LT	LU	CH
HU	MT	NL	AT	PL	PT	RO	SI	TR
SK	FI	SE	NO	IS	UK	UK(NI)		

In the UK and EU member states, operation of 5150-5350 MHz is restricted to indoor use only.

Hereby, Grandstream Networks, Inc. declares that the radio equipment GRP2612W, GRP2614, GRP2615 and GRP2616 are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.grandstream.com/support/resources/>

Copyright

(C)2024 Grandstream Networks, Inc. <https://www.grandstream.com>

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

Grandstream is a registered trademark and the Grandstream logo is the trademark of Grandstream Networks, Inc. in the United States, Europe, and other countries.
